

Tools Required:

Screwdriver
Pliers
Adjustable Wrench

Optional:

Handle Puller

Faucet Cartridge**Installation Instructions:**

1. Turn off water supply and open faucet to relieve pressure.
2. Remove the handle from the cartridge.
Metal Handle: Remove set screw.
Acrylic Handle: Pry off index button, and remove screw.
Remove handle by lifting off cartridge. (Use handle puller if needed.)
3. Remove the cartridge: unscrew or pull the cartridge to remove.
4. Insert the cartridge in the same orientation as the old one.
5. Reinstall the handle.
6. Turn on the water supply and check for leaks.

Note: All images are for illustration purposes only.
Actual product and faucet components may vary.

**Faucet Cartridge with Seats and Springs****Installation Instructions:**

1. Turn off water supply and open faucet to relieve pressure.
2. Remove the handle from the cartridge. (Use handle puller if needed.)
3. Remove the cartridge: unscrew or pull the cartridge to remove.
4. Remove the seats and springs from the cavity on the base of the faucet body, and clean the cavities.
6. Reinstall the new springs and seats.
7. Insert the cartridge in the same orientation as the old one.
8. Reinstall the handle.
9. Turn on the water supply and check for leaks.

Note: All images are for illustration purposes only.
Actual product and faucet components may vary.

