 


HAMPTON BAY[®]

USE AND CARE GUIDE

POLE LIGHT WITH 2 SPOT LIGHTS ADJUSTABLE 28-42"

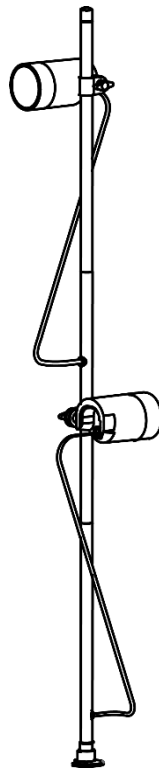

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this POLE LIGHT WITH 2 SPOT LIGHTS ADJUSTABLE 28-42". We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2	Installation	4
Warranty	2	Installation (Continue)	5
What is Covered	2	Care and Cleaning	5
What is Not Covered	2	Troubleshooting	5
Pre-installation	3	Cable Selection	6
Package Contents	3		

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration or faulty installation, or any failure not relating to faulty material or workmanship. The warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense cost involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www. Hamptonbay.com](http://www.Hamptonbay.com).

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Pre-installation

PACKAGE CONTENTS

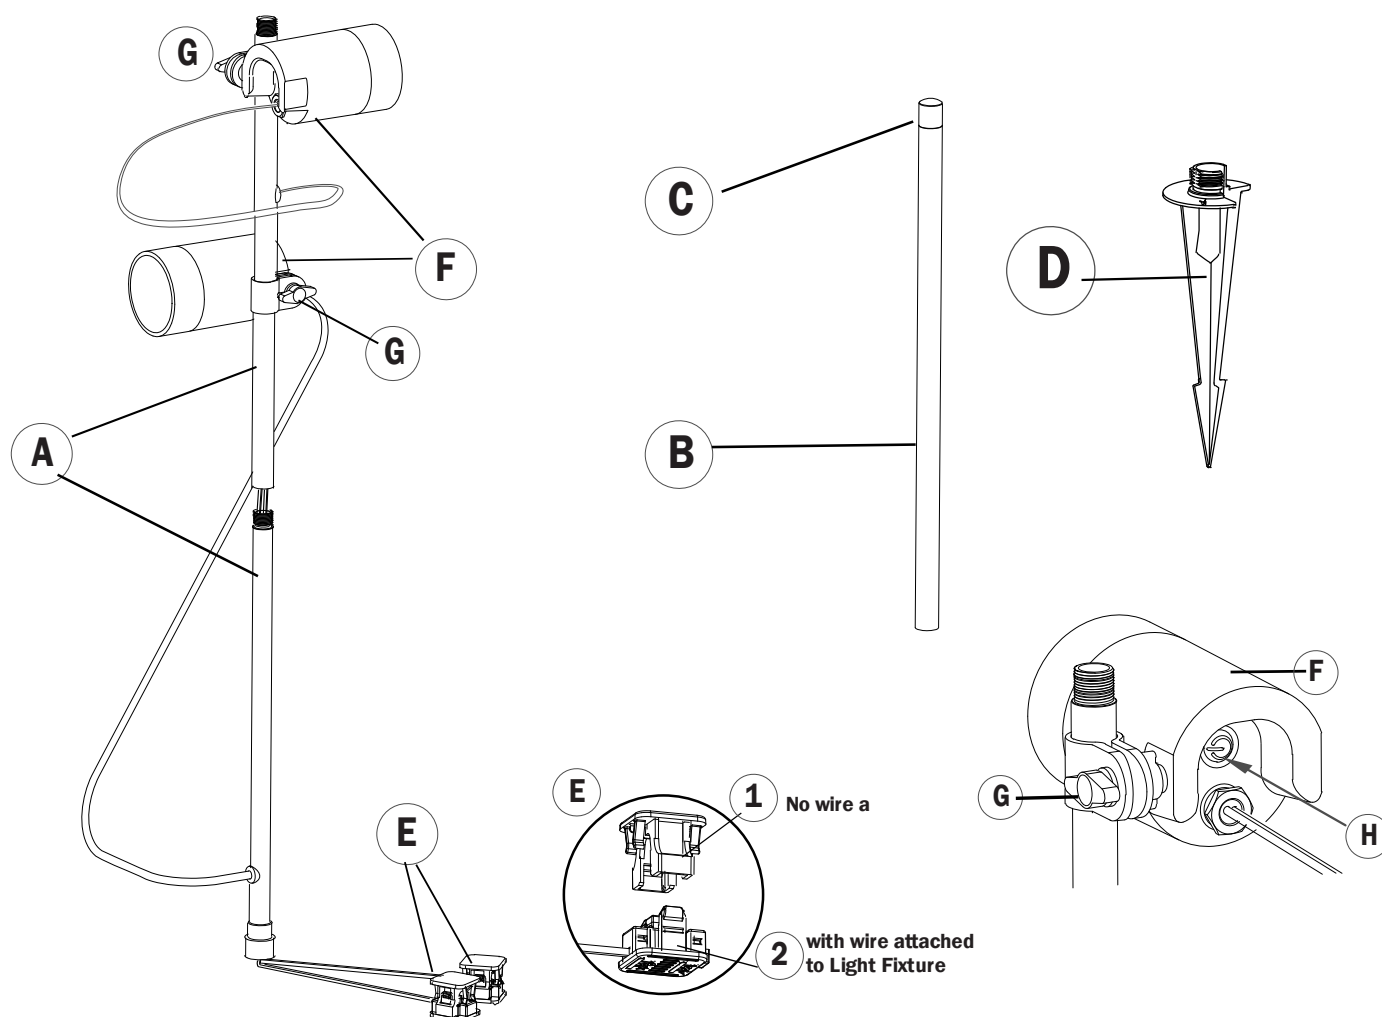


Part	Description	Quantity
A	Bottom Pole (2 sections)	1
B	Top Pole	1
C	Pole Cap (may attached to C)	1
D	Ground Spike	1
E 1	Wire Connector – for wire to transformer	2
E 2	Wire Connector – Attached to fixture	2
F	Spot Light	2
G	Fixture Bracket with Knob	2
H	CCT Button	2

Installation

1 Attaching and installing the fixture

 - Unpack the package and make sure there are not any missing parts.
- Connect the Bottom Pole (A) by matching 2 poles end and screw tight of the 2 sections together, make sure not to tangle the light fixture wires together.
- For 42 Inches pole - connect Top Pole (B) and Pole Cap (C) to the top of (A)
- For 28 Inches Pole – Remove Pole cap (C) from Top Pole (B) and Screw it to the top of Bottom Pole (A)
- Attached the Ground Spike (D) to the bottom of Bottom Pole (A)
- Hold the light fixture by the base of the Ground Spike (D) and gently push the spike into the ground. The flat base of the spike should be at ground level when finished and the spike should be vertical. In rocky or hard packed dirt, use a small shovel to dig up rocks and loosen the soil. Place the Ground Spike (D) in the ground and pack the dirt in and around it to secure it.

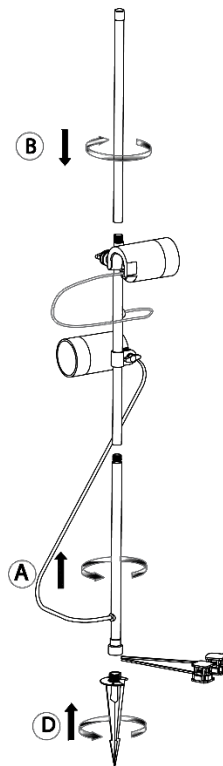

DANGER: Risk of electric shock do not install the light within 10 ft. (3.05 m) of a pool, spa or fountain.



Note: Do not use a hammer. If the ground is hard, use water to soften it or a trowel to loosen the soil.

2 Connecting the wires



WARNING: The Wire Connector (E2) has sharp edges for piercing the main low voltage cable. To avoid injury, do not touch the metal contacts

 
 


CAUTION: The wire from the low voltage power unit shall be 12-16 AWG type underground Low Energy Circuit Cable






IMPORTANT: Protect the wiring by routing it in close proximity to the light or next to a building structure such as a house or deck. Do not bury the wiring by more than 6in. (15.24cm) in order to connect to the main secondary wire

- Unlock the connector (E1 & E2) by pushing in from both sides and lift.
- Align and fit the low voltage landscape wire (not included) from the transformer (not included) horizontally into the center slot of the wire connector for landscape wire (E1) by unlocking the connector (E1 & E2) by pushing in from both sides and lift.

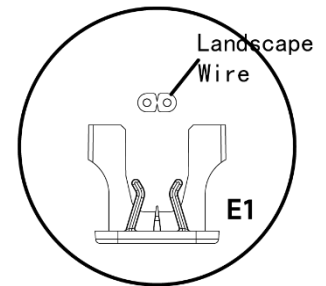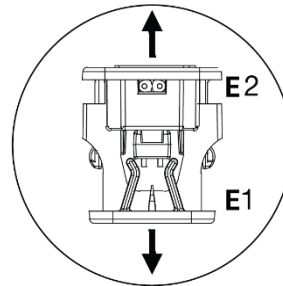


- Push down the wire from the transformer (not include) to make sure the wire is secure in the slot of the wire connector (E1) for landscape wire and laid flat as shown in the picture below.
- Press the wire connectors (E1 & E2) back together until they lock and there is no gap between the two connectors (E1 & E2).
- Once the connectors are in place, it is recommended to wrap them with electric tape (not included).
- After the fixture is installed, turn on the transformer.

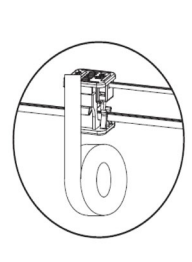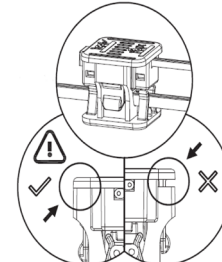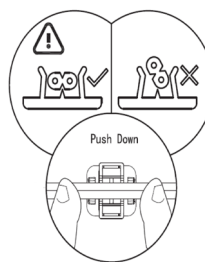   

Installation


3 Adjusting the Light Direction

 - Loosing the Fixture Bracket with knob (G) by untight the knob but still attached to the Spot Light (F) (It is not necessary to unscrew the knob off the bracket)
- Rotate the lever front and back by both hands to adjust the light direction up and down and rotate around. Tighten the Knob (G) to secure the final position.

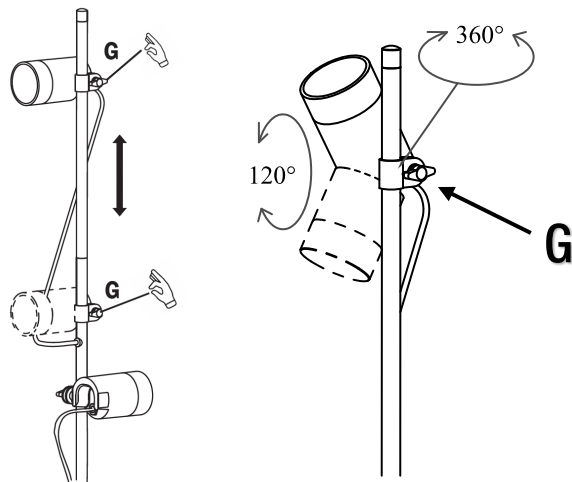

4 Adjusting the temperature of the Light

 - Choose your favorite correlated color temperature (CCT) from the 3 options: 2700K warm white, 3000K soft white and 4000K bright white.
- Push the CCT button (H) to switch between warm white, soft white and bright white to make your selection.

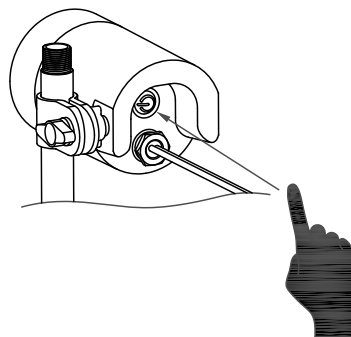

Switch Options:
2700K Warm White
3000K Soft White
4000K Bright White



NOTE: The factory setting for the correlate color temperature (CCT) is 3000K Soft White

Care and Cleaning

- Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.
- To clean the fixture, use a dry or slightly dampened clean cloth.
- Do not use cleaners with chemicals, solvents, or harsh abrasives, as damage to the fixture may occur.

Troubleshooting

Problem	Possible Cause	Solution
The lights do not turn on.	- There is no power. - There is a disconnection or break in the wire. - The transformer setting is incorrect	- Check the outlet and ensure that a breaker or GFCI circuit has not been tripped. - Follow the wires from the fixture and ensure a continuous connected path back to the transformer. - Check the settings on the transformer.
The lights flicker.	There is a loose wire connector to the fixture.	Tighten the wire connector and ensure the metal contacts pierce the insulation on the low voltage cable from the transformer.
The lights flicker (all fixtures).	There is a loose connection at the transformer.	Unplug the transformer from the outlet and visually inspect the positive and negative connecting posts. Each wire should be securely screwed in and not in contact with any other.

Cable Selection

12 VOLT TAP	Cable Length		
Total Fixture Wattage	0-50 feet	51-100 feet	101-150 feet
0-60 Watts	16 AWG	16 AWG	16 AWG
61-120 Watts	16 AWG	14 AWG	12 AWG
121-180 Watts	14 AWG	12 AWG	Not recommended
181-240 Watts	14 AWG	12 AWG	Not recommended
241-300 Watts	12 AWG	Not recommended	Not recommended
600W Transformer = (2x300) Watts	12 AWG	Not recommended	Not recommended
900W Transformer = (3x300) Watts	12 AWG	Not recommended	Not recommended

15 VOLT TAP	Cable Length		
Total Fixture Wattage	0-50 feet	51-100 feet	101-150 feet
0-60 Watts	16 AWG	16 AWG	16 AWG
61-120 Watts	16 AWG	16 AWG	12 AWG
121-180 Watts	14 AWG	14 AWG	12 AWG
181-240 Watts	14 AWG	14 AWG	12 AWG
241-300 Watts	12 AWG	12 AWG	Not recommended
600W Transformer = (2x300) Watts	12 AWG	12 AWG	Not recommended
900W Transformer = (3x300) Watts	12 AWG	12 AWG	Not recommended



NOTE: This data is provided as a general guideline. Actual performance will depend on the installation layout, the fixtures, and the condition of the cable. NOTE: Most LED landscape lighting fixtures can operate with full illumination from 9V down to as little as 6V. It is possible to have extended length runs with LED fixtures that go beyond the specifications shown in the guidelines above. Additional landscape lighting cable can be purchased at your local Home Depot store.

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use