 


USE AND CARE GUIDE

Door or Window Alarm

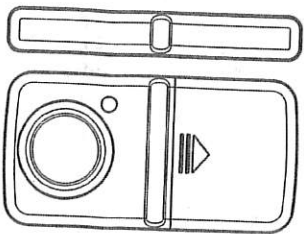

THANK YOU
We appreciate the trust and confidence you have placed in Defiant through the purchase of this Door or Window Alarm. We strive to provide you with the highest quality products designed to enhance your home. Visit us online to see our full line of products and services available for your home improvement needs. Thank you for choosing Defiant!

Warranty

1 YEAR LIMITED WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 844-212-0200 for repair or replacement parts or return the product to the store from which it was purchased.

Warranty does not include normal wear and tear, bulbs or batteries. Contact the Customer Service Team or visit www.HOMEDEPOT.COM.

DEFIANT®

Questions, problems, missing parts? Before returning to the store, call Customer Service
8 a.m. - 4:30 p.m., CST, Monday - Friday

844-212-0200
HOMEDEPOT.COM

Safety Information

Save these instructions for future use.

WARNING: Any battery may leak harmful chemicals which may damage skin, clothing or the inside of the alarm.
TO AVOID RISK OF INJURY, DO NOT LET ANY MATERIAL LEANED FROM A BATTERY COME IN CONTACT WITH EYES OR SKIN. Any battery may rupture or explode if put in a fire or otherwise exposed to excessive heat.
TO AVOID RISK OF INJURY, DO NOT EXPOSE BATTERIES TO EXCESSIVE HEAT.



To reduce the risk of personal injury or harm to your alarm, take the following precautions:

- Do not use different brands of batteries in the same alarm
- When replacing batteries always replace the whole set
- Do not use rechargeable or reusable batteries
- Do not allow children to install batteries unsupervised
- Follow battery manufacturer's instructions as to proper handling, storage and disposal of batteries

WARNING: FOR INDOOR USE ONLY. RISK OF PERSONAL INJURY. PROLONGED EXPOSURE TO ALARM SIREN MAY CAUSE PERMANENT HEARING LOSS. THIS PRODUCT CANNOT BE LINKED TO A MONITORED SECURITY SYSTEM. THE SECURITY FEATURE IS EXCLUSIVELY THE 1200B ALARM SOUND. DEFiant IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, VANDALISM, THEFT OR OTHER ACTIONS THAT MAY OCCUR WHILE THIS PRODUCT IS IN USE.



Installation and Operation

1 Installing and replacing batteries

- Slide the battery compartment cover off.
 - Upon initial use, carefully remove the clear plastic insulation tab from the batteries. If the batteries are dislodged, replace them noting the polarity diagram inside the battery compartment. If replacing batteries, replace with 4 LR44 alkaline batteries.
 - Replace the battery compartment cover.
- It is recommended that the alarm power is regularly tested by pressing the  button in the battery compartment. If the light illuminates, the batteries are in good condition. If it fails to illuminate, replace all batteries.

2 Installing the alarm and sensor

- Clean the surfaces you want to mount the alarm on using cleaning alcohol or similar. Ensure the surfaces are completely clean and dry before proceeding.
- Use the double-sided tape (B) to mount the alarm and magnetic sensor on the door or window to be protected, placing one of the units on the part of the fixture which opens and the other on the stationary part of the fixture (frame).
- Ensure that when the door or window is closed, the dots on the alarm and magnet are aligned with less than 15 mm between them.

Installation and Operation (continued)

3 Set the alarm to alarm mode (••)


- Toggle the  /  switch to the (••) position. When the door or window opens (causing the alarm and magnet to separate by more than 15 mm), the alarm will sound continuously until the door or window is shut or the unit is disarmed.

4 Setting the alarm to chime mode (•)

- Toggle the  /  switch to the (•) position. When the door or window is opened (causing the alarm and magnet to separate by more than 15 mm), the chime will sound.

5 Disarming the unit (•)

- Toggle the  /  switch to the (•) position. When the door or window is opened (causing the alarm and magnet to separate by more than 15 mm), the unit will make no sound.

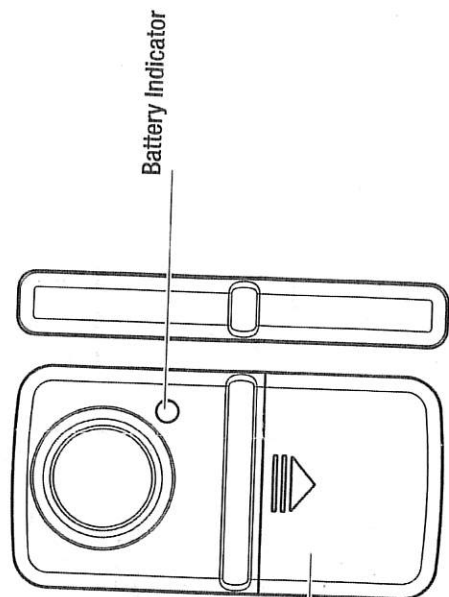


Battery Indicator

Battery Compartment

PRODUCT DESCRIPTION

The door or window alarm is designed to sound an intruder alarm or visitor chime when a door or window is opened. Toggle the switch in the battery compartment between the different modes or switch off when not required.


PACKAGE CONTENTS

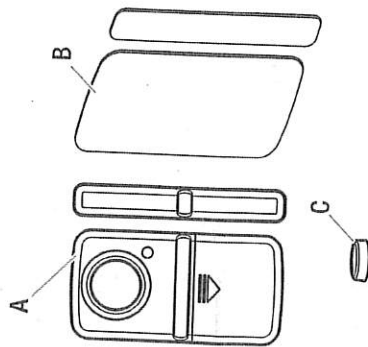

Part	Description	Quantity
A	Magnetic window/door alarm	1
B	Double-sided mounting tape set	1
C	LR44 Alkaline battery	4

GUÍA DE USO Y CUIDADO

 Alarma de puerta o ventana

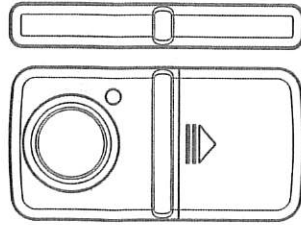

GRACIAS
Agradecemos la confianza que ha puesto en Defiant a través de la compra de esta alarma para puerta o ventana. Nos esforzamos por crear continuamente productos de calidad diseñados para mejorar su hogar. Visitenos en internet para ver nuestra línea completa de productos disponibles para sus necesidades de mejorar su hogar. Gracias por elegir a Defiant.

Garantía

GARANTÍA LIMITADA DE 1 AÑO

El fabricante garantiza este producto como exento de defectos en materiales y mano de obra por 1 año desde la fecha de compra. Si este producto está defectuoso, llame al 844-212-0200 para fines de reparar o conseguir piezas de repuesto o devuelva el producto a la tienda donde lo compró.

Esta garantía no incluye el desgaste y uso normales, bombillas ni baterías. Póngase en contacto con el Equipo de Servicio al Cliente o visite www.HOMEDEPOT.COM.

DEFIANT®

¿Tiene preguntas, problemas o faltan piezas? Antes de regresar a la tienda, llame a Servicio al Cliente
Lunes a Viernes: 8:00 am - 4:30 pm - hora central (CST)

844-212-0200
HOMEDEPOT.COM

Información de seguridad

Conservar estas instrucciones para uso futuro.

ADVERTENCIA: De cualquier batería se pueden fugar productos químicos dañinos que pueden dañar la piel, la ropa y el interior de la alarma.

PARA EVITAR EL RIESGO DE LESIONES, NO DEJE QUE NINGÚN MATERIAL QUE FUGUE DE UNA BATERÍA ENTRE EN CONTACTO CON LOS OJOS O LA PIEL. Cualquier batería puede romperse o explotar si se coloca en un fuego o se expone de otra manera al calor excesivo.

PARA EVITAR EL RIESGO DE LESIONES, NO EXPONGA LAS BATERÍAS AL CALOR EXCESIVO.

Para reducir el riesgo de lesiones personales o daños a su alarma, siga las siguientes precauciones:

- No use marcas diferentes de baterías en la misma alarma.
- Cuando cambie las baterías siempre cambie el juego completo.
- No use baterías recargables ni reutilizables.
- No permita que los niños instalen las baterías sin supervisión.
- Siga las instrucciones del fabricante de las baterías en cuanto a la manipulación, almacenamiento y eliminación apropiados.

ADVERTENCIA: ÚNICAMENTE PARA USO EN INTERIORES.
RIESGO DE LESIONES PERSONALES. LA EXPOSICIÓN PROLONGADA A LA SIRENA DE LA ALARMA PUEDE CAUSAR PERDIDA PERMANENTE DE LA AUDICIÓN. ESTE PRODUCTO NO SE PUEDE CONECTAR A UN SISTEMA DE SEGURIDAD MONITOREADO. LA CARACTERÍSTICA DE SEGURIDAD ES EXCLUSIVAMENTE EL SONIDO DE LA ALARMA 120DB. DEFANT NO SE HACE RESPONSABLE DE NINGÚN DAÑO, VANDALISMO, ROBO U OTRAS ACCIONES QUE PUEDAN OCURRIR MIENTRAS EL PRODUCTO ESTÁ EN USO.

Instalación y operación

1 Instalación y reemplazo de baterías

- Deslice la tapa del compartimiento de la batería.
- Al momento del primer uso, retire cuidadosamente la lengüeta aislante de plástico transparente de las baterías. Si las baterías se han extraído, reemplácelas observando el diagrama de polaridad dentro del compartimiento de las baterías. Si reemplaza baterías, reemplácelas con baterías alcalinas 4 LR44.
- Vuelva a colocar la cubierta del compartimiento de las baterías.

Se recomienda que se ponga a prueba regularmente la potencia de la alarma presionando el botón de prueba de la batería  en el compartimiento de las baterías. Si la luz se enciende, las baterías están en buenas condiciones. Si no se enciende, reemplácelas todas las baterías.

2 Instalación de la alarma y el sensor

- Limpie las superficies sobre las que desea montar la alarma usando alcohol de limpieza o algo similar. Asegúrese de que las superficies estén completamente limpias y secas antes de proceder.
- Utilice la cinta de doble cara (B) para montar la alarma y el sensor magnético en la puerta o ventana a proteger, colocando una de las unidades en la parte del elemento que se abre y la otra en la parte estacionaria del elemento (marco).
- Asegúrese de que cuando la puerta o ventana se cierran, las puntas de la alarma y el imán estén alineadas con menos de 15 mm de separación entre ellos.

Instalación y operación (continuación)

3 Ajuste la alarma en el modo de alarma (••)

- Mueva el interruptor  /  a la posición de (••). Cuando la puerta o ventana se abran (provocando que la alarma y el imán se separen más de 15 mm), la alarma sonará de forma continua hasta que la puerta o ventana se cierran o la unidad se desarme.

4 Ajuste de la alarma a modo Chime

- Mueva el interruptor  /  a la posición de . Cuando la puerta o ventana se abran (provocando que la alarma y el imán se separen más de 15 mm), el timbre (chime) sonará.


5 Desarme de la unidad

- Mueva el interruptor  /  a la posición . Cuando la puerta o ventana se abran (provocando que la alarma y el imán se separen más de 15 mm), la unidad no hará ningún sonido.


DESCRIPCIÓN DEL PRODUCTO

La alarma de puerta o ventana está diseñada para que suene una alarma de intrusión o timbre de visitante cuando se abra una puerta o ventana. Mueva el interruptor en el compartimiento de la batería entre los diferentes modos o apáguelo cuando no lo necesite.

CONTENIDO DEL PAQUETE

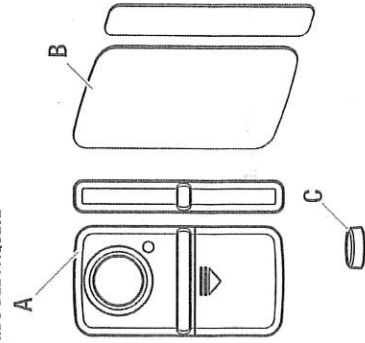


Pieza	Descripción	Cantidad
A	Alarma magnética de ventana/puerta	1
B	Juego de cinta de montaje de doble cara	1
C	Batería alcalina LR44	4

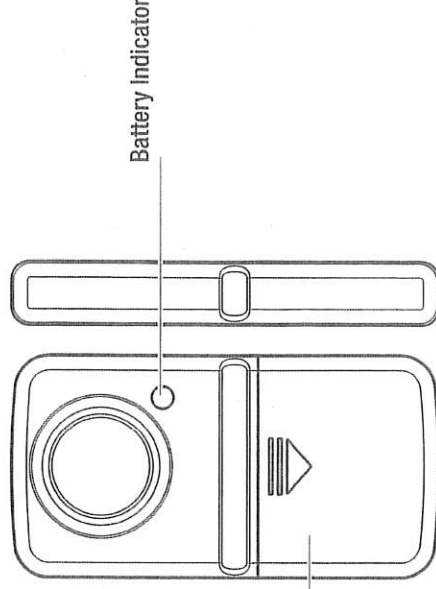

Battery Compartment

Battery Indicator

 Home, Shed and Garage Alarm



1 YEAR LIMITED WARRANTY

Warranty does not include normal wear and tear, bulbs or batteries. Contact the Customer Service Team or visit www.HOMEDEPOT.com.

Questions, problems, missing parts? Before returning to the store, call Customer Service
8 a.m. - 4:30 p.m., CST, Monday - Friday

844-212-0200
HOMEDEPOT.COM

Save these instructions for future use.

WARNING: For indoor use only. Do not use in wet locations.

WARNING: Any battery may leak harmful chemicals which may damage skin, clothing or the inside of the alarm. TO AVOID RISK OF INJURY, DO NOT LET ANY MATERIAL LEANED FROM A BATTERY COME IN CONTACT WITH EYES OR SKIN. Any battery may rupture or explode if put in a fire or otherwise exposed to excessive heat. TO AVOID RISK OF INJURY, DO NOT EXPOSE BATTERIES TO EXCESSIVE HEAT. To reduce the risk of personal injury or harm to your alarm, take the following

☐ Do not use different brands of batteries in the same alarm.

☐ When replacing batteries always replace the whole set.

☐ Do not use rechargeable or removable batteries.

☐ Do not allow children to install batteries unsupervised.

☐ Follow battery manufacturer's instructions as to proper use of batteries.

THIS PRODUCT CANNOT BE LINKED TO A MONITORED SECURITY SYSTEM. THE SECURITY FEATURE IS EXCLUSIVELY THE 120DB ALARM SOUND. DEFANT IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, VANDALISM, THEFT OR OTHER ACTIONS THAT MAY OCCUR WHILE THIS PRODUCT IS IN USE.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class II digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If interference is determined to be caused by this equipment, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

Part	Description	Qty.
A	Alarm	1
B	Double Sided Tape	1
C	Screw	3
D	Wall Anchor	3
E	Magnet	1

1 Creating a personal alarm code

☐ Replace the battery compartment cover and secure the screw.

confirmation
brief

In AI-RBM mode the device reproduces a second alarm sound when a new high-volume alarm sound is received.

☐ There will be a 45 second exit delay before the unit is armed. The alarm's three times.

indicator light will flash red quickly, alerting you that the unit has been activated and has begun the 45 second count down. The delay allows time for you to leave the protected area without triggering the alarm. When returning the protected area, there is a 30 second delay to allow time to enter the 4-digit code before alarm will sound.


LIMITATIONS OF ALARM PRODUCTS

[illegible]

1 Installing the batteries

☐ Replace the battery compartment cover and secure the screw.

NOTE: The alarm has a low battery indicator light. When the batteries need to be replaced, the indicator light will flash slowly.

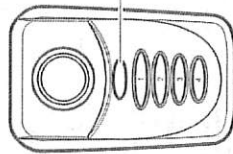

Indicator light

2 Installing the alarm


☐ Select a dry and interior location for the album such as a door or door frame. Use either the provided screws (C) and wall anchors (D) (for permanent mounting) or the double-sided tape (B) (for temporary mounting). The recommended location is the back of the door, with the magnet (E) mounted to the fixed door frame.

 **NOTE:** Mounting the alarm to the door ensures that the alarm will not be damaged by opening and closing the door. The magnet may be mounted to either side of the alarm as long as the alarm is kept in the closed position.

IMPORTANT: Whether mounting to the floor or the door frame, the gap distance between the alarm (A) and the magnet (B) must be no more than 12 mm/0.4 in. (approximately a 1/4 in. gap).

□ **Screw and anchor installation:** Measure and mark the locations of the screws for the alarm and the magnet. Line up the arrows of the alarm (A), or the magnet (E). Ensure the distance between the two pieces is 12 mm (0.4 in.) or less. To test the gap distance, turn the ALARM/CHIME switch to CHIME and open the door. If it does not stand, move either the alarm or magnet closer. Secure the position of the alarm (A) and the magnet (E) once they work correctly in combination.

Double-sided tape installation: Ensure the mounting surface is clean and dry. Use the double-sided tape (B) to lightly attach the magnet (E) and the alarm (A) to the desired mounting surface. Ensure the distances are correct between the alarm (A) and magnet (E) as previously described. When the distances are correct and the chime works, secure the alarm and magnet into position.

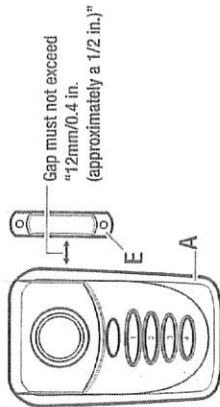

Gap must not exceed
"12mm/0.4 in.
(approximately a 1/2 in.)"

3 Disarming the alarm

☐ Enter the 4-digit User Access Code. The alarm will beep as each digit is entered. Two beeps will indicate that the User Access Code is correct and the system has been disarmed. If an incorrect code is entered, the unit will sound a louder beep. Enter the correct code anytime after the alarm has sounded to deactivate.

CHIME mode is used for lower security situations and produces a door chime sound when activated.

- ☐ To activate CHIME mode, slide the mode selector switch located in the battery compartment to the CHIME position.
- ☐ Enter the 4-digit User Access Code. The alarm will beep as each digit is entered.
- ☐ A door chime will indicate that the User Access Code is correct and the system has armed.
- ☐ The alarm will produce a door chime sound each time the door is opened and the magnet is moved away from the alarm.
- ☐ To deactivate the chime, slide the ALARM/CHIME switch to ALARM mode.

It is recommended that the alarm is tested immediately after installation and at regular intervals not exceeding 1 month.

NOTE: A cloth can be used to cover the siren and reduce the sound output of the alarm during testing.