


SKU No.	Model No.	Finish
1007538691	4512721 C	Polished Chrome
1007538693	4512721 B	Brushed Nickel
1007538695	4512721 O	Matte Black
1007538699	4512721 P	Mette Gold

INSTALLATION AND CARE GUIDE

4 IN. CENTERSET 2-HANDLE BATHROOM FAUCET

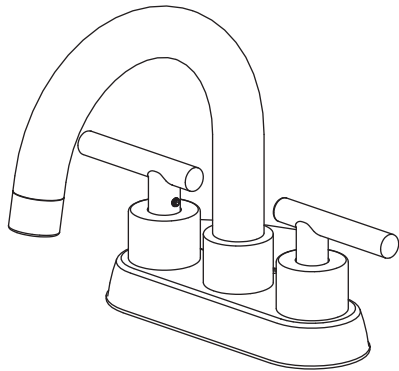

Questions, problems, missing parts? Before returning to the store,
call **Homedepot** Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday

1-855-434-5224

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Homedepot through the purchase of this two handle lavatory faucet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Homedepot !

Table of Contents

Warranty	2
Pre-Installation	2
Package Contents	3
Installation	4
Troubleshooting	6
Maintenance	6
Care and Cleaning	6
Service Parts	7

Warranty

LIFETIME LIMITED WARRANTY

The manufacturer warrants to the original purchaser that this faucet will be leak and drip free during normal domestic use. If this faucet should ever develop a leak, the manufacturer will provide the parts necessary to put the faucet back in good working condition. The manufacturer warrants to the original purchaser that the faucet will be free from defects in material and workmanship for one (1) year from date of purchase. A replacement for any defective part will be supplied free of charge for installation by the purchaser. Defects of other than authorized parts are not covered by this warranty. This warranty shall be effective from date of purchase as shown on the purchaser's receipt. Some states do not allow limitations on how long a warranty lasts, so the above limitation may not apply to you. This warranty is valid for the original purchaser only and excludes industrial, commercial, or business use of the product, product misuse, product damage due to installation error, whether performed by a contractor, service company, or yourself. Some states, provinces and nations do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that may vary from state to state, province to province, and nation to nation.

Contact the Customer Service Team at 1-800-855-434-5224 or visit www.HOMEDEPOT.com.

Pre-Installation

PLANNING INSTALLATION


Before you begin to install this product, ensure that all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to install the product. Contact customer service for replacement parts.

TOOLS REQUIRED



Pre-Installation (continued)

PACKAGE CONTENTS

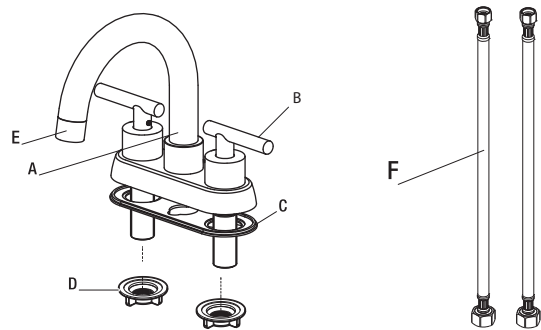

Part	Description	Quantity
A	Faucet	1
B	Handle	2
C	Base plate	1
D	Mounting nut	2
E	Aerator	1
F	Inlet Hose	2


Installation

1 Removing the old faucet




CAUTION: Always turn off the water supply before removing an existing faucet or replacing any part of the faucet. Open the faucet handle to relieve water pressure and ensure that the water is completely shut off.

- ❑ Shut off all water supply lines.
- ❑ Remove the old faucet and clean off the installation surface on the sink.

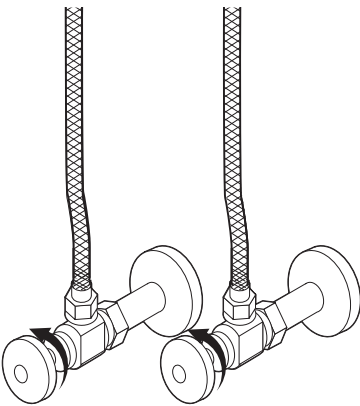

2 Installing the faucet


- ❑ Place the base plate (C) on the bottom of the faucet (A).
- ❑ Place the faucet (A) through the mounting holes on the sink.
- ❑ Attach the faucet (A) to the sink by securing the mounting nuts (D) on the threaded ends of the faucet (A) underneath the sink.

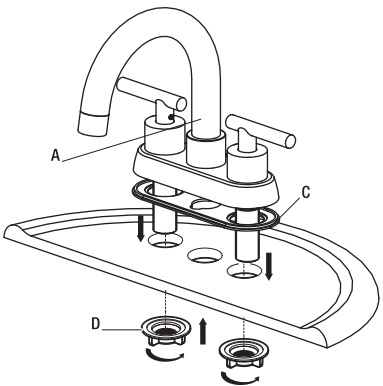


Installation (Continued)

3 Connecting the water supply lines

- Make connections to the water lines. Use ½ in. IPS faucet connections or use the supplied coupling nuts with 3/8 in. o.d. ball-nose risers.
- Use wrenches to tighten the connections. Do not overtighten.

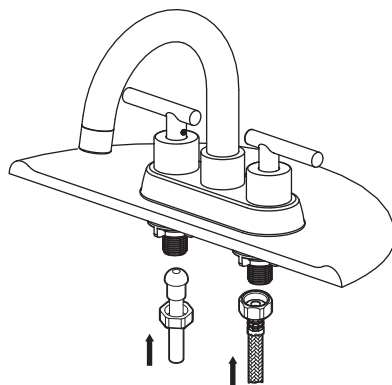


4 Connecting the water supply lines

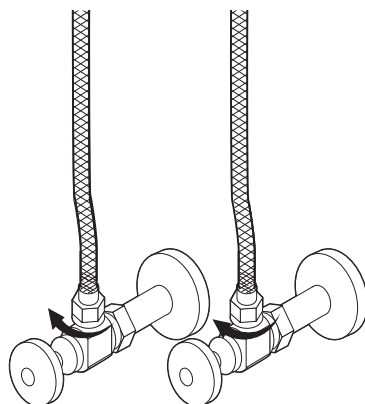

Installation (Continued)

5 Checking for leaks

- Remove the aerator (E) from the faucet (A).
- Turn on the water supply.
- Turn the handles (B) and allow both hot and cold water to run for at least one minute each.
- While water is running, check for leaks. Replace the aerator (E).

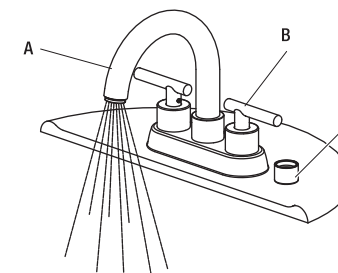


Troubleshooting

6 Installtion Complete



NOTE: Refer to the service parts section in this manual for a detailed drawing showing the location of the parts listed below.

Problem	Possible Cause	Solution
There are leaks from the handle.	The bonnet nut has come loose and/or the washer is dirty or damaged.	□ Tighten the bonnet nut. □ Clean or replace the washer.
The aerator has an irregular or reduced water flow.	The aerator is dirty or mis-fitted.	□ Remove the aerator and check for debris. □ Ensure that the rubber washer is properly installed.
The water will not shut off completely.	The cartridge is dirty or broken.	□ Remove the handle to check the cartridge. □ Clean or replace.
There is leaking from the sink drain at the base of the sink.	The sink has a rough or irregular surface.	□ Apply additional silicone sealant to the beveled side of the drain flange. □ Retighten and test for leaks.

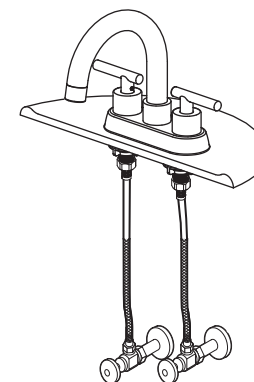


Maintenance

- If the faucet leaks from the spout, shut off the water supplies and replace the cartridge. Ensure that you install the cartridge correctly for proper handle rotation.

Care and Cleaning

- Preserve the finish of the faucet by applying a non-abrasive wax. Any cleaners should be rinsed off immediately.
- Do not use any harsh abrasives or cleaners.

Service Parts

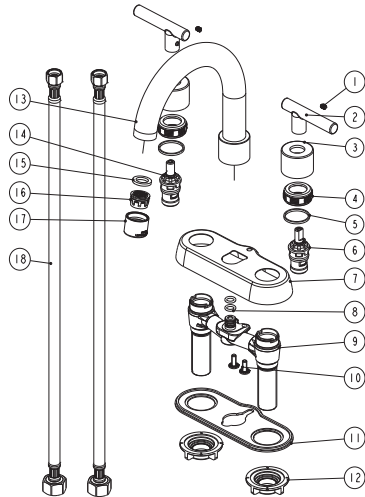

No.	Description	QTY
1	Screw	2
2	Handle	2
3	Handle Base	2
4	Cartridge Cap	2
5	Gasket	2
6	Cold Ceramic Cartridge	1
7	Deckplate	1
8	O-Ring	2
9	Waterway	1

No.	Description	QTY
10	Screw	2
11	Deckplate	1
12	Mounting Nut	2
13	Spout	1
14	Hot Ceramic Cartridge	1
15	Gasket	1
16	Aerator Core	1
17	Aerator Cover	1
18	Inlet Hose	2