 


OUTDOOR STAKE TIMER

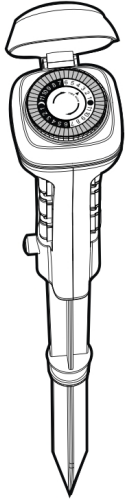

THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this indoor heavy duty timer. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!


Operating Instructions (Continued)

2 Programming ON/OFF times



NOTE: Ensure all segments are pulled up before programming.

- Select a time period (or periods) you want the device turned on.
- Push down ALL the segments (1) that fall on or within that time period. You may need to turn the dial clockwise to access the desired segments.
- Turn the rotating timer dial (2) clockwise until the pointer on the face of the dial points to the current time of day.

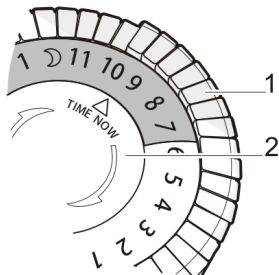

NOTE: Nighttime hours from 6:30PM to 6:30AM are highlighted with a grey background.

Safety Information

**WARNING: RISK OF ELECTRIC SHOCK:**

- Do not exceed electrical ratings
- Unplug timer before cleaning
- Keep children away



CAUTION: DO NOT PLUG IN MORE THAN THE RATED LOAD (SEE RATINGS). Find the total watts being used: If watts are not marked on the appliance, multi ampere rating (on nameplate) by 125 volts to determine equivalent watts. For lamps with multiple bulbs, add the wattage on the bulbs.

**CAUTION:**

- Risk of Fire. Not for permanent installation. Use only with outdoor equipment, Christmas-tree, or other seasonal decorative-lighting products having a total of 15 Amp maximum. Do not install or use this product for more than a 90-day period.
- If using Christmas tree or decorative lighting products that are not marked with an amp rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with push-in lamps to this cordset.
- Cordsets should be plugged into a GFCI - protected receptacle.
- If using an outdoor-use cord set for an extended period of time (greater than 90 days) consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Contact a licensed electrician for proper installation of permanent wiring.
- After installation, connector must be kept a minimum of 6 inches above ground.



NOTE: This is a GROUNDED device. It has a grounded plug and six grounded outlets.

RATINGS TOTAL FOR SIX OUTLETS


125VAC, 60Hz, 15A 1875W Resistive,

125VAC, 60Hz, 15A 1875W Tungsten,

1/2HP


3 Attach up to SIX devices to the timer

Plug the lights or devices to be controlled into the outlets on the sides of the timer.

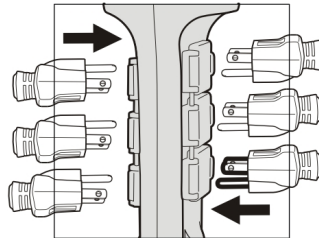

NOTE: Nighttime hours from 6:30PM to 6:30AM are highlighted with a grey background.

Product Description

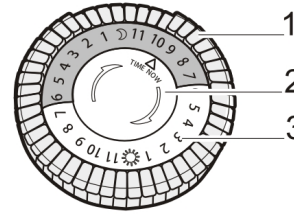

1. **TIMER SEGMENT BUTTONS:** These segments, each representing 30 minutes, can be pushed down from the edge of the dial, and are used to program the timer ON/OFF times.
2. **ROTATING TIMER DIAL:** This dial can only be turned clockwise. It points to the current time of day on the Time Readout.
3. **TIME READOUT:** Displays each hour of the day (night time hours are shown with a shaded background, while daylight hours are shown with white).


Troubleshooting

Problem	Solution
The pins cannot be pushed down	Ensure the pins are not already down or in the "TIME NOW" range (shown on the rotating timer dial).
The device does not turn ON.	Ensure the loads are not exceed the rated load, push the RESET button on the stake timer.
The device turns ON/OFF during the day instead of night (or night instead of day).	Ensure the AM/PM time and program settings are correct.
The device turns ON early or late.	Manually turn the rotating timer dial to cycle the timer ON or OFF at the correct time.


Operating Instructions

1 Installation Instructions


1. Twist the two green ground stake parts together clockwise to make one long stake.

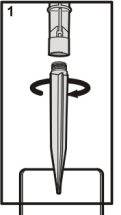

2. Attach the long stake to the bottom of the base of the timer by twisting clockwise.

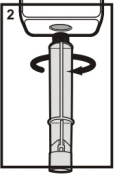

3. Push the stake into the ground leaving 6 inches exposed. Do not use the timer unit itself to insert the stake into the ground.

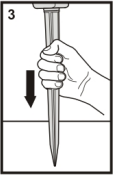

4. Push the timer into an outdoor rated, GFCI protected, grounded outlet.

Make sure there is power to the outlet. Do not use extension cords to connect the timer to the power source.

DEFIANT®

Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service 8 a.m. - 6 p.m., EST, Monday - Friday

1-866-308-3976

HOMEDEPOT.COM