 



CCT 3000K
CRI 97
LUMENS /WATT 85.6
WATT 23.8
LIGHTING SPECS 55210 (36IN.)
CCT 3000K
CRI 97
LUMENS /WATT 87
WATT 15.2
LUMENS 1327
LIGHTING SPECS 55209 (24IN.)
CCT 3000K
CRI 97
LUMENS /WATT 81
WATT 13
LUMENS 1050
LIGHTING SPECS 55208 (18IN.)
CCT 3000K
CRI 97
LUMENS /WATT 75.6
WATT 9.5
LUMENS 720
LIGHTING SPECS 55202 (12IN.)

CLEANING INSTRUCTIONS: Your LED light fixture is made from quality materials that will last for many years with minimum care. When cleaning, make sure you have unplugged your LED light fixture and have allowed sufficient time for the unit to cool to room temperature. You should clean the housing and lens using a soft, damp cloth. DO NOT USE chemicals to clean your LED light fixture as this could damage or disable the light fixture. You should plug your LED light fixture in only after the light fixture has thoroughly dried.

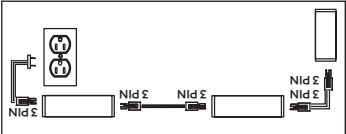

Linking Cord
Follow steps 1-5 to install additional ProLink fixtures (sold separately). Once installed, remove the end caps that cover the 3-pin ports on each fixture. For extended reach, use the included 18in. linking cord. To install them end-to-end, use the linking plug.
Note: The ON/OFF switch only controls a single LED light fixture. It does not control other linked LED light fixtures. You can control power to a series of connected LED light fixtures with one of many ProLink control modules (separately available).
Note: Keep in mind that the distance between each fixture must not exceed the linking cord length. Additional linking cord lengths are available at enbrighttenme.com or byjasco.com.

 LINKING ADDITIONAL FIXTURES



color temperatures.

Cool White (CW) and Warm White (WW)

Change between Daylight (DL),

WHITE-SELECT SWITCH



ON/OFF SWITCH
Press the ON/OFF switch to turn the fixture ON or OFF.

IMPORTANT SAFETY INSTRUCTIONS

Warnings to reduce the risk of fire, electric shock or injury to persons:

Never use an extension cord unless the plug can be fully inserted. Do not alter the plug.

• Read the entire installation procedure before you begin.

• Do not attempt to install the fixture while plugged in.

• Save these instructions so you can refer to them at a later time.

INSTALLATION/OPERATION

Thank you for your purchase!

Instructions
made easy



Read instructions or watch
easy-to-follow video. Scan
code or visit
byjasco.com/55202p

Exclusive deals



For deals, to register your
purchase and to tell us how
we're doing, simply scan
the code or visit
byjasco.com/deals



Discover more premium LED
lighting and lighting accessories
at byjasco.com/lighting.



Like our product?
Leave a review on your
favorite retailer
website or amazon.com



Having problems?
Let us know how we can
help. Call 1-800-654-8483
between 7AM-8PM, M-F,
Central Time.

 


12/18/24/36in. Plug-In LED Fixture User Manual





WARNING: Before installing, read all safety instructions listed at the end of this manual. Consult a local licensed electrician or electrical contractor if you are not sure about installing the fixture yourself. Saves these instructions for later use.

See reverse for easy-to-follow
instructions and exclusive deals.

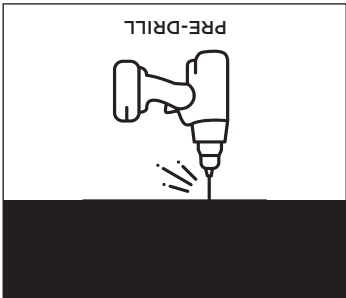


Pre-drill holes for the screws using the pencil marking for guidance. Use a 1/16in. (1.5mm) drill bit for soft woods and a 3/32in. (2.4mm) drill bit for hard woods.

STEP 3: PRE-DRILL HOLES

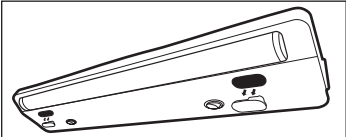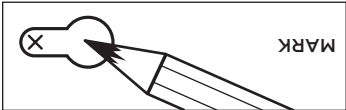

Remove the two caps on either end of the fixture to access the keyhole slots. With a pencil, mark the locations for each screw using both keyholes for guidance.

 STEP 2: MARK SCREW LOCATIONS

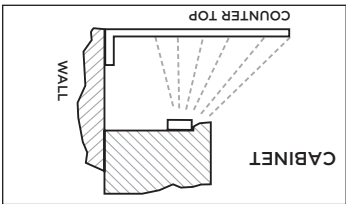


Make sure that the 5ft. power cord will reach the nearest outlet. The mounting location should be indoors, dry and able to support the fixture. It is recommended to mount the fixture near the front lip of your cabinets.

STEP 1: CHOOSE INSTALL LOCATION

Align the keyholes on the fixture with the screws to secure it into place. Tighten the screws as needed and replace the two caps over each keyhole slot.


STEP 5: MOUNT FIXTURE

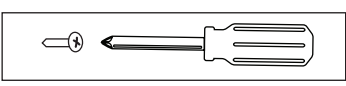


Insert the included screws with a #1 Phillips screwdriver, leaving about 1/8in. (3.2mm) of space under the head.

STEP 4: INSERT SCREWS

Insert the end of the power cord into the 3-pin port on the fixture and then plug it into the nearest 120VAC 60Hz outlet.

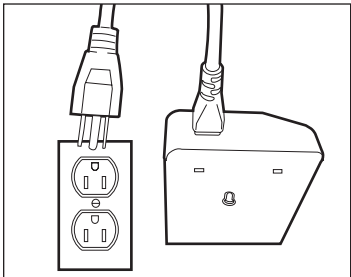

STEP 6: CONNECT TO POWER

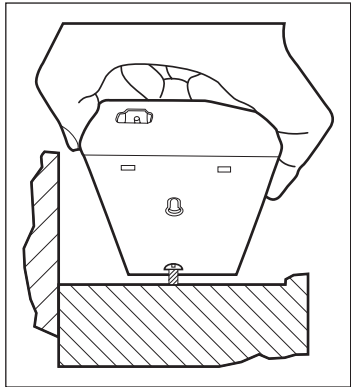

INSTALLATION

FCC STATEMENT:

Suppliers Declaration of Conformity | Model #: 55202, 55208, 55209, 55210 | Jasco Products Co.,
10 E. Memorial Rd., Oklahoma City, OK 73114, www.bvjasco.com

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING

- **RISK OF ELECTRIC SHOCK**

- DO NOT USE IN WET LOCATIONS.
- USE INDOORS ONLY.
- USE ONLY INSULATED STAPLES OR PLASTIC TIES TO SECURE THE CORDS.
- ROUTE AND SECURE THE CORDS SO THAT THEY WILL NOT BE PINCHED OR DAMAGED.
- NO SERVICEABLE PARTS
- NON-REPLACEABLE LEDS
- LED LIGHT OUTPUT IS STRONG ENOUGH TO INJURE HUMAN EYES. PRECAUTIONS MUST BE TAKEN TO PREVENT LOOKING DIRECTLY AT THE LEDS WITH UNAIDED EYES FOR MORE THAN A FEW SECONDS.

- **RISK OF FIRE**

- NOT INTENDED FOR ILLUMINATION OF AQUARIUMS.
- NOT INTENDED FOR USE ABOVE STOVES, COOK TOPS, SINKS OR OTHER HEAT PRODUCING APPLIANCES, SUCH AS COFFEE MAKERS, TOASTERS, OR TOASTER OVENS.
- NOT INTENDED FOR RECESSED INSTALLATION IN CEILING JOISTS.
- NOT INTENDED FOR SURFACE INSTALLATION INSIDE OR ON TOP OF BUILT-IN FURNISHINGS SUCH AS KITCHEN CABINETS, CHINA CABINETS, OR TROPHY CASES.
- DO NOT CONCEAL POWER SUPPLY CORD OR LINKING CORDS INSIDE A WALL, CEILING, SOFFIT, KITCHEN CABINET, OR SIMILAR PERMANENT STRUCTURE.
- DO NOT RUN THE POWER SUPPLY CORD OR LINKING CORDS THROUGH HOLES IN WALLS, CEILINGS OR FLOORS.

MADE IN CHINA

Distributed by Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a limited-lifetime warranty. Visit www.byjasco.com for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM, M-F, Central Time.

55202, 55208, 55209,
55210 v1 11/20



byiasco.com/recycle