

- Thank you for purchasing our bathroom faucet
- Please read this manual carefully before you install it
- Please keep this maunal properly for the reference in the future



USER MANUAL


Model AM-003-DP

Read all instructions prior to installation.



CAUTION

Failure to read these instructions prior to installation may result in personal injury, property damage, or product failure. Manufacturer assumes no responsibility for product failure due to improper installation.


You may need:

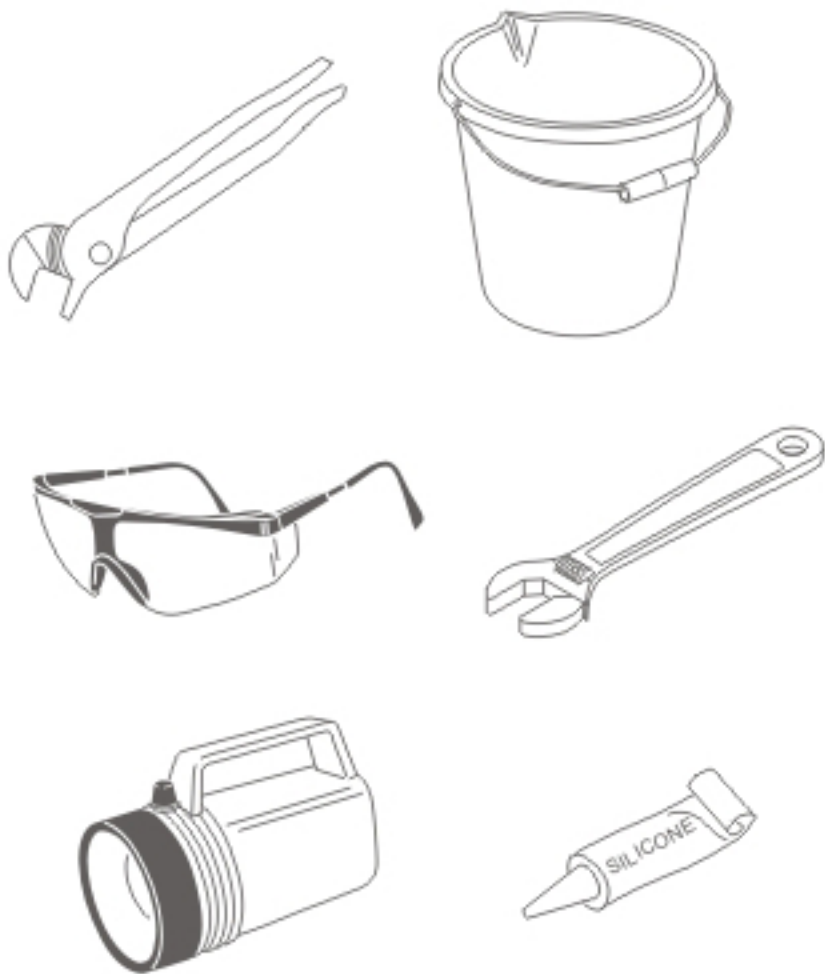


NO.	PART NAME
1	Faucet
2	Gasket
3	Rubber washer
4	Metal washer
5	Shank
6	Mounting nut
7	Deck plate
8	Supply lines
9	Wrench
10	Transform adapters

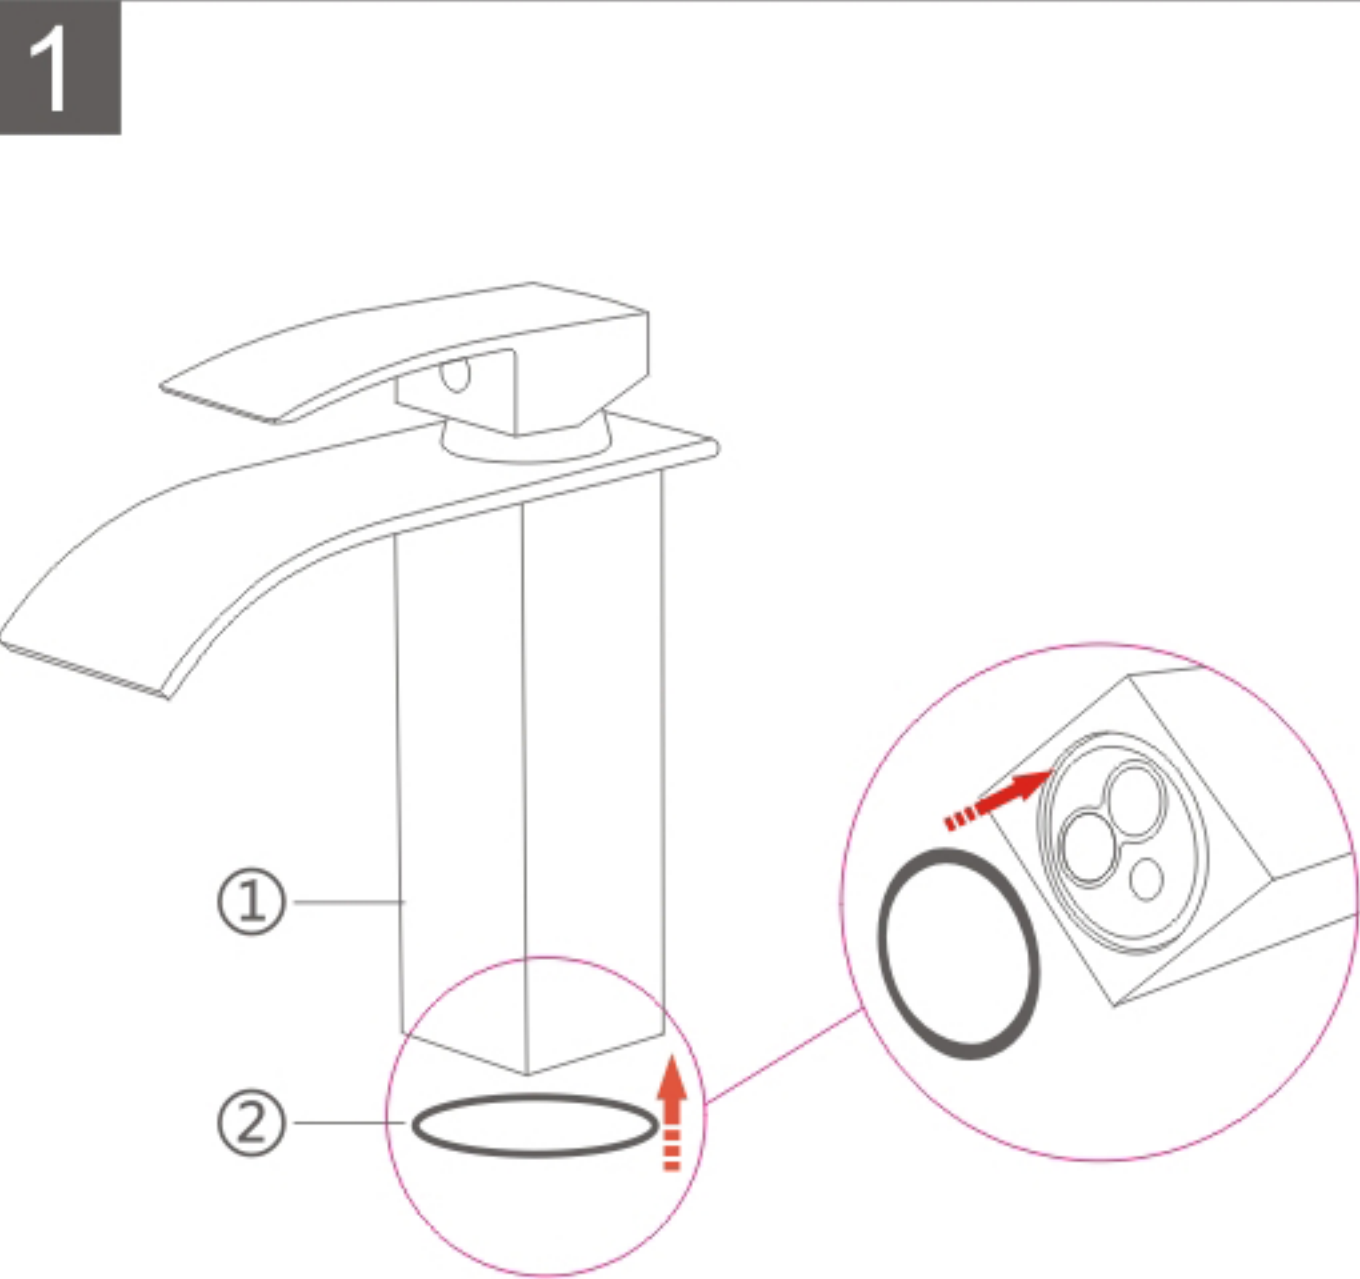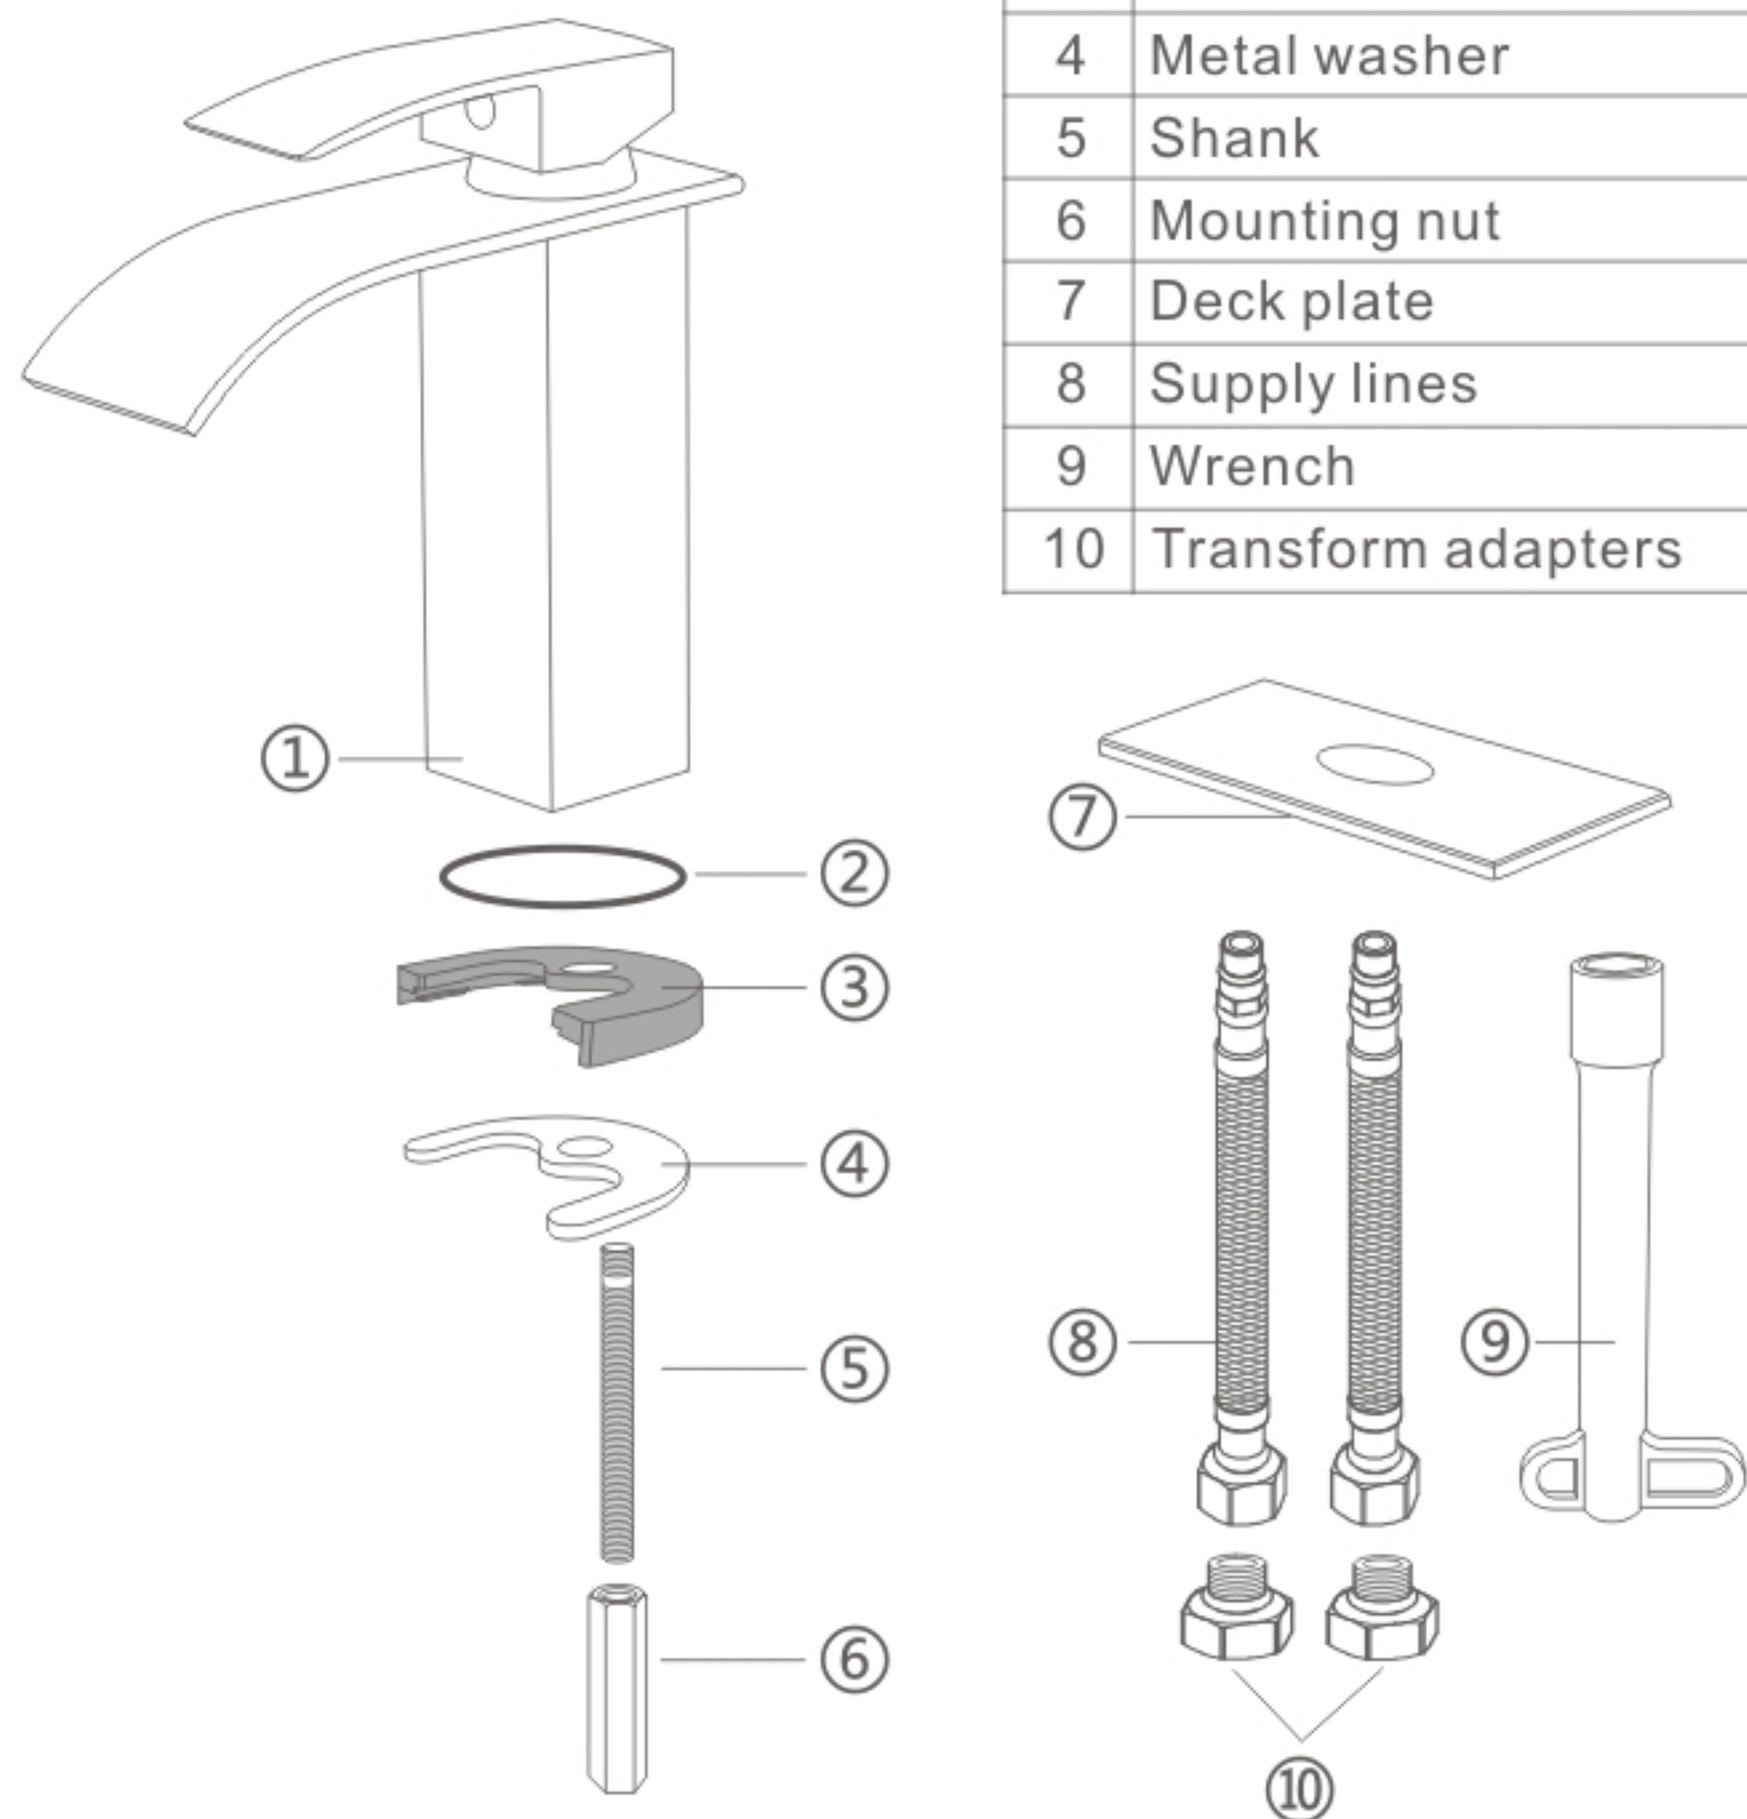


Place gasket (2) into groove on bottom of faucet (1).

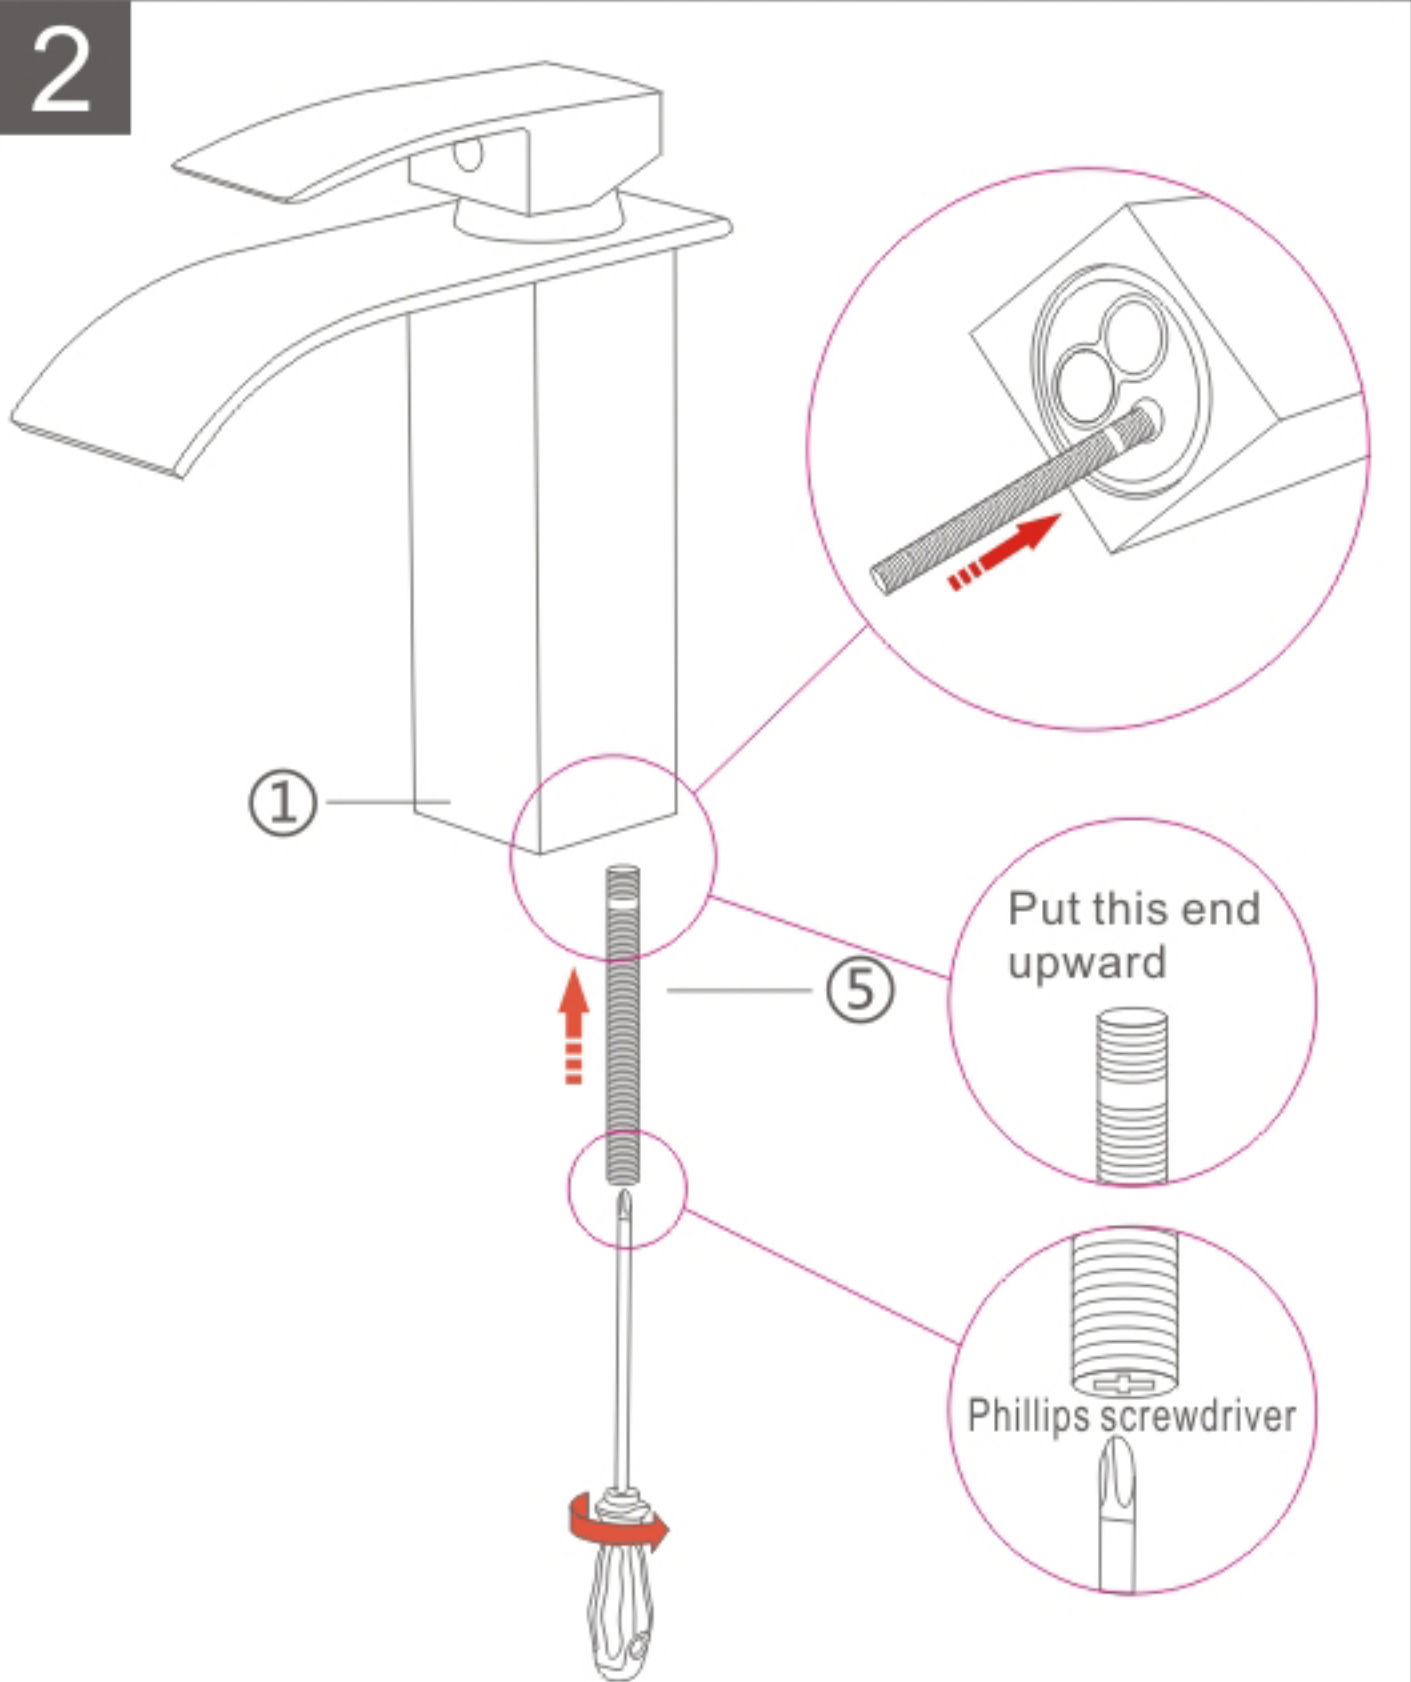


Install the shank (5) with phillips screwdriver.

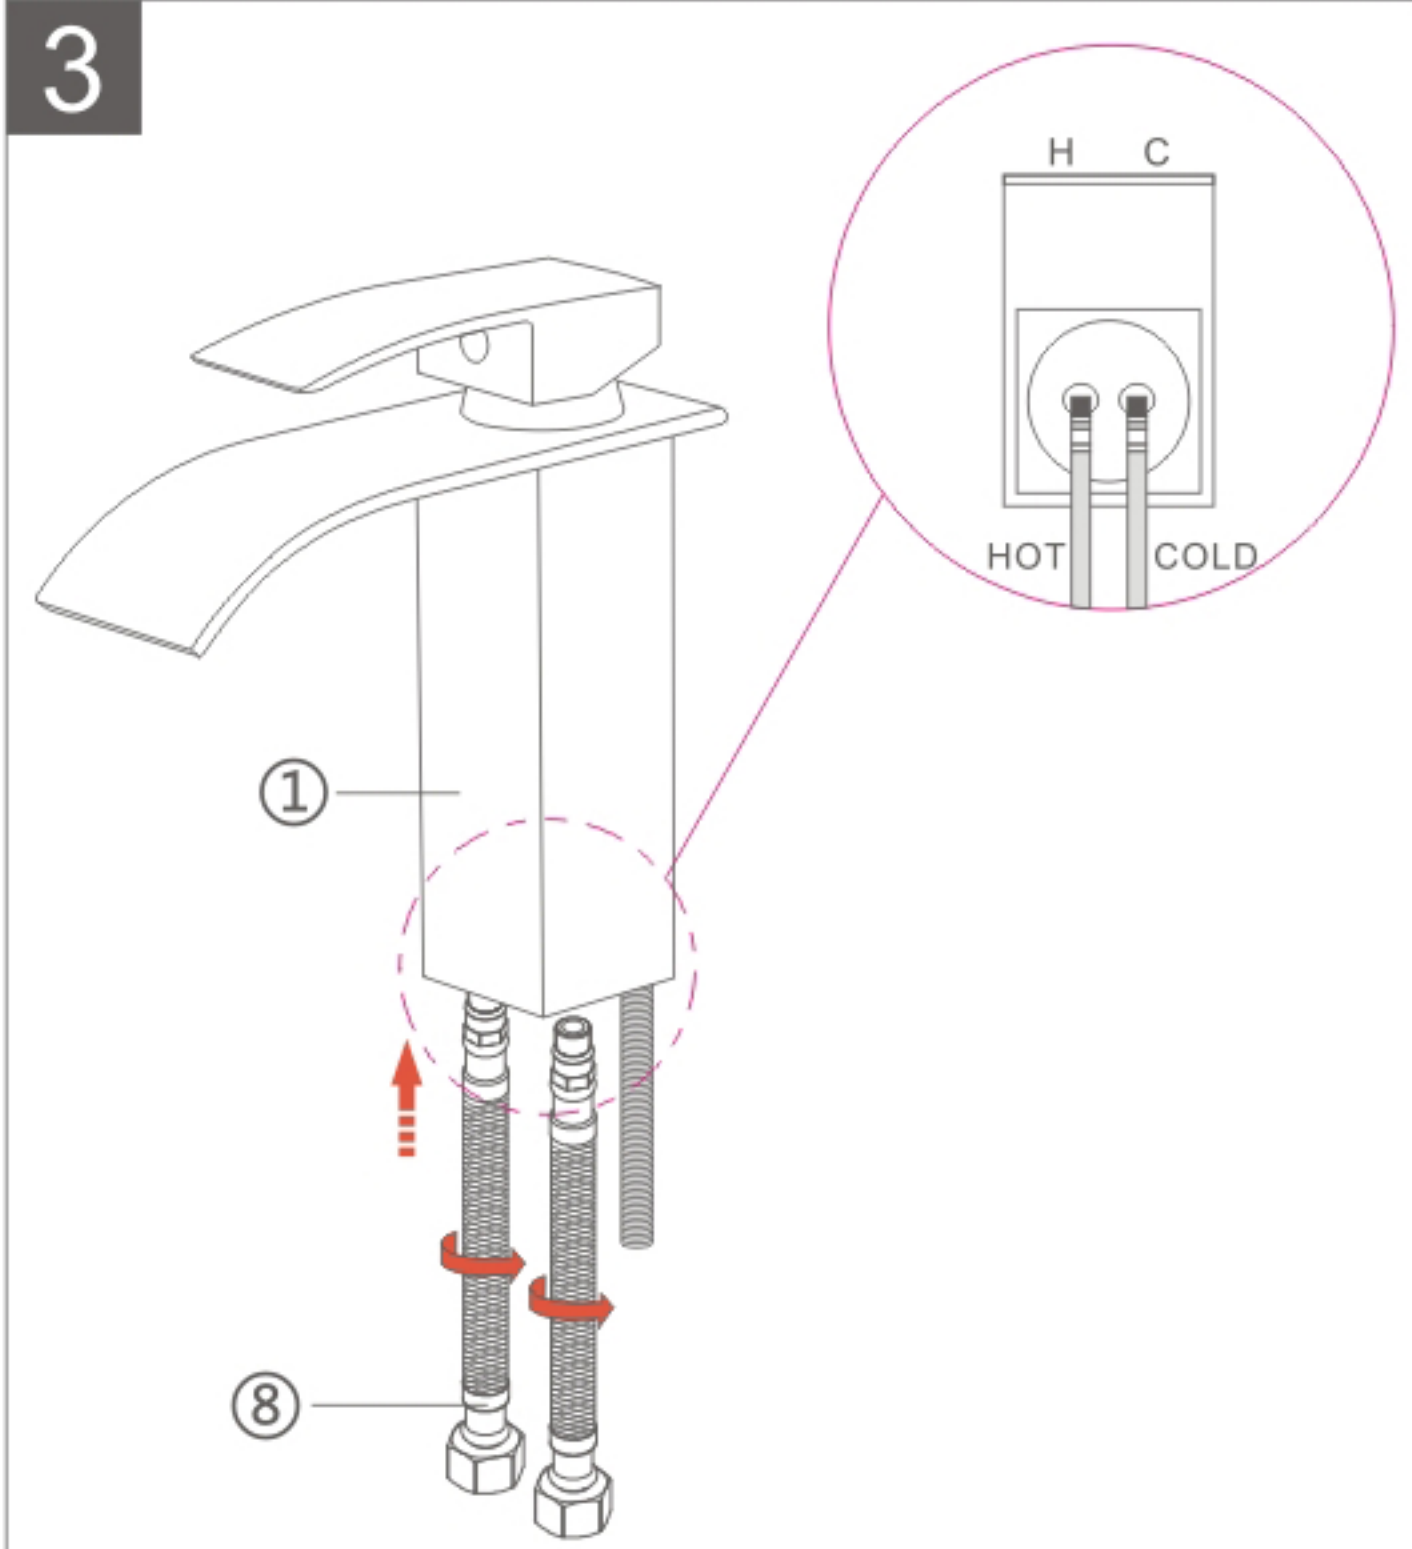


Thread hot and cold supply lines (8) to the faucet (Thread Hot supply line to H side, thread Cold supply line to C side).

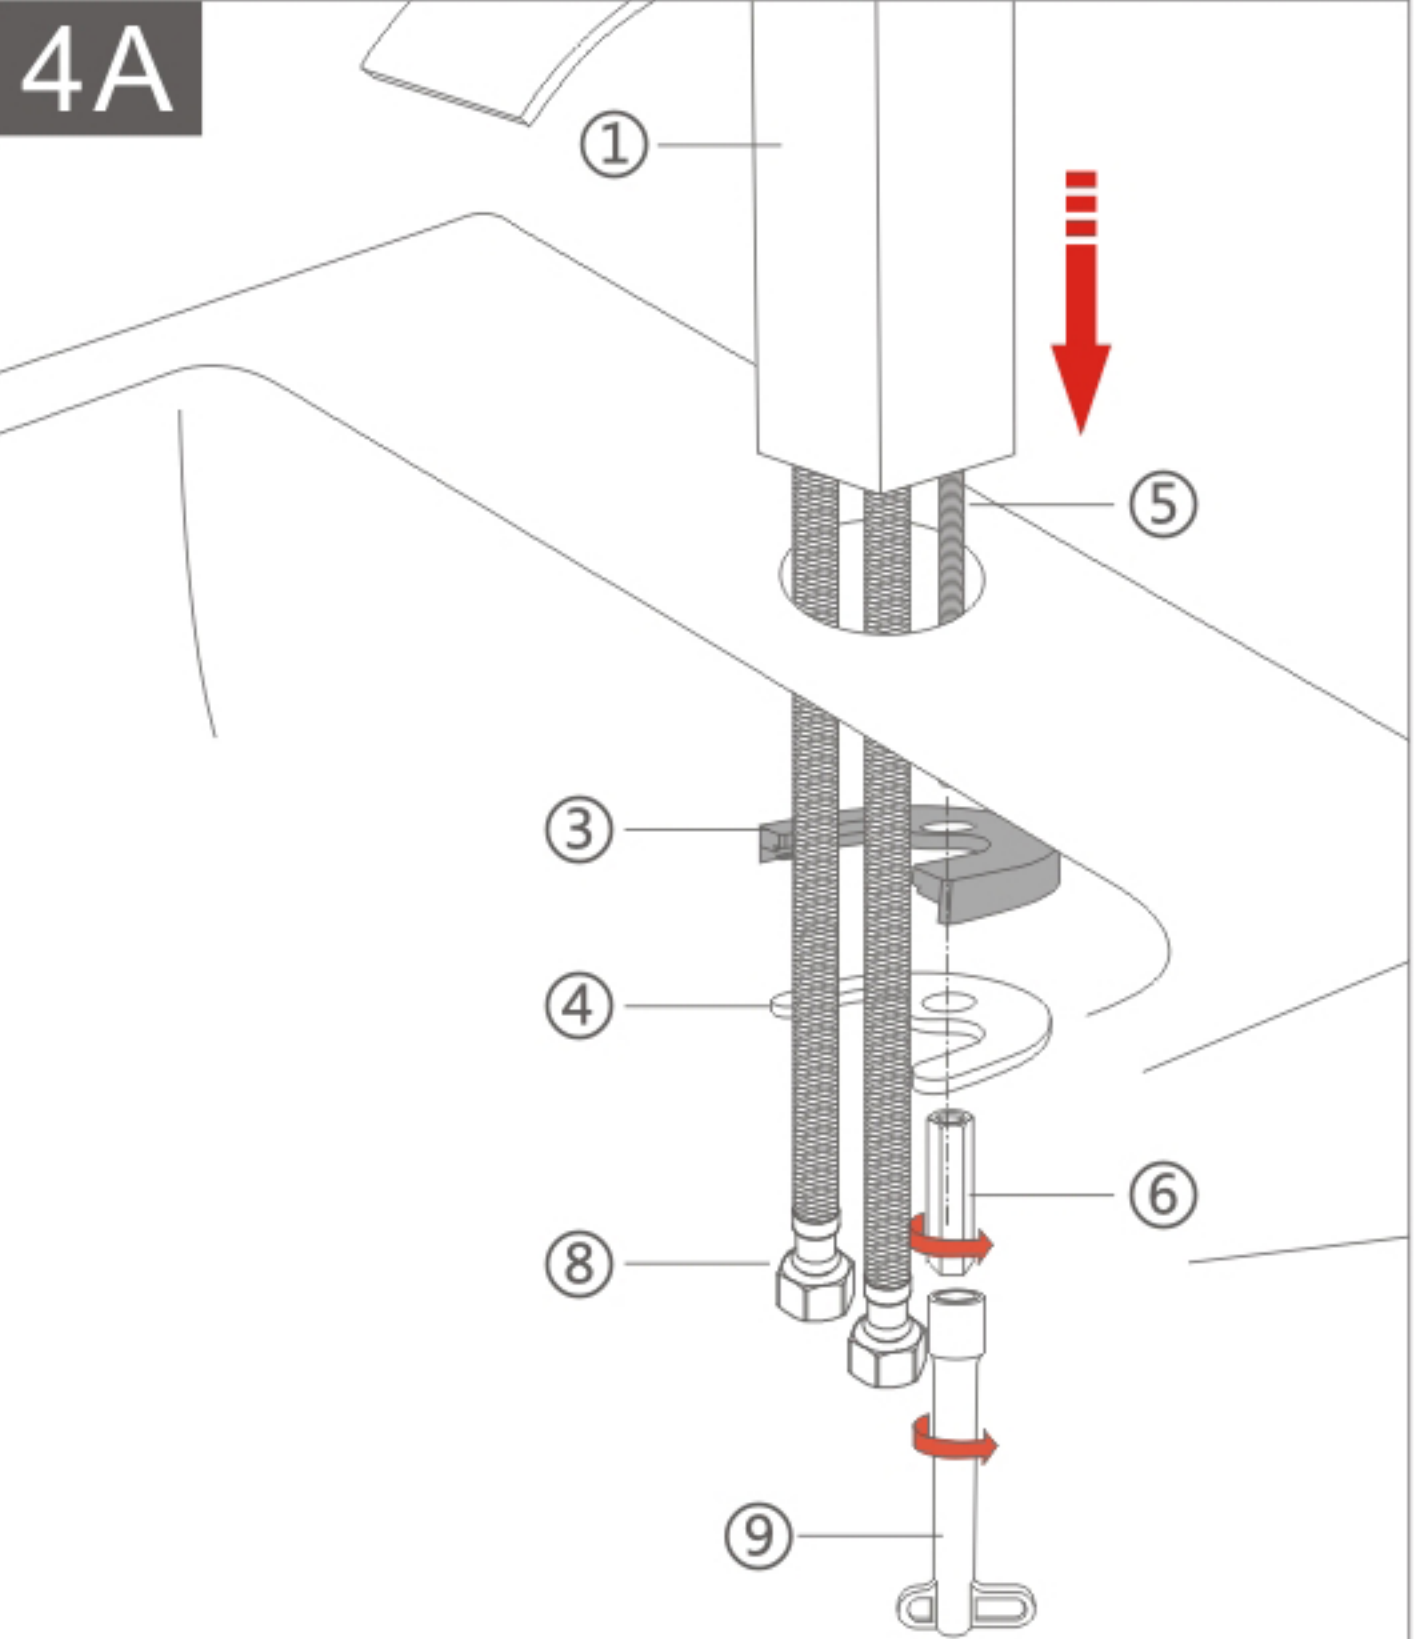


Slide supply lines (8) and shank (5) through sink from above, then slide the shank (5) through the hole of rubber washer (3), then slide the shank (5) through the hole of metal washer (4). Ensure base is aligned with sink , fully tightening mounting nut (6) using wrench (9).

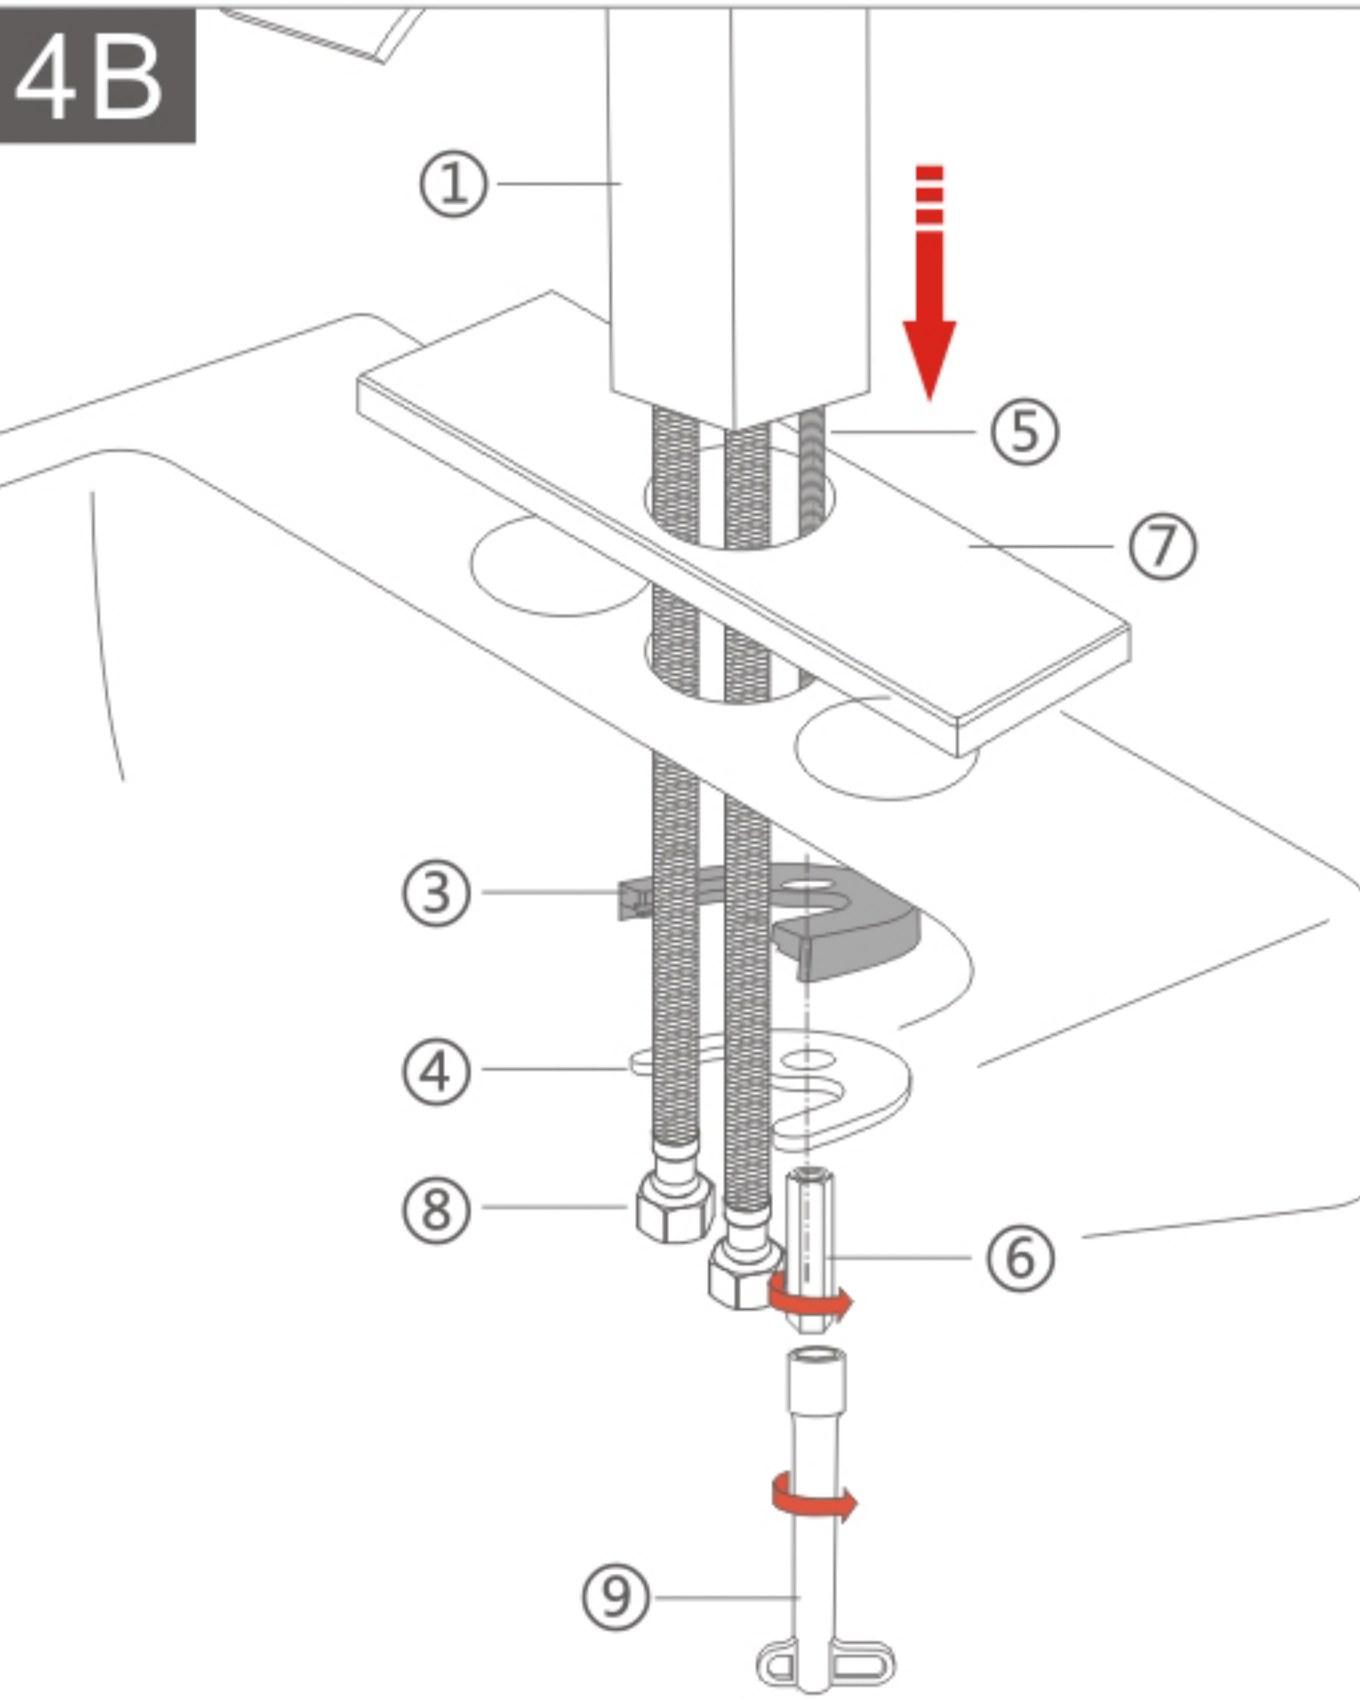


If the sink has three holes, slide supply lines (8) and shank (5) through deck plate (7) and sink from above, then slide the shank (5) through the hole of rubber washer (3), then slide the shank (5) through the hole of metal washer (4). Ensure base is aligned with sink , fully tightening mounting nut (6) using wrench (9).

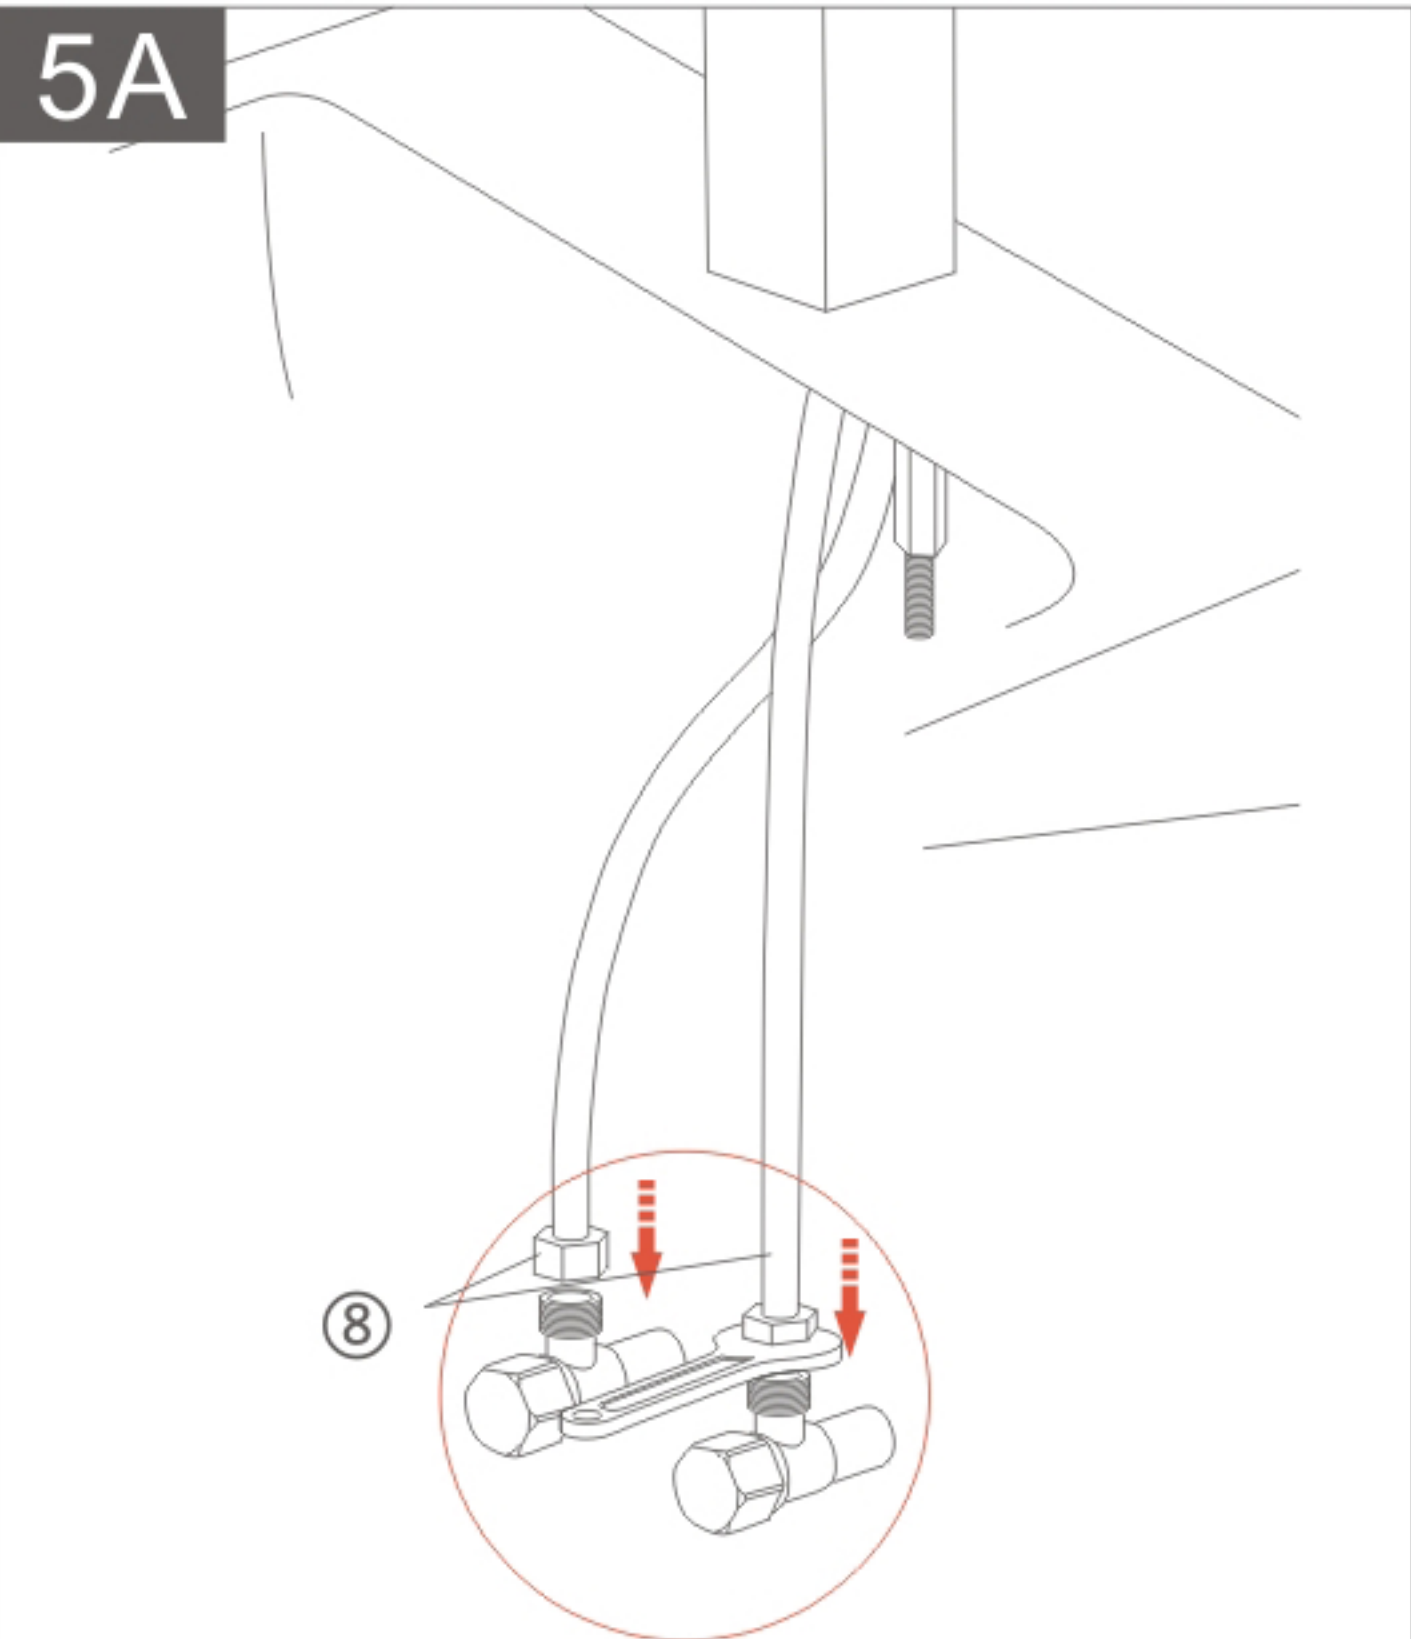

If the thread of the angle valve is 3/8", thread hot and cold supply lines (8) to angle valves using wrench.

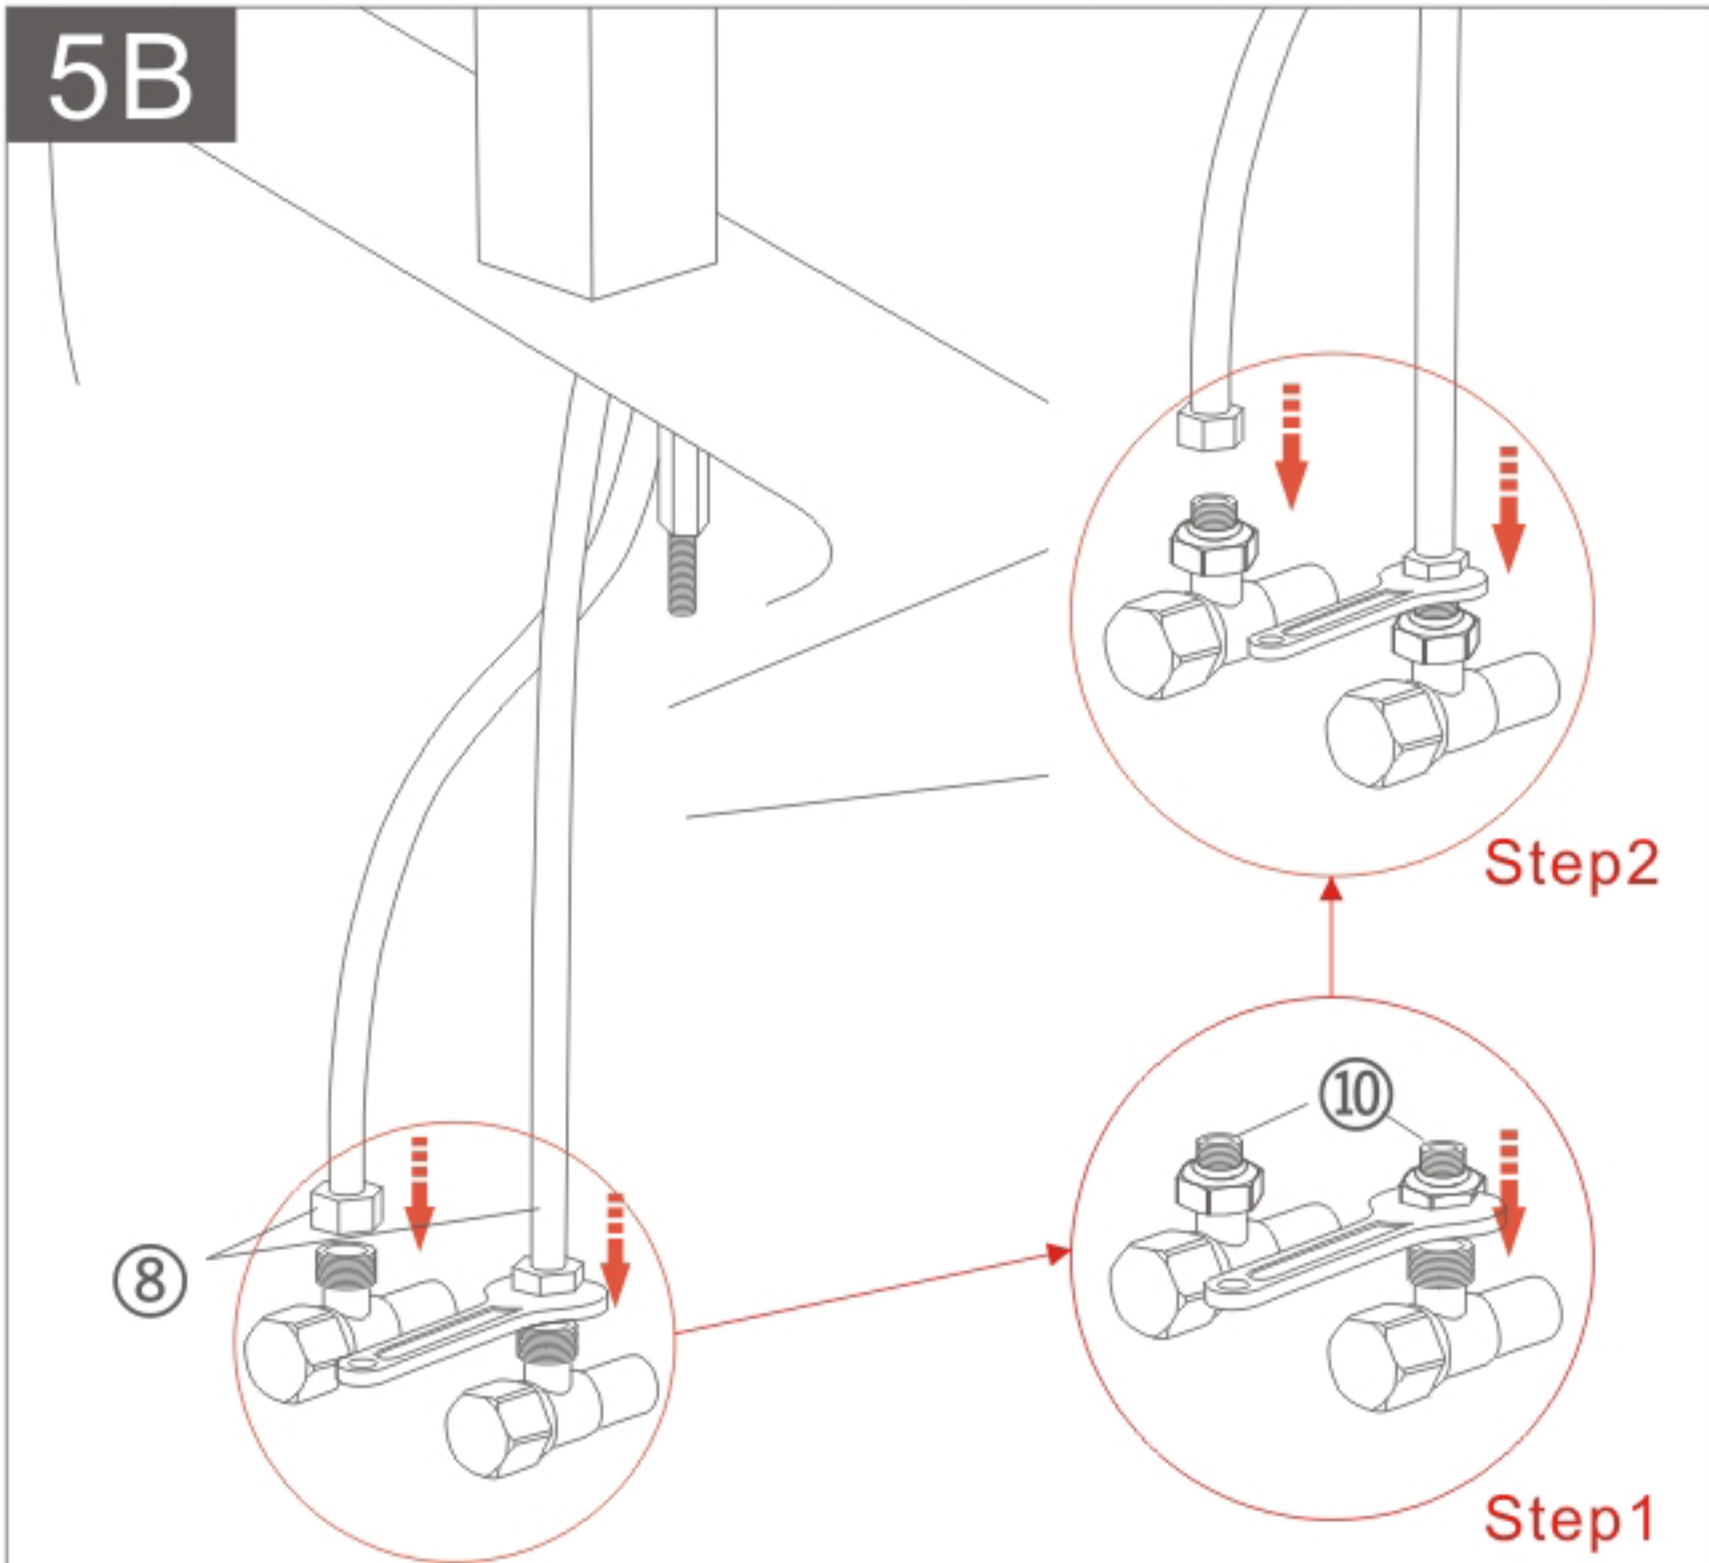

If the thread of the angle valve is 1/2", first thread the transform adapters (10) (transform 1/2" male thread to 3/8" male thread) to angle valves using wrench, then thread hot and cold supply lines (8) to Transform adapters (10).

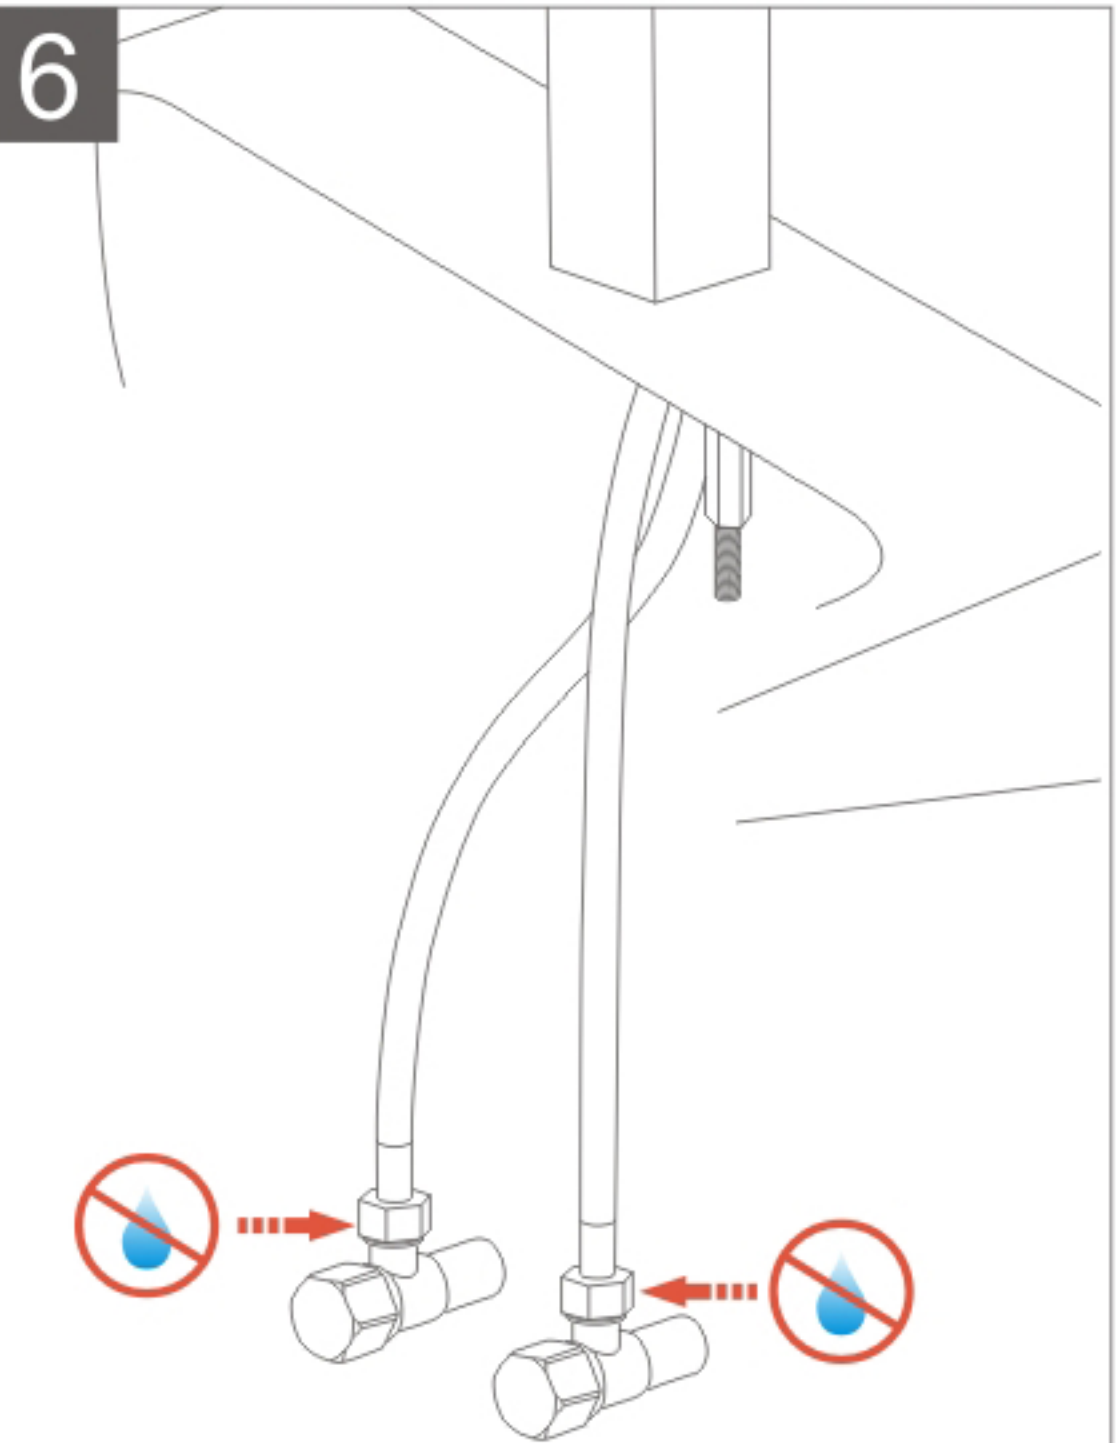

Turn on both water supplies at angle stops and faucet handle, check for leaks at all connections made during this installation, Refer back to the appropriate installation instructions and retighten if necessary.