 


USE AND CARE GUIDE

16.4 ft RGBW COLOR CHANGING RECHARGEABLE BATTERY STRIP LIGHT WITH MOTION SENSOR

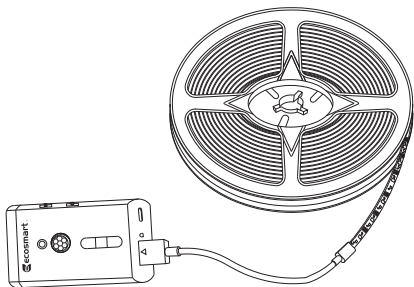

Questions, problems, missing parts? Before returning to the store, call EcoSmart Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Table of Contents

Table Of Contents.....	2	Installation	6
Safety Information	2	Operation.....	8
Warranty	4	Care and Cleaning	11
Pre-Installation	5		

Safety Information

PRECAUTIONS

Read and understand this entire manual before you attempt to install or operate this product.

- ☐ This strip light is intended for indoor use only.
- ☐ This strip light is not intended for commercial use.
- ☐ Do not expose the strip light to excessive heat or moisture.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Do not damage or crimp the cable. Do not allow the cable to come into contact with sharp objects.



CAUTION: Do not look directly at the strip light when it is illuminated. Eye damage could occur.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.

Safety Information (continued)

- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

NOTICE: This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- ☐ this device may not cause harmful interference, and
- ☐ this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party-U.S. Contact Information

Elecwish Inc/Add: 4225 Etiwandaavenue, Suite 1 mira loma, California 91752,
USA/Elecwish.com

 
Warranty

The manufacturer warrants this fixture to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-800-910-7164 or visit www.HomeDepot.com/EcoSmart.

Pre-Installation

PACKAGE CONTENTS

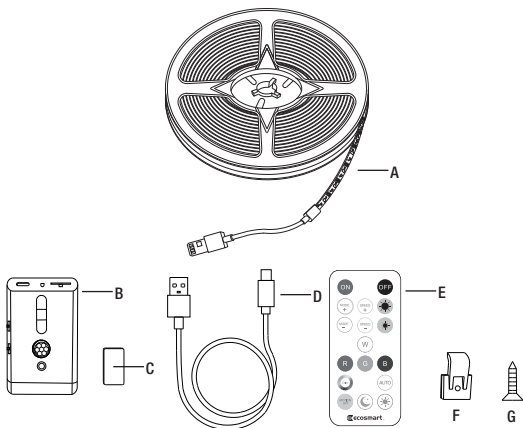


Part	Description	Quantity
A	Strip light	1
B	1000mAh lithium rechargeable controller	1
C	Iron sheet with adhesive	1
D	USB charging cable	1
E	Remote control	1
F	Mounting Clips	6
G	Screws	6

Installation


1 Prepare the strip light

 - (optional) Shorten the strip light (A) to the desired length by cutting along the black lines with the scissor mark.

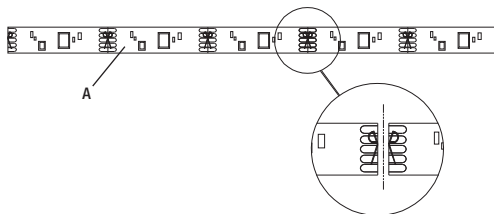

2 Install the strip light

 
- Ensure that the mounting location is even, clean, and dry.
- Remove the protective film (1) from the back of the strip light (A).
- Press the strip light (A) to the mounting surface and hold in place for a few seconds.

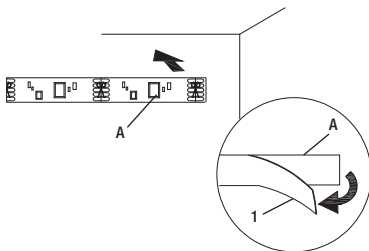

Installation(continued)


3 Connect the controller

 - Connect the strip light with the controller according to the arrow indicator

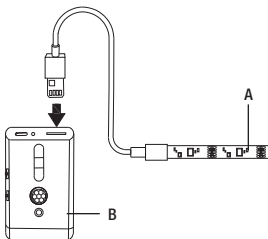

4 Install the controller

 - Remove the protective film from the back of the iron sheet(C)
- Find a proper place to mount it and press to reinforce it
- After the sheet is fixed for a while, attach the controller(B) to the iron sheet(C) with its back magnet
- Use the mounting clips(F) and screws(G) to further fix the strip light

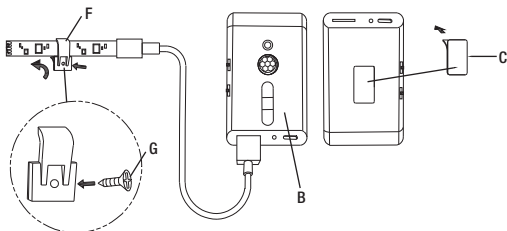

Operation

1 Remote Operation

 


CAUTION: The remote control included utilizes a 3V CR2025 battery; Do not dispose of batteries in fire as they may explode or leak. Please dispose of used batteries immediately and safely. Only replace with the same battery type. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.



WARNING: KEEP BATTERIES OUT OF THE REACH OF CHILDREN! BATTERIES ARE NOT A TOY! If swallowed, they can cause severe injury or death within 2 hours. In case of swallowing, call emergency services immediately. Tell others of the risks associated with button batteries to keep kids safe.

- Remove the plastic tab from the back of the handheld remote (E).
- Ensure the battery contacts are clean prior to battery installation.
- Remove batteries from equipment when not in use for an extended period to time.
- Aim the remote directly at the controller.

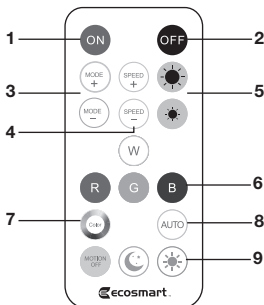

Operation(continued)

	Button	Description
1		ON: Press to turn on the light
2		OFF: Press to turn off the light
3		Dynamic Mode Button: * 1-color flash: red, green, blue, orange, yellow, cyan, purple. Press switch button(7) to choose color then press mode button(3) to achieve flash effect * 3-color jump: red, green, blue * 7-color jump: red, green blue, yellow, cyan. purple, white in sequence * 3-color smooth: red, green, blue * 7-color fade: red, green blue, yellow, cyan. purple, white in random sequence
4		Adjustable speed: Increase or decrease the 5-level speed of dynamic mode
5		Adjustable brightness: Increase or decrease the 5-level light brightness
6		Static (solid) color: white, red, green, blue
7		Static (solid) color toggle: red, orange, yellow, green, cyan, blue, purple, white
8		Auto: All preset modes repeat automatically
9		Motion mode: * Press MOTION OFF to turn off the motion mode * Press MOON to turn on the motion mode Light turns on in darkness only when get detected * Press SUN to turn on the motion mode Light turns on when get detected Successful setting reminder: white color flash

Operation(continued)

 
2 Controller Operation



WARNING: Do not try to replace the lithium polymer battery. The rechargeable battery in controller is not replaceable.



NOTE: 1. The controller is rechargeable and detachable. Get the controller fully charged before use it.
2. When the remote and the controller set the motion mode together, the final effect depends on the last command

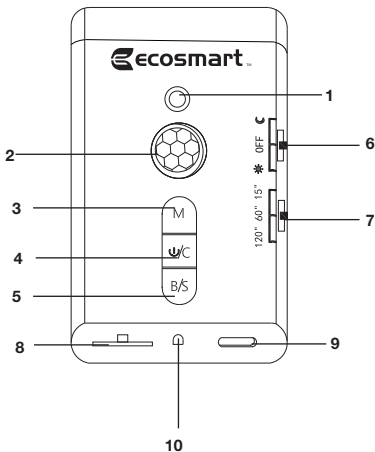

Operation(continued)

	Description
1	IR Remote
2	PIR Motion Receiver
3	Dynamic Mode Button: * 1-color flash: red, green, blue, orange, yellow, cyan, purple. Press switch button(4) to choose color then press dynamic button(3) to achieve flash effect * 3-color jump: red, green, blue * 7-color jump: red, green blue, yellow, cyan, purple, white in sequence * 3-color smooth: red, green, blue * 7-color fade: red, green blue, yellow, cyan, purple, white in random sequence
4	On/Off Button: [Short Press] Power on and change the color (red, orange, yellow, green, cyan, blue, purple, white) [Long Press] Power off
5	Adjustable Speed & Brightness: Increase or decrease the 5-level speed of all dynamic modes and the brightness of all static colors
6	Motion Sensor Mode: [Motion Sun Mode] Light turns on when get detected [Motion Off] [Motion Moon Mode] Light turns on in darkness only when get detected
7	Delay Time Options: Light remains on for 120s, 60s or 15s when not get detected
8	Strip light connection port
9	USB charging port
10	Charging indicator: red light on when charging; blue light on when fully charged

Care and Cleaning

- To clean the light strip, use a clean, dry, or slightly damp cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives, as damage to the strip light may occur.



Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service
8 a.m.-7 p.m., EST, Monday-Friday, 9 a.m.-6p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Retain this manual for future use.