 


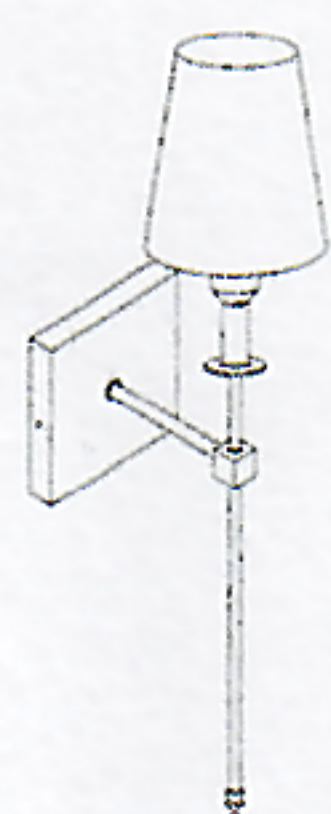


Deck Impressions™

Model #80071


USE AND CARE GUIDE

BATTERY OPERATED WALL LIGHT

 TOOLS REQUIRED

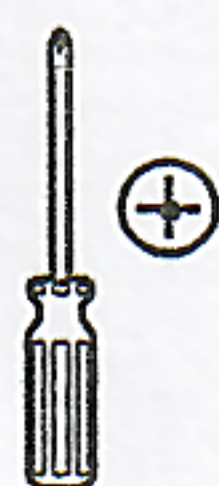

Phillips Screwdriver

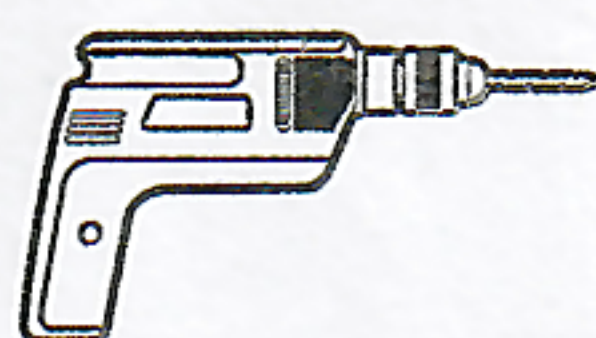 

Electric Drill

 
HARDWARE INCLUDED




AA - Mounting
Screw x 2



BB - Plastic
Anchor x 2

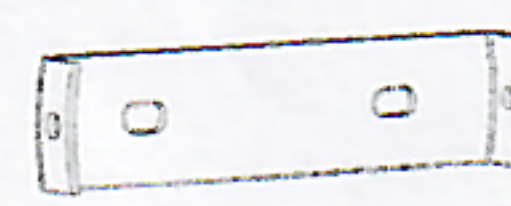

CC - Mounting
Bracket x 1

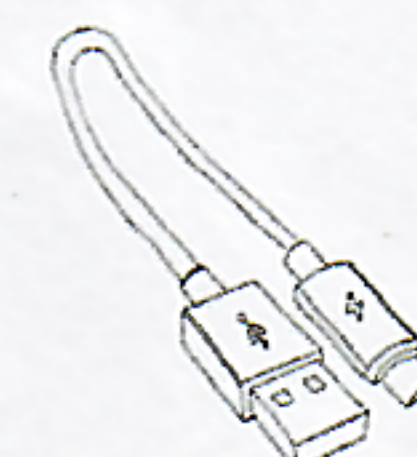 

DD - USB Charging
Cable x 1

Assembly & Installation


- Locate an area in which you would like to install your wall light fixture.
- If mounting to a wood surface, drill two holes into the mounting surface, using the two mounting screws (AA) provided to secure the mounting bracket (CC) to the mounting surface.
- If mounting to a wall board or brick walls, drill two holes into the wall surface and insert the wall anchors (BB), using the two mounting screws (AA) provided to secure the mounting bracket (CC) to the mounting surface.
- Align and place the mounting back plate (E) of the wall light over the mounting bracket (CC), using the two lock screws (H) to secure it in position.
- Screw the lamp holder assembly (D) into the support stand (F).
- Place the support bracket of lampshade (C) onto the assembled lamp holder (D), secure it in place with the disc screw (B).
- Place the light bulb (A) onto the assembled disc screw (B). The Light bulb (A) will be firmly fixed on it with its magnetic suction.
- Screw the lower decorative rod (G) into the support stand (F).
- Your wall light fixture is already fully assembled and installed.

Operation


- Your wall light is equipped with a functional switch on top of the light bulb (A) as shown in the left figure. Short Press the switch to tune into your favorite white light mode in sequence: 3000K-4000K-6000K. Long Press and hold the switch to adjust the light brightness.
- Your wall light also includes a matching remote controller to easily operate the light in your favorite light mode. Prior to use, please purchase and install with two AAA size, 1.5V Alkaline batteries (Not included in our package).

Light Bulb Charging

- Remove the light bulb (A) from the wall light fixture. Plug the small end of the provided Micro USB Charging Cable (DD) into the standard Type-C port on top of the light bulb (A).
- Connect the larger end of the Micro USB Charging Cable into your computer or other USB charging device. Recommended charge time is about 6-8 hours. When the light bulb is charging, the charging LED indicator on top of the light bulb will light up FLASHING BLUE, after the Light bulb is fully charged, the LED indicator light will turn to STEADY BLUE.
- Remove the Micro USB Charging Cable from the light bulb (A) after the charging is completed.

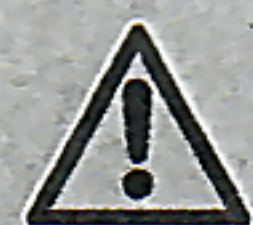

WARNING: The rechargeable Lithium ion batteries are permanently installed inside the light bulb, do not try to disassemble the light bulb to replace the old batteries. If the light bulb battery is reaching the end of its useful life, please contact the Customer Service Team at CustomerService@Creative-prc.us to purchase a new light bulb.

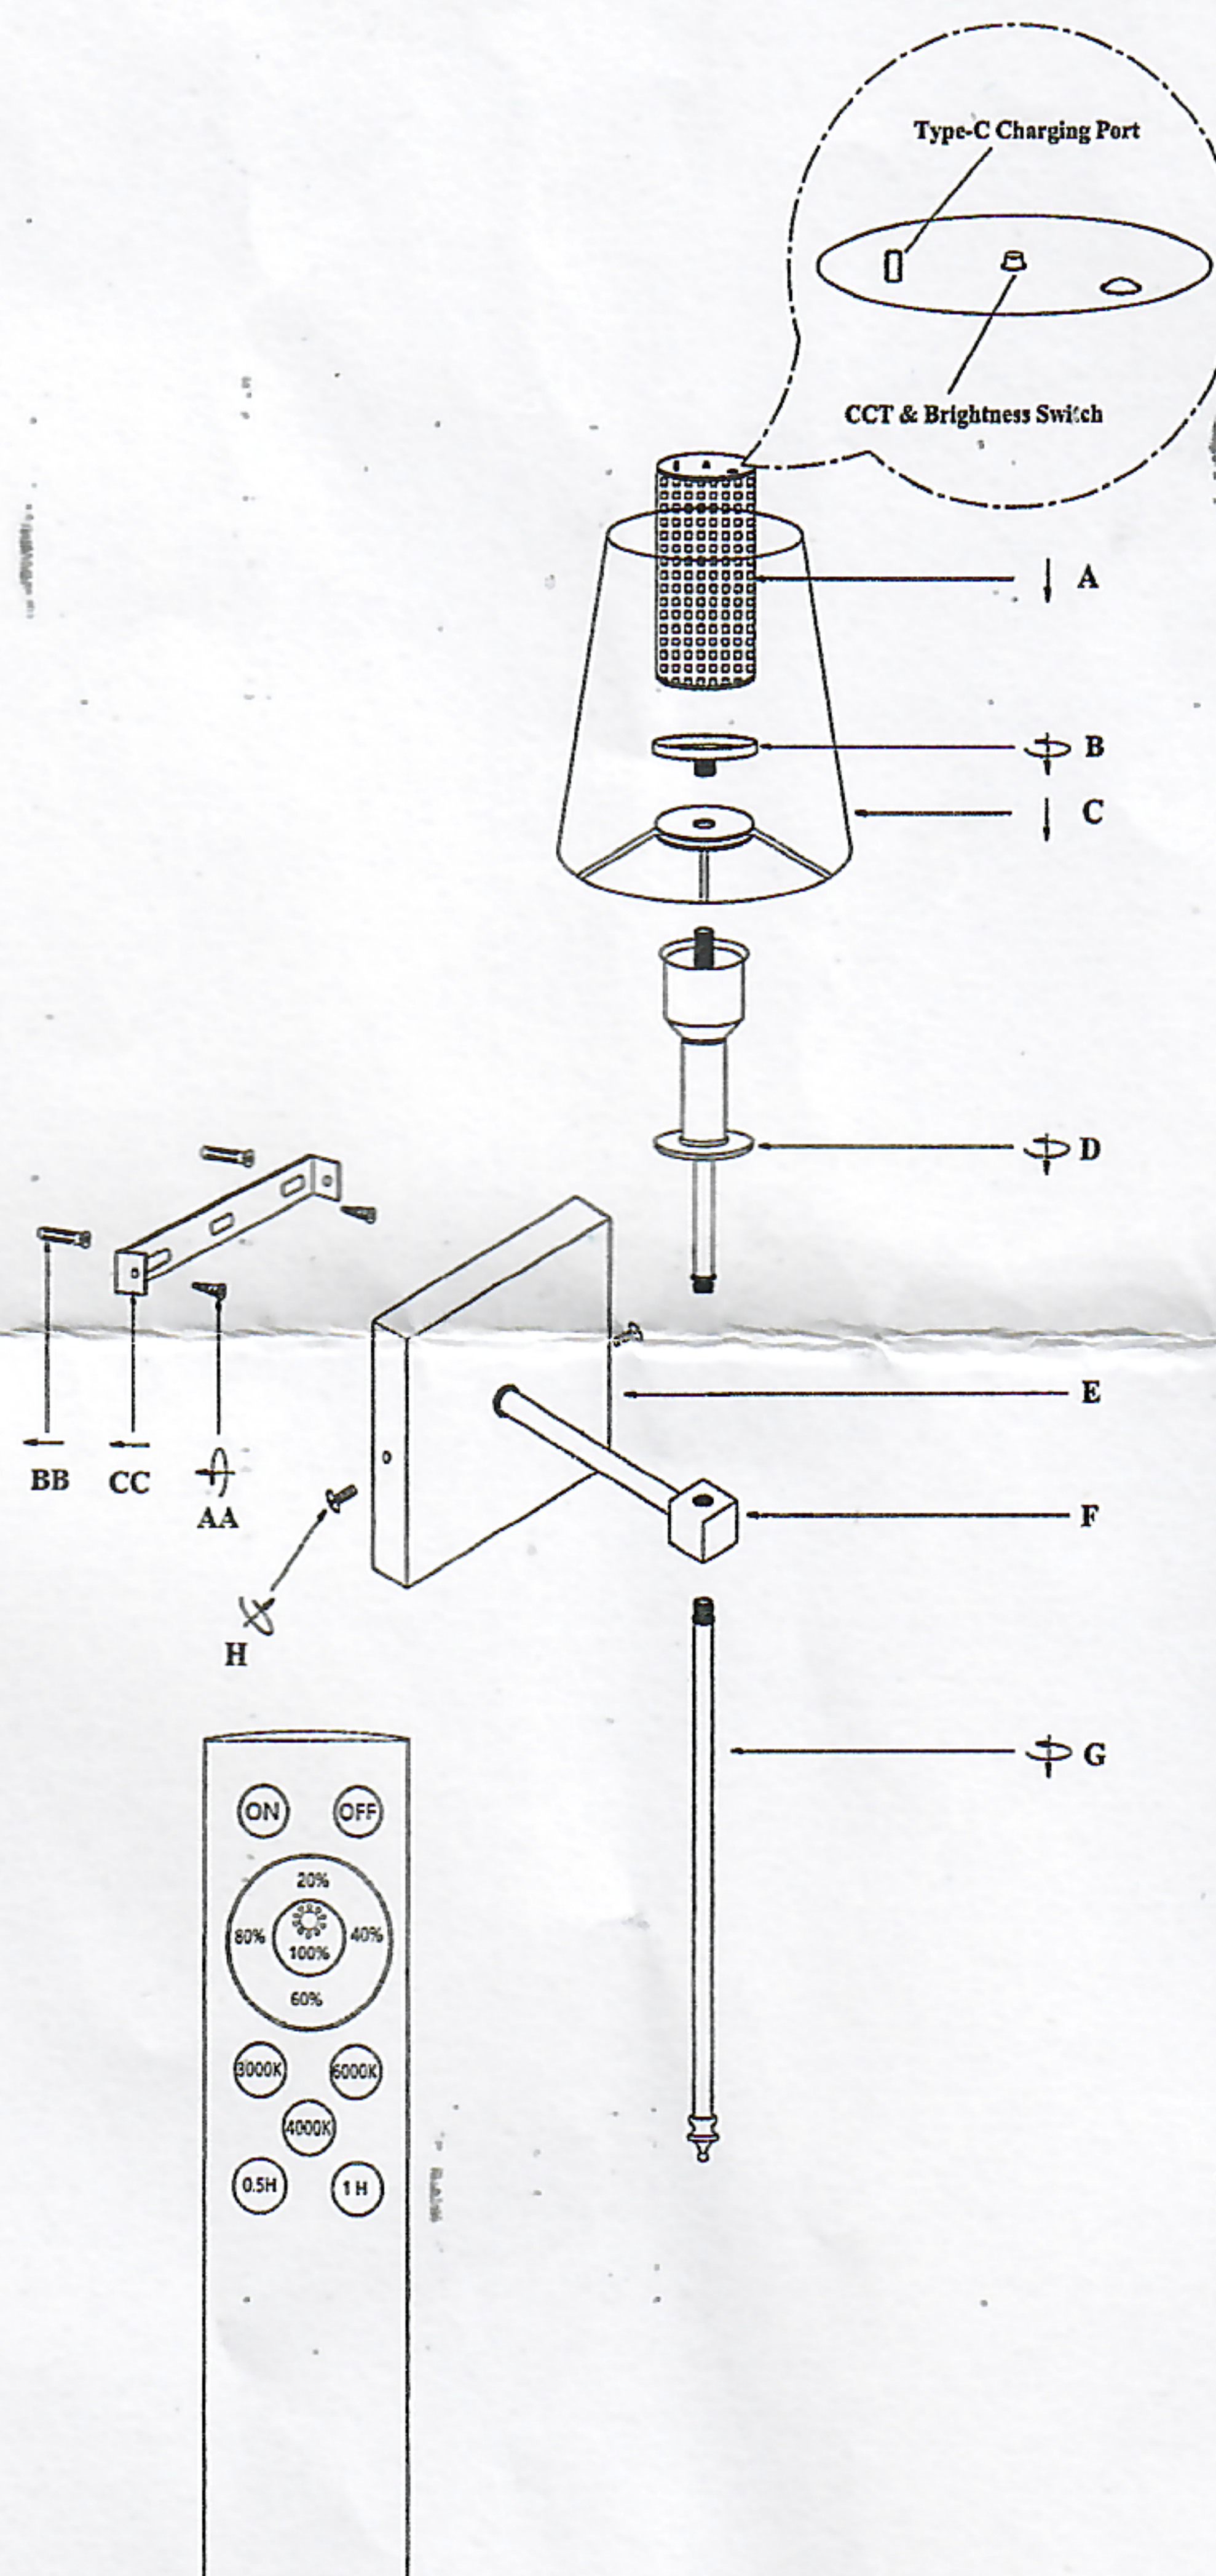

Warranty

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this product to be free of defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty only applies to the original consumer purchaser and only to products used in normal use and service. The manufacturer's only obligation and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling. Proof of purchase and evidence of manufacturer's date coding must accompany all warranty claims. Manufacturer's date coding is printed and adhered to each product.

WHAT IS NOT COVERED

This warranty does not apply to products that are found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty does not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation. Batteries supplied with this product are not included in this warranty. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. This warranty does not cover consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at CustomerService@Creative-prc.us