DeerTalk

6" LED Slim Canless Downlight With Night Light

One Light Two Modes



Downlight Mode



Night Light Mode

LIGHT SOURCE (INCLUDED)

INTEGRATED LED

Installation Instructions

SC-TDC12-D06-A-01RE

CAUTION

RISK OF FIRE OR ELECTRIC SHOCK. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


WARNING:

- Risk of electric shock. Disconnect power at fuse or circuit breaker before installing or servicing.
- To prevent early lamp failure, lamp should only be installed in operating environments between -20°C and 40°C (-4°F and 104°F).
- No user serviceable parts inside. To avoid electric shock, do not disassemble product.
- This product is not intended for use in emergency light fixtures or exit signs.
- Risk of fire or electrical shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp object.

ATTENTION:


- Turn power off before inspection, installation, or removal.
- Suitable for use in dry, damp or wet indoor and outdoor locations. Use on 120VAC, 60Hz circuits.


WHAT'S IN THE BOX

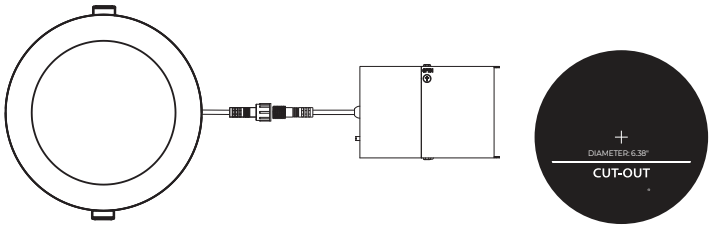

Fixture Driver box Template(1)

DIMENSIONS

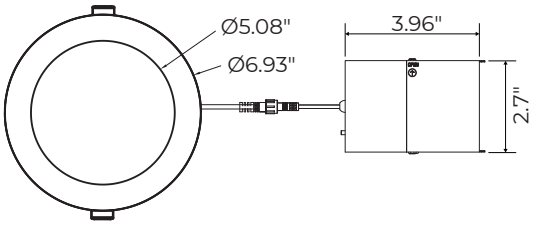

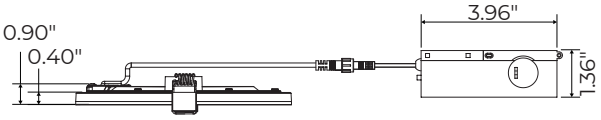


TOOLS NEEDED

This Edge-Lit Wafer requires very few tools for installation.
A screwdriver and a pair of wirecutters will help to install.


Installation Steps

1

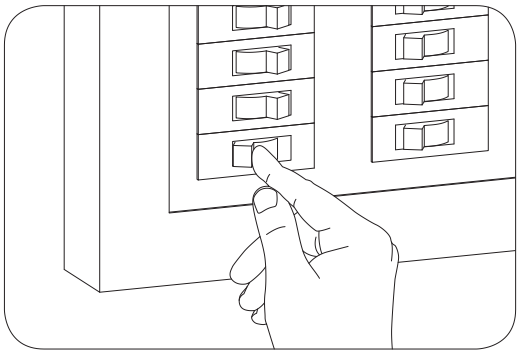

Turn off power to appropriate circuit at the breaker box.


2

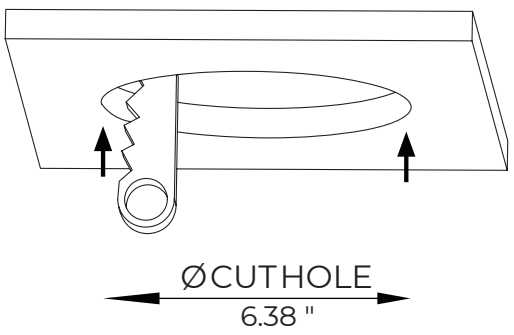

Identify location for installation and cut hole in ceiling per the following table:

3


L (Black) N (White) GND (Green wire)

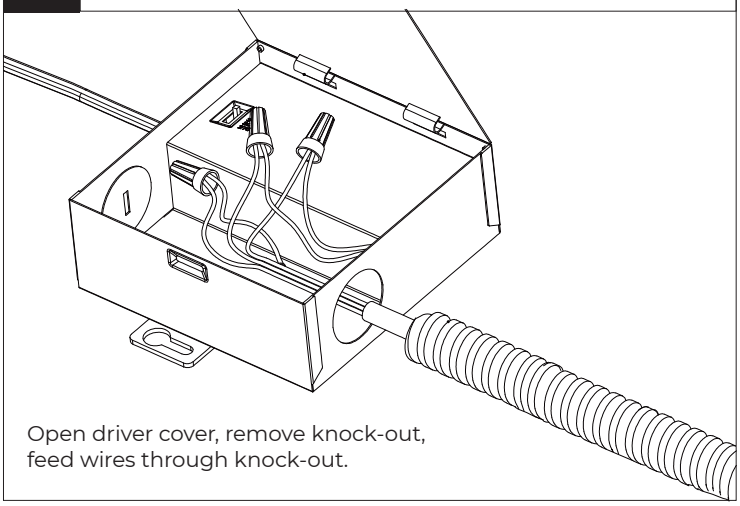

Open driver cover, remove knock-out,
feed wires through knock-out.


4

The CCT of Down Light Mode
2700K/3000K/3500K/4000K/5000K

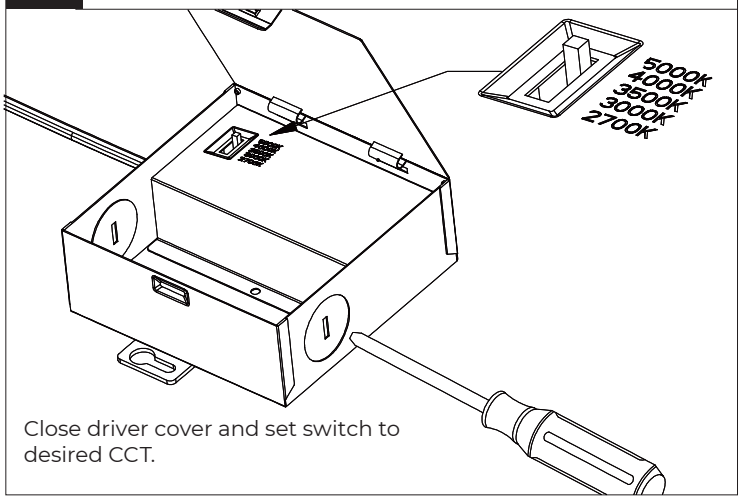


Close driver cover and set switch to
desired CCT.

5

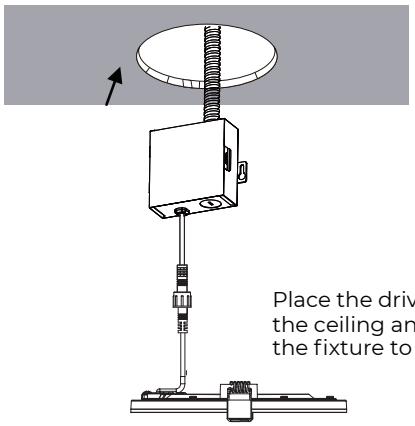


Place the driver box into
the ceiling and connect
the fixture to driver box.

6

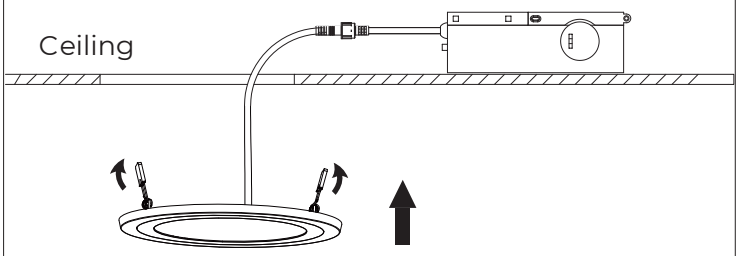

Lifting both retention clips upward, push until
the trim sits flush against the ceiling.


7

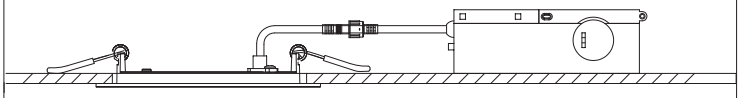

Turn on power and ensure fixture is lit.

8

How to Switch Mode

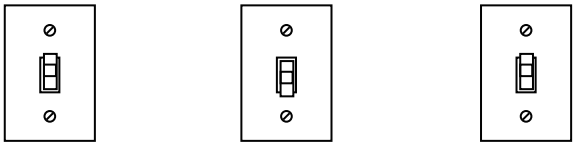

ON	OFF	ON
Turn on downlight mode	Turn on downlight mode	Turn on Night light mode

Easy switch: Flip wall switch ON/OFF/ON within 1-5 seconds to change the light mode.

Note: The light will return on Downlight Mode by default after being turned off for over 8 seconds.

NOTE: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation,operation or maintenance.

DeerTalk

Easy Answers

deertalkservice@outlook.com