

MEASURING TIP:

BASEBOARD REGISTER

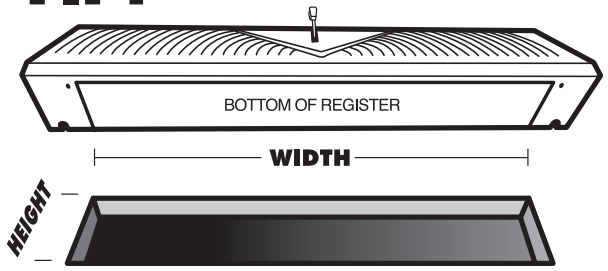


1 MEASURE FLOOR DUCT OPENING.

IF FLOOR OPENING MEASURES:	FLOOR OPENING	THEN CHOOSE	MODEL
	12" width x **2.5**" height		E115
	15" width x **2.5**" height		E118
	21" width x **2.5**" height		E120
	21" width x **2.5**" height		E121

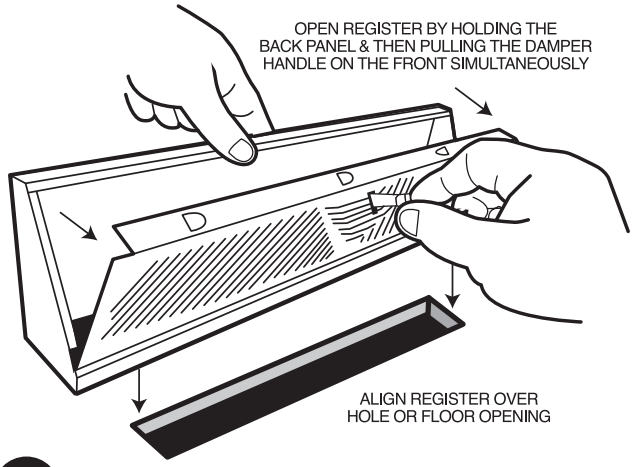

2 OPEN FACE OF THE UNIT AND ALIGN WITH FLOOR OPENING.

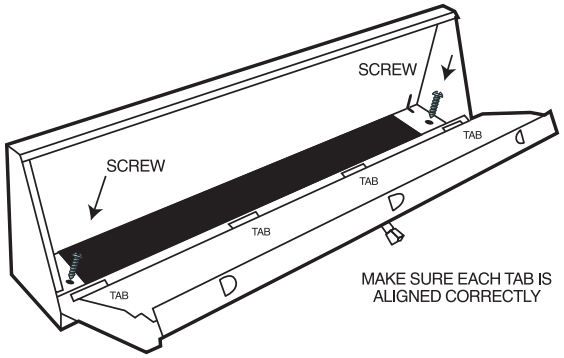

3 SECURE REGISTER WITH SUPPLIED SCREWS (2) & ALIGN ALL TABS.



4 CLOSE BASEBOARD REGISTER & ADJUST DAMPER ACCORDINGLY

WALL REGISTER INSTALLATION INSTRUCTIONS:

STEP ONE:

Determine the correct register size by measuring the opening in the wall.
(Example: An opening that measures 10" x 06" will require a register labeled 10" x 06")

STEP TWO:

Open the register package and discard the cardboard and wrapping paper.
Remember to keep the screws that are in a small plastic package.

STEP THREE:

Simply place the wall register on the wall and use a screwdriver to screw in the screws through the screw holes.

STEP FOUR:

Locate the register adjustment device on the face of the register and move the damper to the "open" or "closed" position as desired.