
Item #1009 517 432
Model #LR431U-7.2X5IR3-10M-1024

USE AND CARE GUIDE

32.8 ft RGB COLOR CHANGING STRIP LIGHT

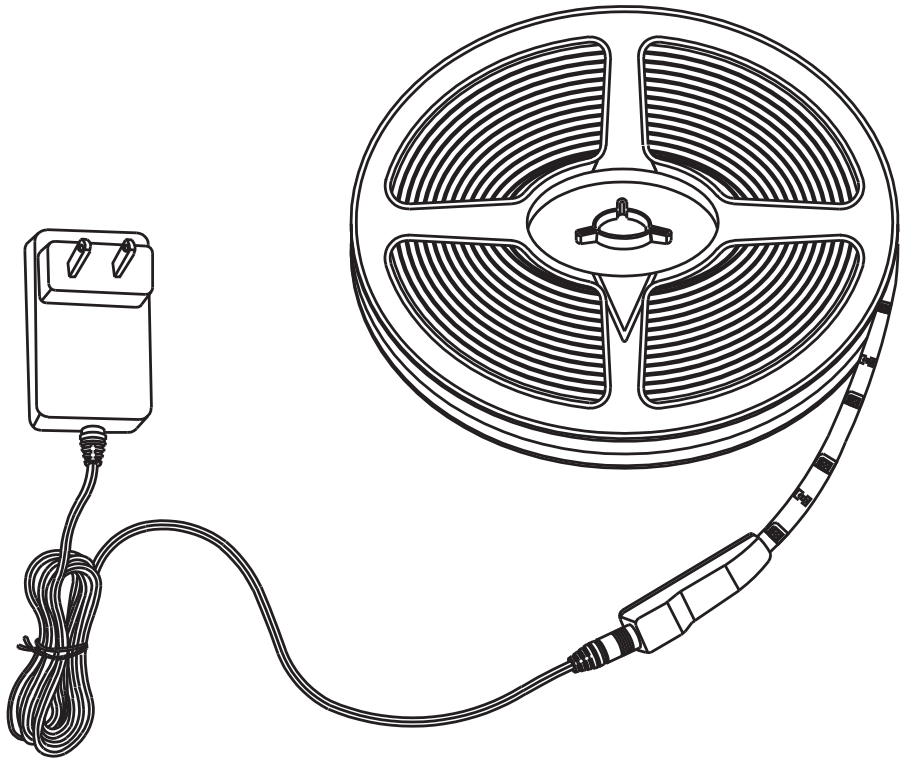

Questions, problems, missing parts? Before returning to the store, call EcoSmart Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Table of Contents

Table Of Contents..... 2
Safety Information..... 2
Warranty..... 4
Pre-Installation..... 5
Installation..... 6
Operation..... 8
Care and Cleaning..... 9

Safety Information

PRECAUTIONS

Read and understand this entire manual before you attempt to install or operate this product.

- □ This strip light is intended for indoor use only.
- □ This strip light is not intended for commercial use.
- □ Do not expose the strip light to excessive heat or moisture.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Do not damage or crimp the cable. Do not allow the cable to come into contact with sharp objects.



CAUTION: Do not look directly at the strip light when it is illuminated. Eye damage could occur.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- □ Reorient or relocate the receiving antenna.

Safety Information (continued)

□ Increase the separation between the equipment and receiver.

□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

□ Consult the dealer or an experienced radio/TV technician for help.

NOTICE: This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

□ this device may not cause harmful interference, and

□ this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party-U.S. Contact Information
Elecwish Inc/Add: 4225 Etiwandaavenue, Suite 1 mira loma, California 91752, USA/Elecwish.com

Please keep observed safety notes before use:
Class 2 POWER SUPPLY
Model: S024D2401000U
Input: 100-240V~, 50/60 Hz, Max.600mA
Output: 24Vdc, 1000mA
"IMPORTANT SAFETY INSTRUCTIONS--SAVE THESE INSTRUCTIONS" AND "DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS"
To comply with the published safety standards, the following must be considered when using this power supply.
1. For connection to a supply not in the U.S.A, use an attachment plug adapter of the proper configuration for the power outlet, if needed.
2. Please read the instructions Before using the power supply
3. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack if experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure thy do not play with the unit.
4. For indoor use only.
5. Please Don't use the charger in the damp environment and High temperature.
6. Don't operate unit with damaged plug.

Safety Information (continued)

7. Don't disassemble power supply. Disassembly may result in a risk of electric shock or fire.
8. To reduce the risk of electric shock, unplug the charger from the outlet when not in use.
9. Don't operate unit if it has been subjected to damage in any way.


Warranty

The manufacturer warrants this fixture to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-800-910-7164 or visit www.HomeDepot.com/EcoSmart.

Pre-Installation

PACKAGE CONTENTS

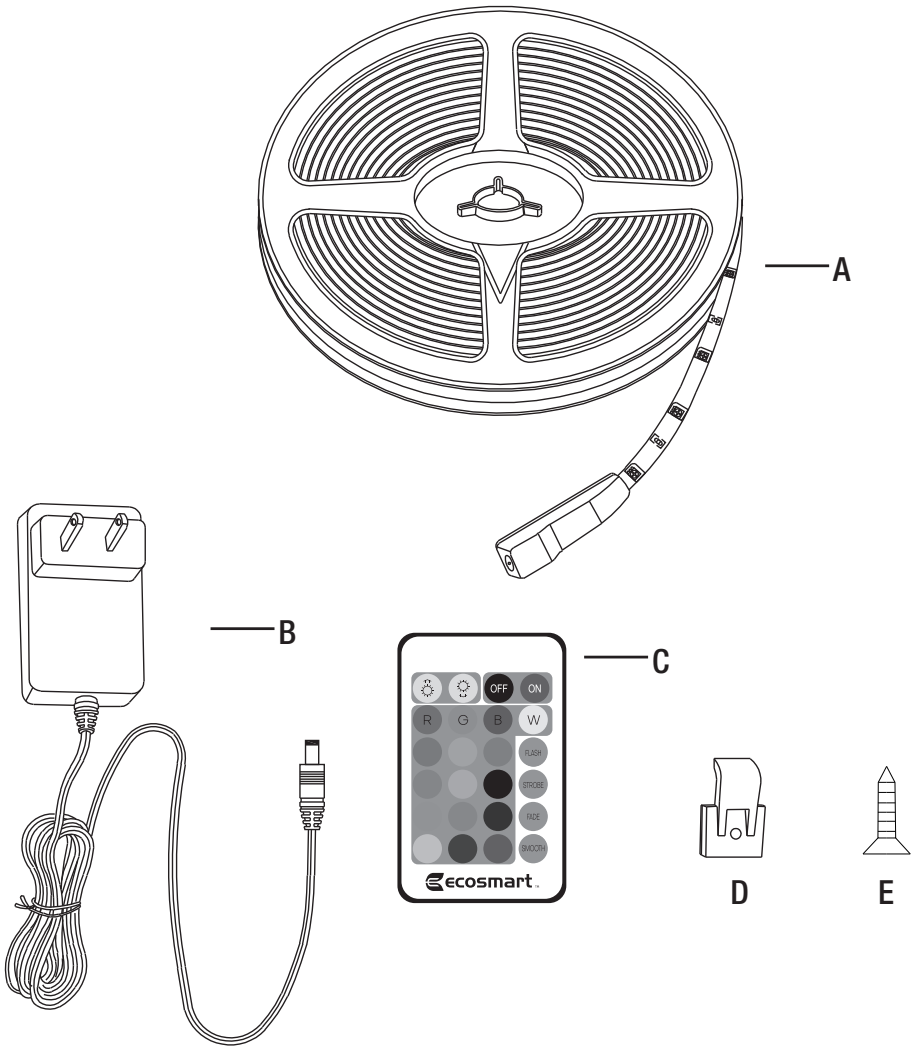


Part	Description	Quantity
A	Strip light	1
B	Plug-in power supply	1
C	Remote control	1
D	Mounting clips	11
E	Screws	11

Installation


1 Prepare the strip light

□ (optional) Shorten the strip light (A) to the desired length by cutting along the black lines with the scissor mark.

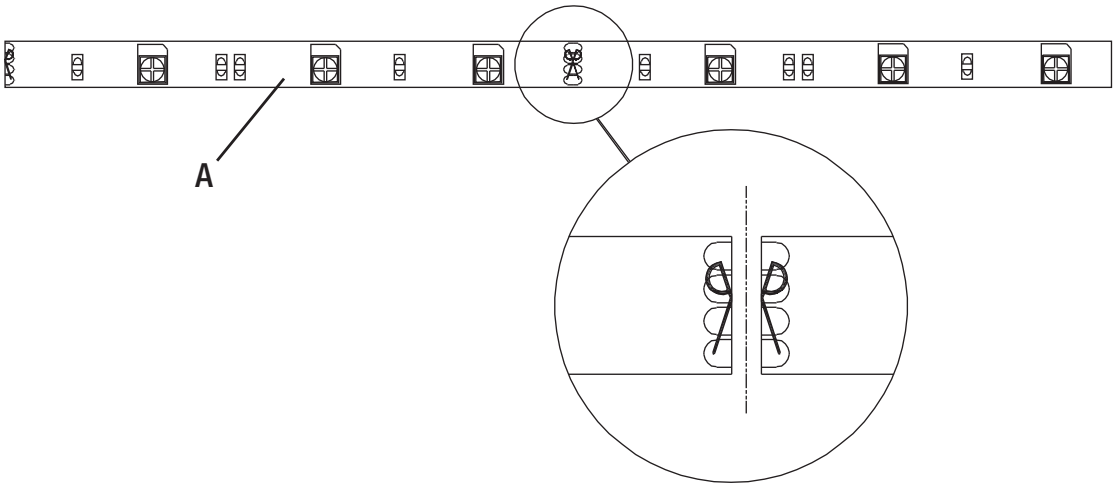


2 Install the strip light

□ Ensure that the mounting location is even, clean, and dry.
□ Remove the protective film (1) from the back of the strip light (A).
□ Press the strip light (A) to the mounting surface and hold in place for a few seconds.

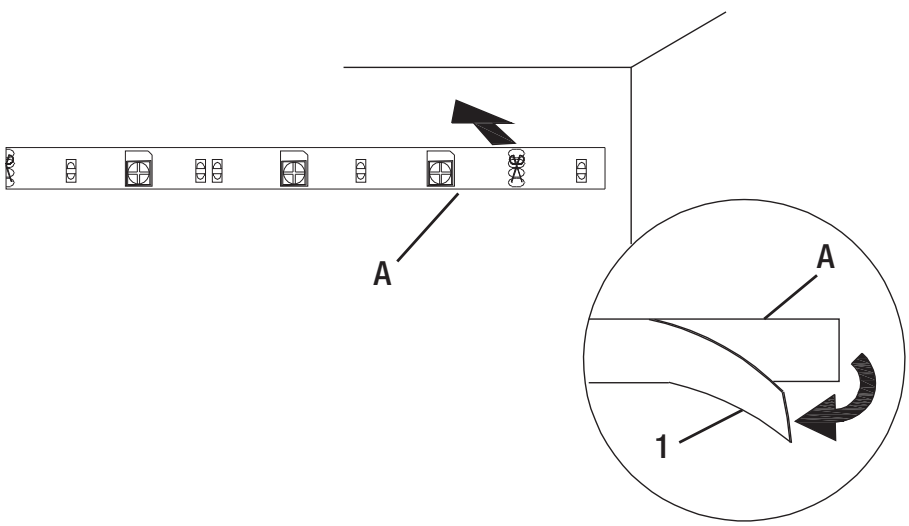

3 Connect the strip light

- ☐ Connect the power supply(B) and the strip light(A)
- ☐ Use the Mounting clips(D) and screws(E) to further secure the strip light
- ☐ Plug the power supply(B) into the power source

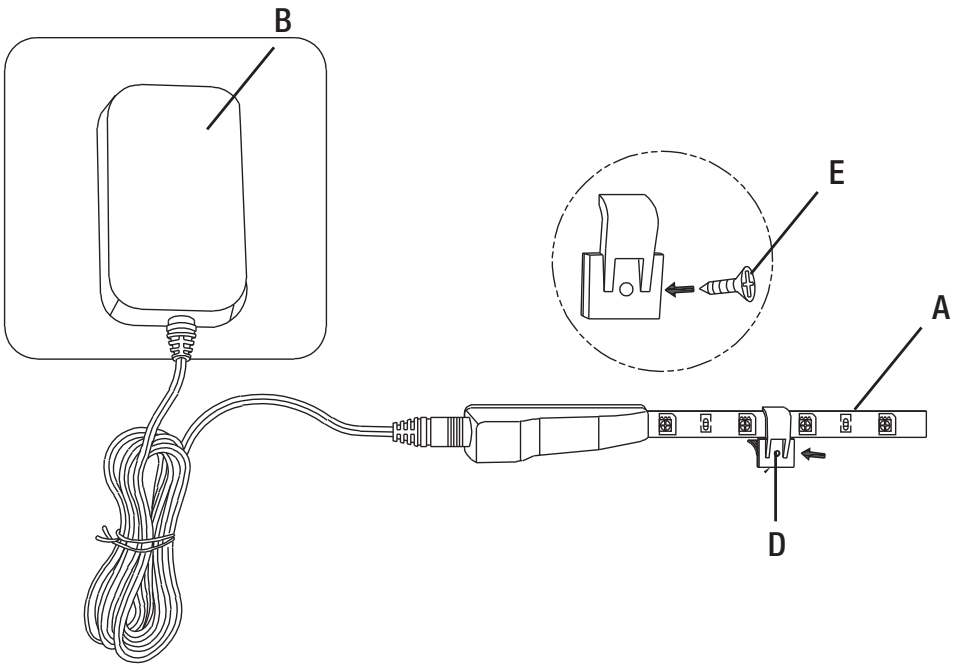

NOTE: Use the screw to secure the installation and avoid strip light falling down when adhesive lose viscosity


Operation

1 Remote Operation


CAUTION: The remote control included utilizes a 3V CR2025 battery; Do not dispose of batteries in fire as they may explode or leak. Please dispose of used batteries immediately and safely. Only replace with the same battery type. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.

WARNING: KEEP BATTERIES OUT OF THE REACH OF CHILDREN! BATTERIES ARE NOT A TOY! If swallowed, they can cause severe injury or death within 2 hours. In case of swallowing, call emergency services immediately. Tell others of the risks associated with button batteries to keep kids safe.

- □ Remove the plastic tab from the back of the handheld remote (C).
- □ Ensure the battery contacts are clean prior to battery installation.
- □ Remove batteries from equipment when not in use for an extended period to time.
- □ Aim the remote directly at the controller.

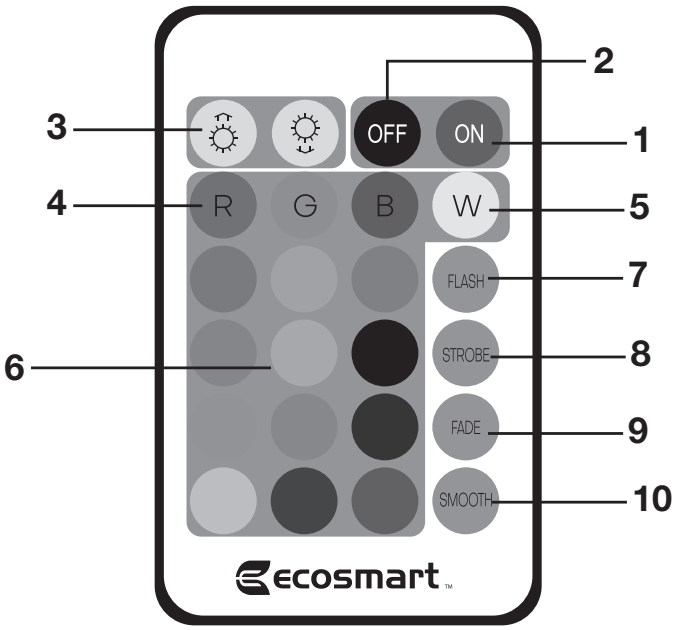

Operation(continued)

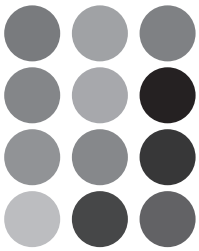	Button	Description
1		ON: Press to turn on the light
2		OFF: Press to turn off the light
3		Adjustable speed and brightness: Increase or decrease the 10-level speed of all dynamic modes and the brightness of all static colors
4		Static (solid) color: red, green, blue
5		Static (solid) color: white
6		Static(solid) color: 12 mixed colors
7		3 color flash
8		7 color strobe
9		3 color fade
10		7 color smooth

Care and Cleaning

- To clean the light strip, use a clean, dry, or slightly damp cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives, as damage to the strip light may occur.



Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service
8 a.m.-7 p.m., EST, Monday-Friday, 9 a.m.-6p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Retain this manual for future use.