




INSIDE MOUNT

Place the pegs

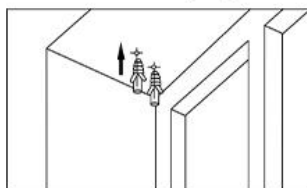


peg free for wooden window frames


Place the brackets

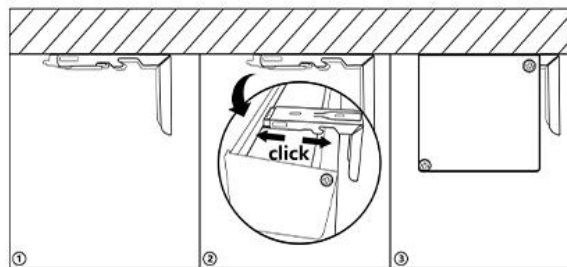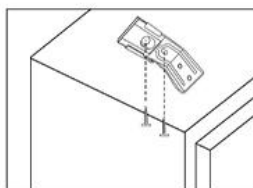

Hook the rail onto the bottom of the bracket and rotate it until the back of the rail securely snaps into place

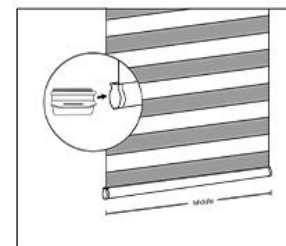


Slide in the handle from the side to the middle.

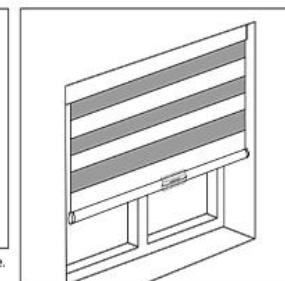



OUTSIDE MOUNT

Place the pegs

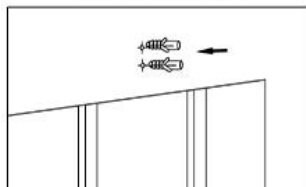


peg free for wooden window frames

Place the brackets

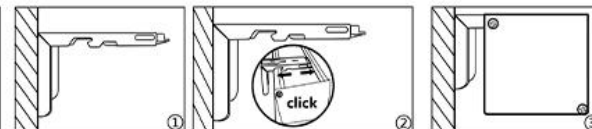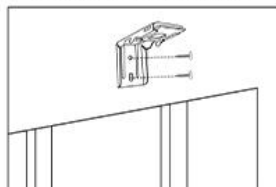

Hook the rail onto the bottom of the bracket and rotate it until the back of the rail securely snaps into place

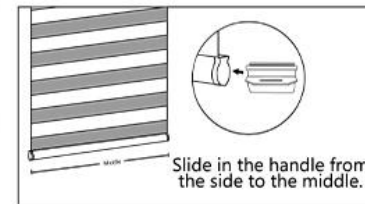

Slide in the handle from the side to the middle.

