
ELEGANT
FURNITURE & LIGHTING ™


Collection:Thompson
Installation manual for:

OD371W10BK W6" H10" E4" L1

Installation instructions:

1. Install E26 light source.(Bulbs not supplied) .Bulb will be put inside to glass from width side.
2. Put glass(P11)into body(P4) and use clips(P6) with screw(P7) to fix.
3. Use screw(P) to fix lamp with wall mounted.
4. Black wire from ceiling(junction box) attaches to "L"wire from the fixture
5. White wire from ceiling(junction box) attaches to "N"wire from the fixture
6. "E" wire from the ceiling attaches to "E" wire from the fixture.
7. Install the lamp body to the mounting bracket by screws(P9)

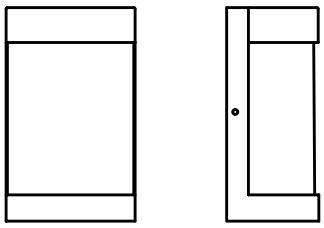

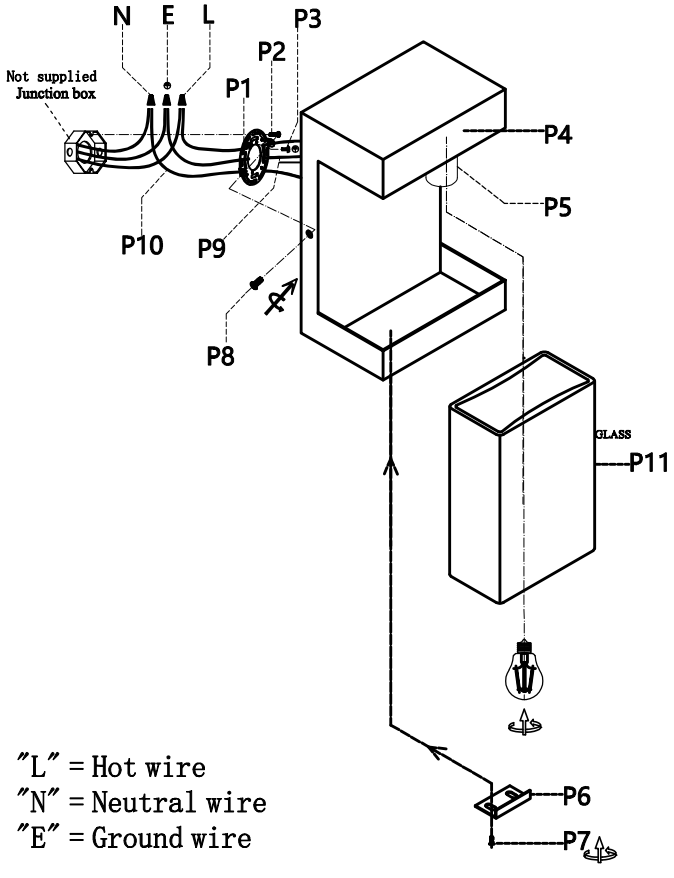

"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire

Part Number	Part	Picture	Description	Qty
MB12W01	P1		Mounting bracket Ø3.94	1
	P2		Mounting bracket screw M4	2
	P3		Screw M4	1
P-OD371W10BK-1	P4		245x148x105mm Body	1
	P5		E26 Holder	1
	P6		L50*W25*H10mm Clips	1
	P7		Screw M4	2
	P8		Screw M4	2
	P9		UL18#Ground wire,L9.8"	1
	P10		UL18#,L12"Black+White	1
GS12L35	P11		L140xW75xH210mm Glass	1