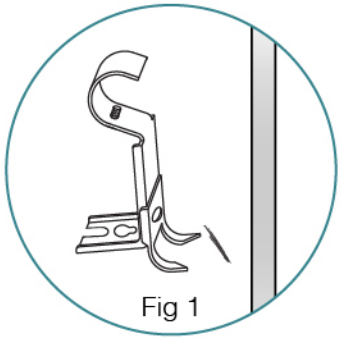
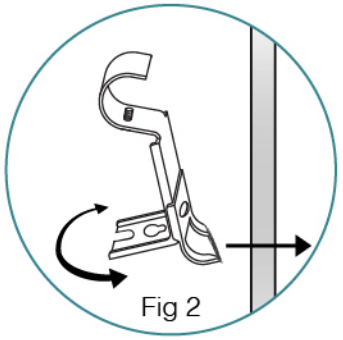
NO-TOOL INSTALLATION GUIDE

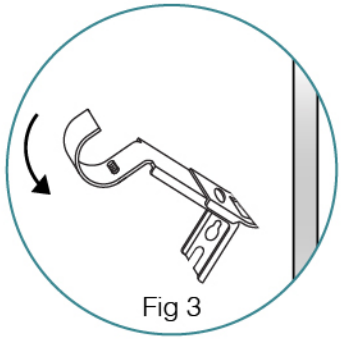
For Hollow Wall


Fig 1

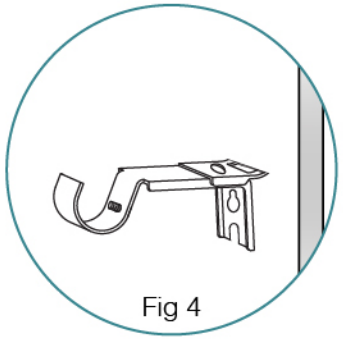
- Hold the bracket in a vertical position, with the prongs pointed straight into the wall at the marked location.


Fig 2


- Gently push the bracket into the wall while applying a slight rocking motion.


Fig 3


- As the prongs penetrate the wall, begin dropping the bracket down into position.


Fig 4

- Bracket should be in horizontal mounted position with backplate flush against wall once prongs are fully penetrated.

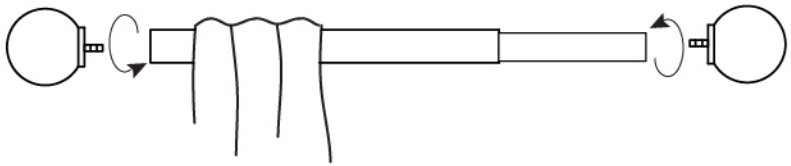

- Feed curtain panels onto rods.
- Attach finials on rods.
- Set assembled rods into brackets.

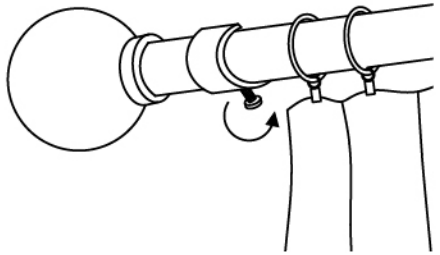


- Hand-tighten thumb screw.


SNUGSET®

Patent Pending


SCREW-IN INSTALLATION GUIDE

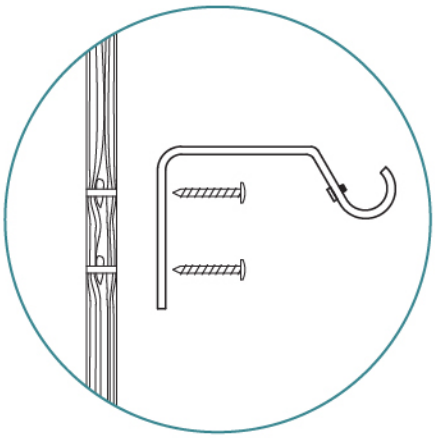


Wood Walls
**No wall anchors are needed*

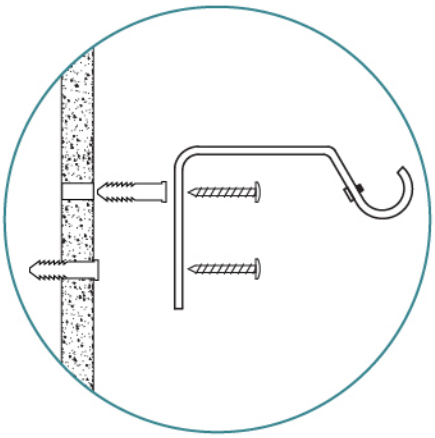


Hollow walls with
push-in anchors

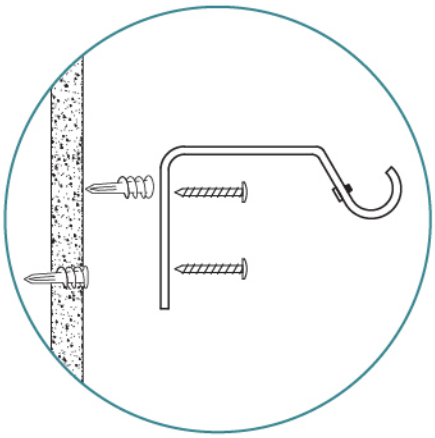

Hollow walls with
screw-in anchors

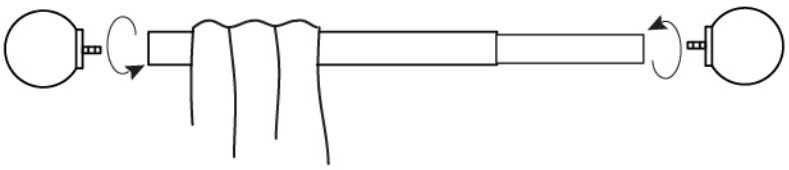

- Feed curtain panels onto rods.
- Attach finials on rods.
- Set assembled rods into brackets.

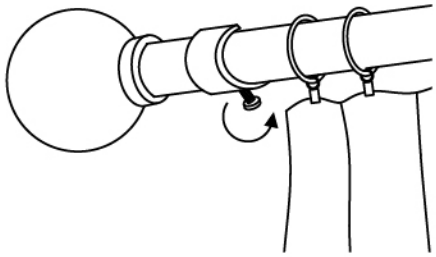

- Hand-tighten thumb screw.

SNUGSET®