


Waterproof Curb Installation Guide

STEP 1

If necessary, cut the waterproof curb to length using a razor blade knife. Apply thin set mortar to the floor and to the edge of the shower base and walls using a 1/4" x 3/8" square or U-notched trowel.

STEP 2

Press the curb firmly into place. Check the underside of the curb to ensure that full coverage and support is achieved. *Note: When setting tile on the curb, the surface must be sloped towards the shower drain.*

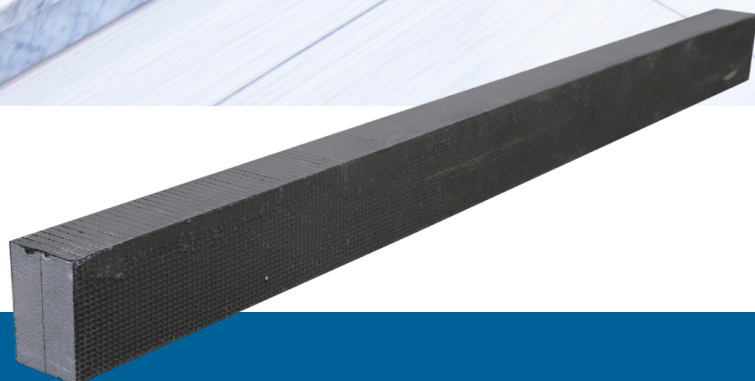

MADE IN EGYPT / HECHO EN EGIPTO
DISTRIBUTED BY: / DISTRIBUIDO POR:

THE W.W. HENRY COMPANY
400 ARDEX PARK DRIVE
ALQUIPPA, PA 15001
WWW.WWHENRY.COM