

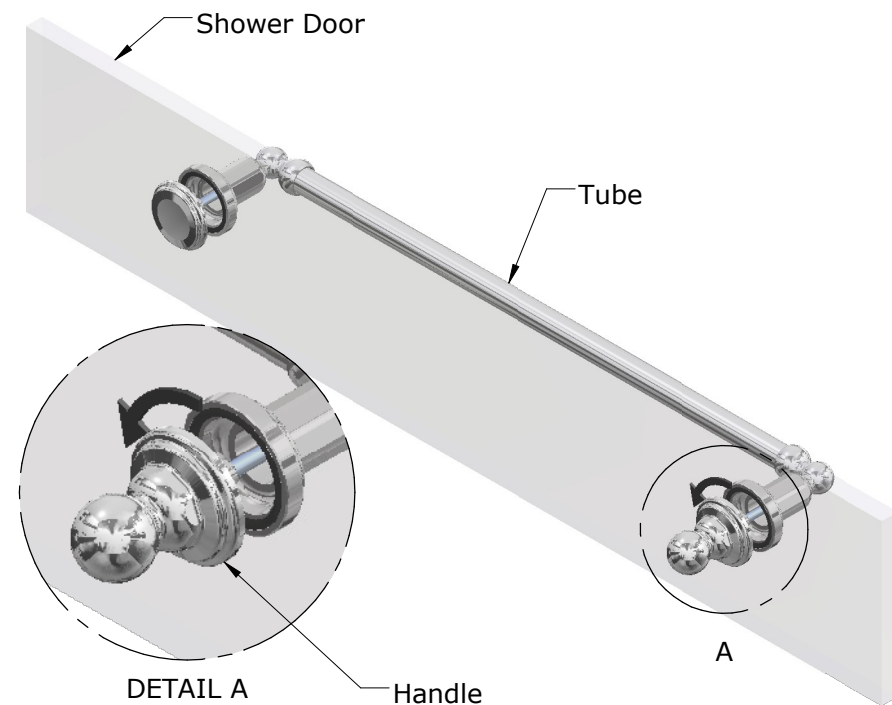


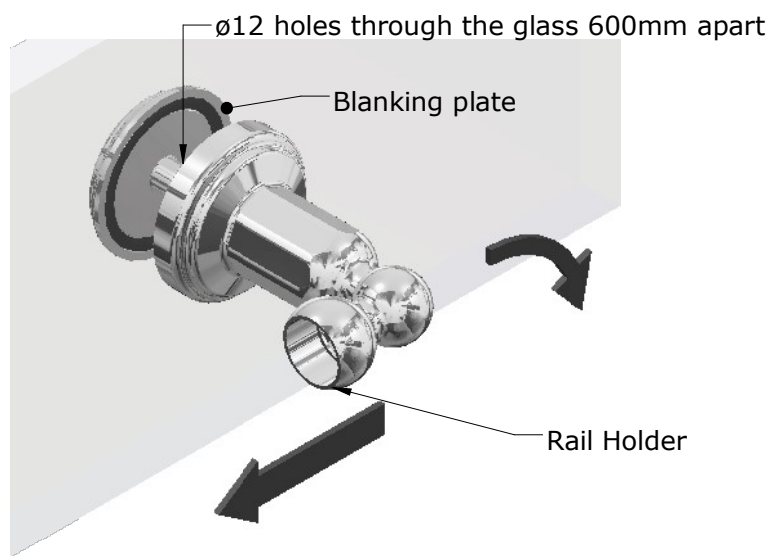

1. Through the holes in the glass screw the Rail holder and blanking plate together until they become tight on the glass (the orings will allow some compression on the glass), making sure the tube holder is horizontal.
2. Place the tube into the holder.
3. Assemble the other rail holder to the tube, screw the handle onto the shank until the whole frame is tight.

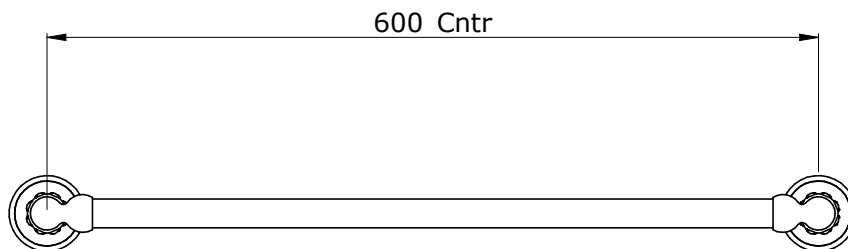

PERRIN & ROWE
MAYFAIR LONDON

Product Code: U.6913
Description: Install Guide
Issue: A