


McBowery

HARDWARE

Installation Manual

McBowery.com • info@mcbowery.com


Privacy/Passage Contents

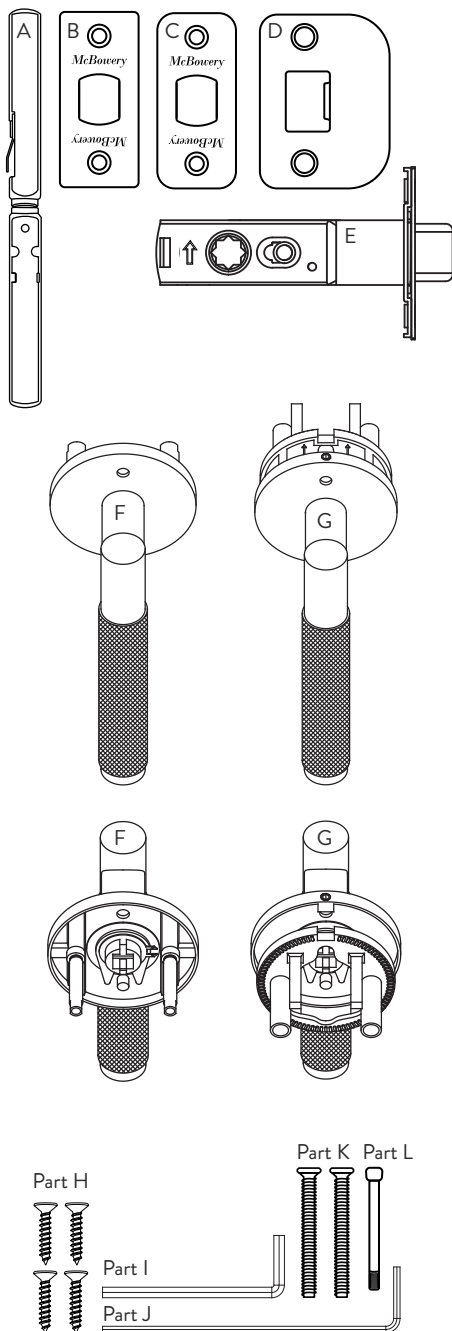

1. Dimensions

Confirm the following dimensions

- Diameter of hole in door: $2\frac{3}{8}$ " or $2\frac{3}{4}$ "
- Back-set of hole: $2\frac{3}{8}$ "
- Diameter of hole at edge of door: 1"
- Door thickness: $1\frac{3}{8}$ " or $1\frac{3}{4}$ "
- Door edge chiseled to $\frac{1}{8}$ " depth

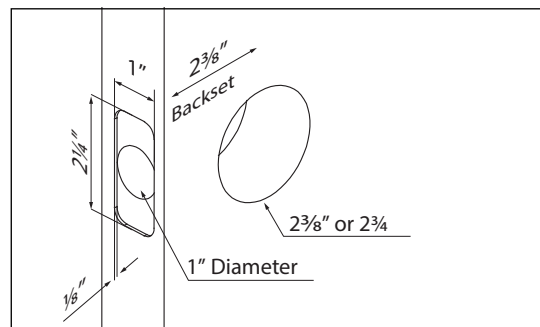


2. Install Latch and Spindle

A. Place cover of your choice over latch (Part B or C) and twist into place.

B. Insert latch* (Part E) into the edge hole of the door, arrow facing upwards. Secure with two small screws (Part H).

C. Insert spindle (Part A) through door hole and latch. Notice the small bump out on one side of the spindle, insert that side first.


*70 mm latch available for purchase - info@mcbowery.com

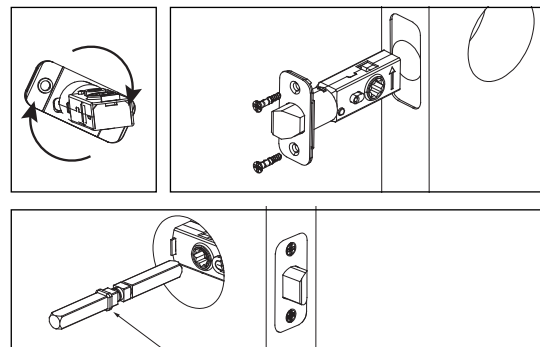

3. Install Interior plate and Exterior Trim

A. Place the plate over the spindle on the EXTERIOR side of the door, ensuring screw holes are on top and bottom.


B. Insert INTERIOR trim (Part F) over spindle and into the plate.

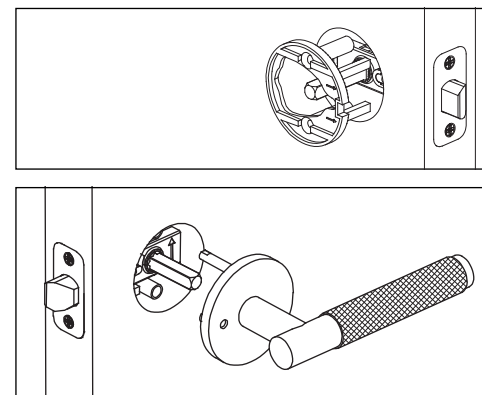

4. Install Interior Trim

A. Use two large screws (Part K) to secure the plate.


B. Place EXTERIOR trim (Part G) over the plate.

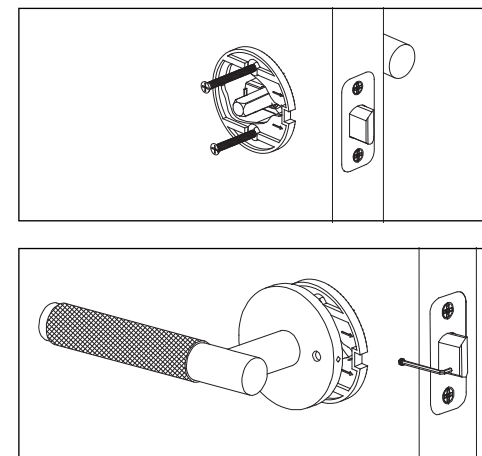

5. Secure Interior Trim and Install Privacy Pin

A. Use smaller allen key (Part I) to tighten the trim. Use larger allen key (Part J) to tighten neck of trim.

B. Privacy only: Insert privacy pin (Part L) into the small hole on the trim and twist into place.

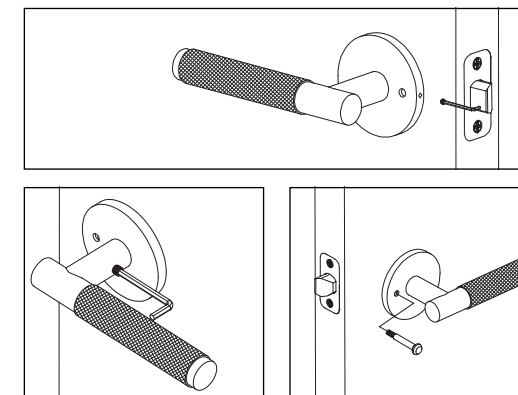


6. Door Jam Prep



Confirm the following dimensions

- Hole diameter: 1"
- Door jam width: $1\frac{3}{8}$ "
- Door jam length: $2\frac{1}{4}$ "
- Chisel the door to $\frac{1}{8}$ " depth.

Place door strike (Part D) over door jam and use two small size screws (Part H) to install.

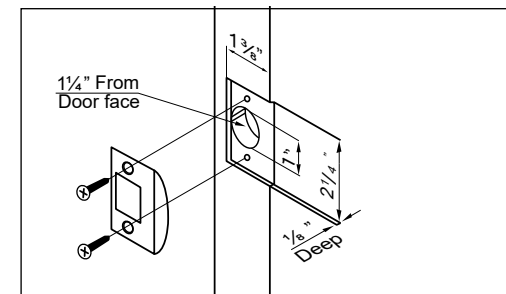

Dummy Contents

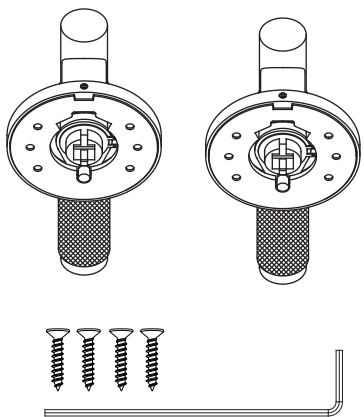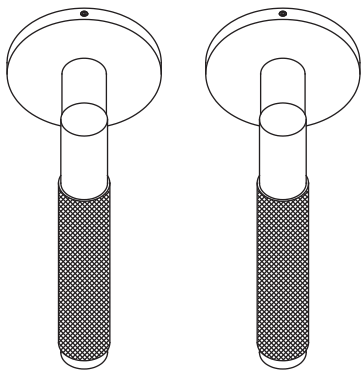


1. Placement

Standard measurements:

A. Door handle should be a minimum of 34" off the floor and a maximum of 48" above the floor. Standard practice is to install the handle about 36" off the floor.




B. Standard back-set away from the door is $2\frac{3}{8}$ " or $2\frac{1}{4}$ ".

(No hole necessary.
Can be drilled directly
into door.)

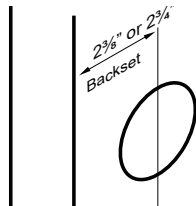

2. Install Dummy

Use two screws and a drill to secure the base to the door. Repeat on second door if relevant. Insert trim over plate and secure with allen key.

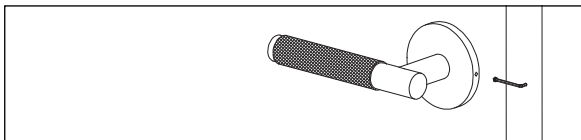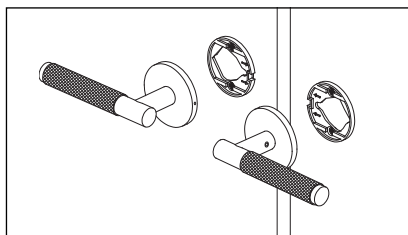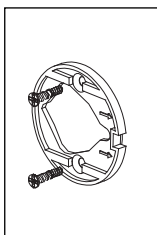

General Notes

- A. Door and door frame must be dry from any paint prior to installation.
- B. Instruction photos show right hand installation. Instructions remain the same for left handed doors, simply apply the same process in the reverse.