
Installation Instructions

SINK DRAINS


Lavatory

McGuire Part# 155A Series

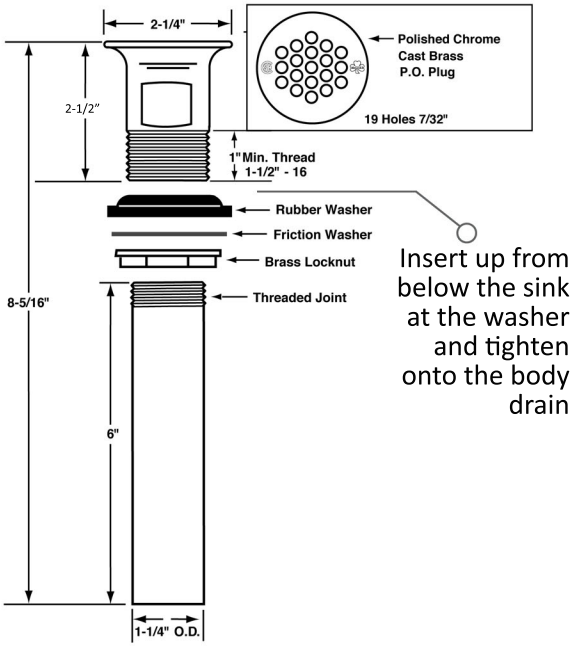


Insert up from below the sink at the washer and tighten onto the body drain


McGuire Part# PRODRAIN, PRODRAIN2

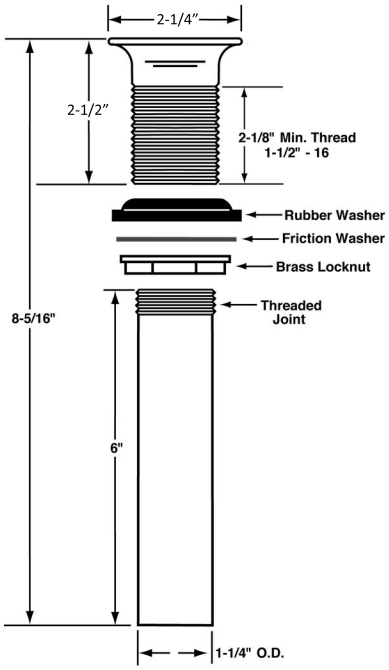


McGuire Part# 155

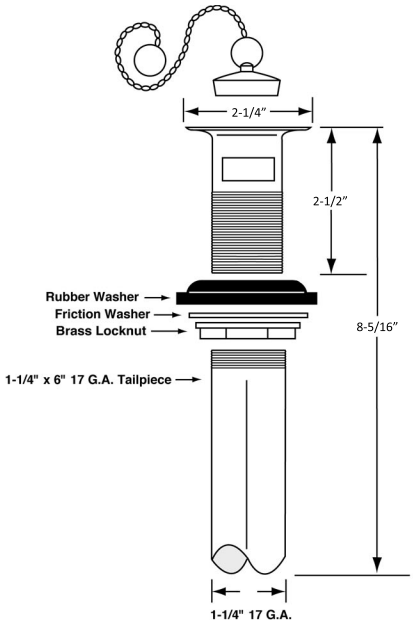

McGuire Part# 155WC, 155WCECO, PRODRAINWC

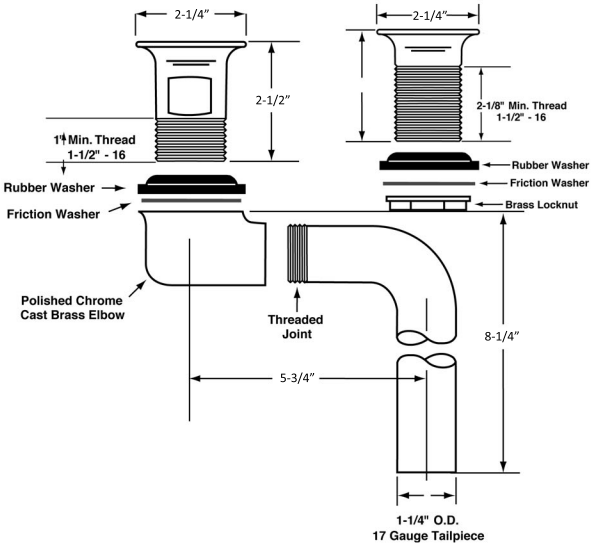

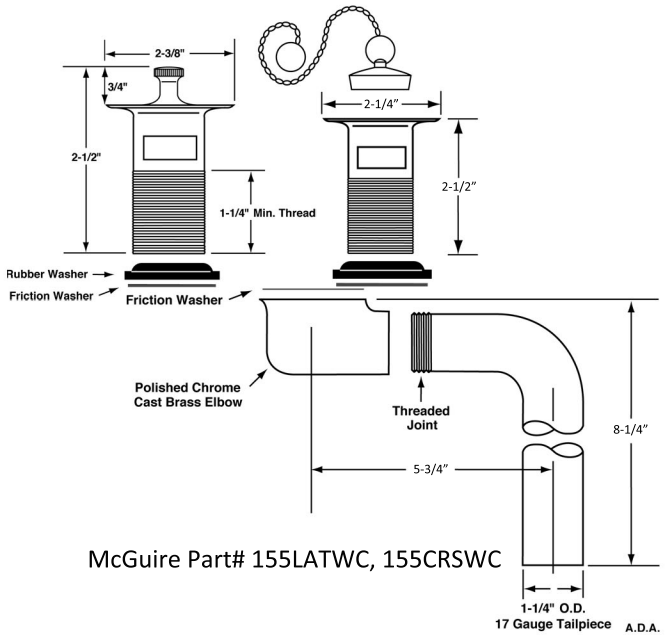

McGuire Part# 155LATWC, 155CRSWC

Instructions

1. Apply commercial plumber's putty or sealant to underside of strainer body or top of the sink drain flange area.
2. Assemble and tighten all components securely in order of components above.
3. Check for leaks

ASME A112.18.2 / CSA B125.2

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

©2020 McGuire

customerservice@mcguiremfg.com
mcguiremfg.com