

GLACIER BAY


Use and Care Guide
Round/Oval Shaped Mirror

TOOLS REQUIRED


Safety Glasses


Tape Measure



Pencil

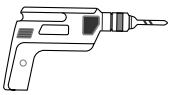
Power Drill


Hammer



Phillips Head Screwdriver

STEP 1:

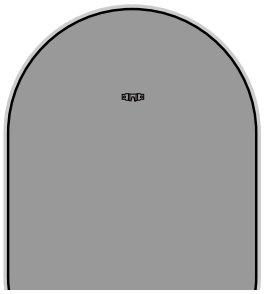


Check the product appearance for whether good condition.

STEP 2:

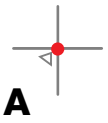

Confirm the hanging height and mark it as point A on the wall. The hanging height depends on your preferences.


STEP 3:

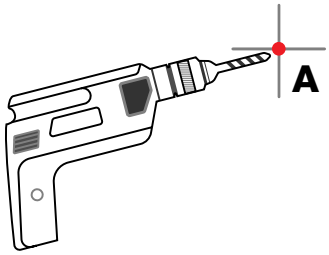

If using drywall anchors, use a power drill (follow anchormanufacturer instructions) to pre-drill pilot hole in point A.


DANGER: Ensure that you are not drilling into utility lines within the wall.

STEP 4:

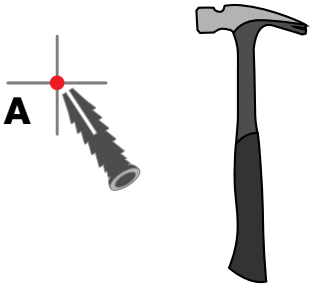


Lightly tap the drywall anchors into the pilot hole with a hammer until anchor head is flush with the wall.

STEP 5:

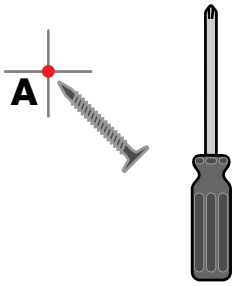

Use a phillips head screwdriver to insert the screws into the stud or drywall anchors.

STEP 6:

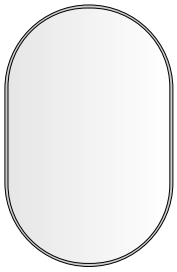

Leave a gap between the screw head and wall to catch the frame mounting hardware. Insert frame mounting hardware onto the screws and enjoy.

⚠ WARNING

- Read and follow instructions carefully.
- Keep small parts away from children.
- Consult a qualified professional if you are unsure about your wall type, whether utility lines are behind your wall or if you're unsure what mounting hardware to use.

THANK YOU

We appreciate the trust and confidence you have placed in Glacier Bay. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.