


Waterproof Curb Installation Guide

STEP 1

If necessary, cut the waterproof curb to length using a razor blade knife. Apply thin set mortar to the floor and to the edge of the shower base and walls using a 1/4" x 3/8" square or U-notched trowel.

STEP 2

Press the curb firmly into place. Check the underside of the curb to ensure that full coverage and support is achieved. *Note: When setting tile on the curb, the surface must be sloped towards the shower drain.*

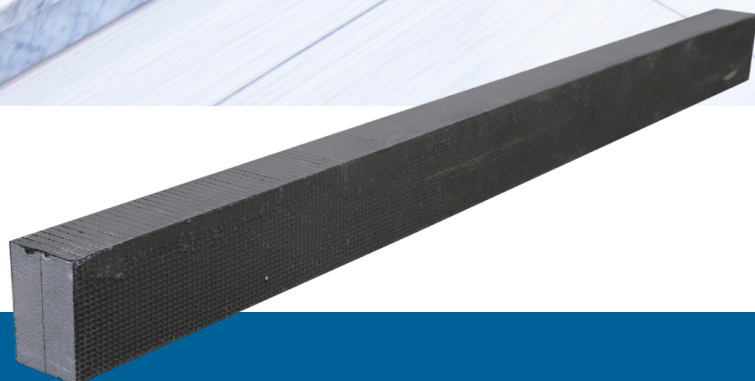

MADE IN USA / HECHO EN EE.UU.
DISTRIBUTED BY: / DISTRIBUIDO POR:

HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339
HOMEDEPOT.COM