

Installation

1) Measure and mark centerlines for mounting bracket installation using dimensions.

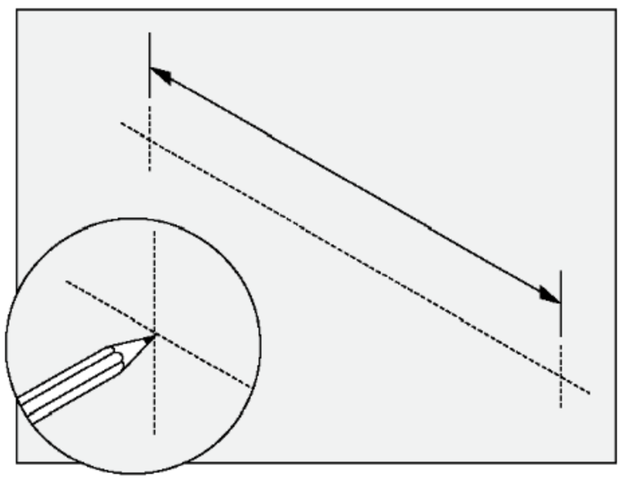


Note: TB-18, TB-24 and TP only. Make sure both centerline marks are level.

2a) **Dry Wall Option:** Place mounting brackets into desired position. Using brackets as a guide, carefully drill 5/16" holes into wall.

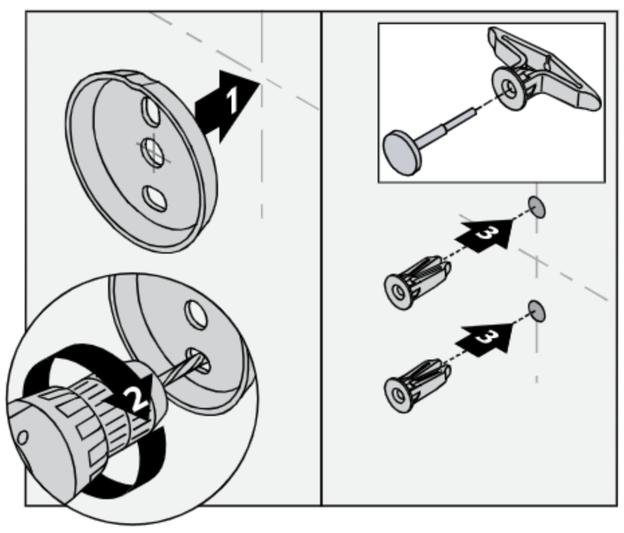


Note: For plaster walls 1/2" thick or less, insert toggle tool into toggle anchor to secure behind wall prior to installing accessory trim.


2b) **Stud Option:** Place mounting brackets into desired position.

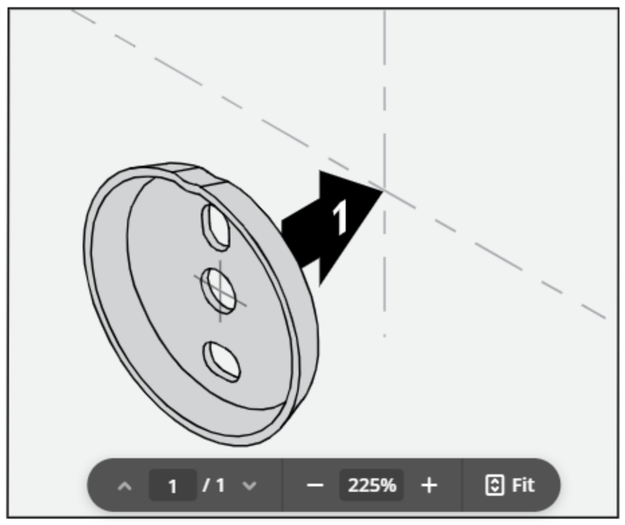


3) With mounting brackets in position, secure to wall using screws.

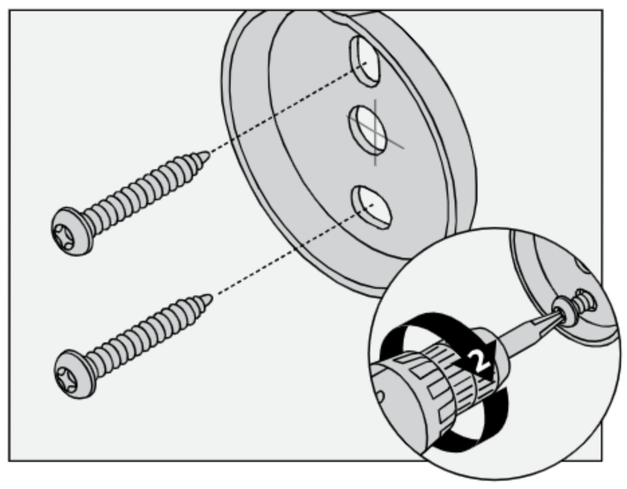

4) Hang top of accessory on mounting bracket. Lower into position.

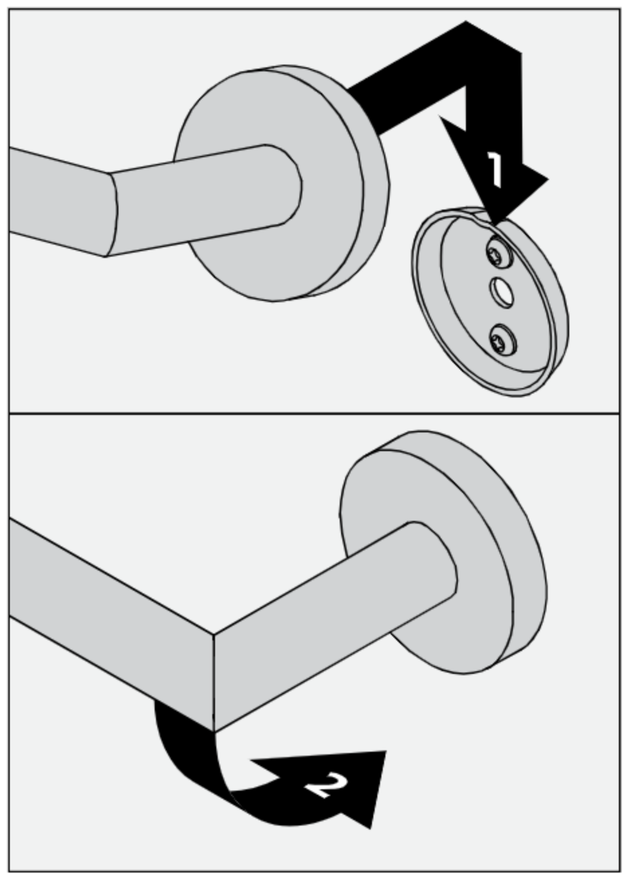

5) Secure with set screw.

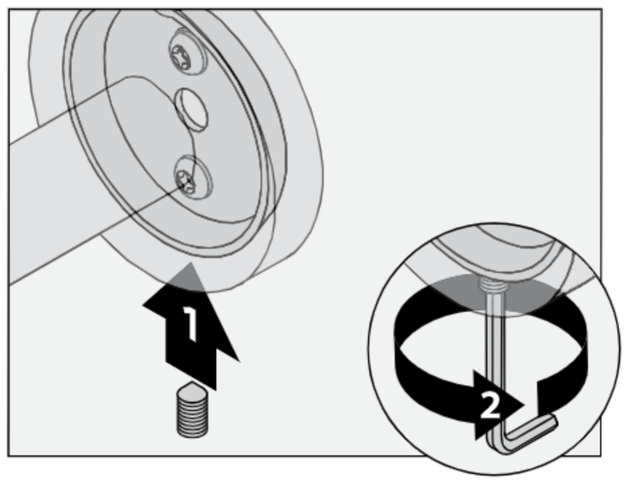

Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.

Symmons Industries, Inc. ▪ 31 Brooks Drive ▪ Braintree, MA 02184 ▪ Phone: (800) 796-6667 ▪ Fax: (800) 961-9621
Copyright © 2023 Symmons Industries, Inc. ▪ www.symmons.com ▪ gethelp@symmons.com ▪ ZV-3195 REV C ▪ 120123